



## INSTALLATION INSTRUCTION – INSTRUCCIONES DE INSTALACIÓN ENTRY DOOR WROUGHT IRON GRILLE REJA DE HIERRO FORJADO PARA PUERTA DE ENTRADA

### These instructions apply to:

Entry Door 4/2008-Current

### Parts Required:

- Wrought Iron grille package (Includes: grille, hinge pins and Allen wrench)

### Tools Required:

- Hammer
- Small block of wood

*Note: Wrought Iron grilles may only be installed on door panels provided with factory installed brackets on the door panel.*

# 1 Installing Wrought Iron Grille

- Make sure the set screws are backed out so they do not interfere with the pin.
- Locate the top of the grille (The fixed pin is at the top of the grille.) Open the packet of Hinge Pins
- Hold the grille up to the panel and install the fixed pin into the Top Left bracket on the panel.



- Align the right top hinge and insert the hinge pin. For slight misalignment between the bracket and the barrel on the grille, the pin can be tapped in place to overcome slight interference. Place a wood block against the pin to avoid damage to the finish.



- Install the pins into lower hinges and tap in place if necessary.
- When all hinge pins are installed, tighten set screws in the brackets with provided Allen wrench.

*Note: If Needed, Brackets can be adjusted slightly by loosening the mounting screws, then reposition the bracket and retighten the mounting screws.*




## 2 Opening Iron Grille to Clean Glass

*Note: The grille design allows access for glass cleaning by opening the grille without fully removing the grille. Care should be taken when swinging the grille open or closed to avoid product damage.*

**Caution: DO NOT hang on the grille in the open or closed position. DO NOT operate the door panel if the grille is not fully secured to all four (4) brackets. Doing so may cause product damage or personal injury.**

**Caution: DO NOT leave the grille unattended when in the open position.**

- A. Loosen set screws on all four hinges.
- B. Remove the top and bottom hinge pin on the Right Side of the grille only (as viewed from the exterior).
- C. With the two pins removed, swing the grille open to access to the glass.
- D. After glass is cleaned, close and reposition the grille, install the pins and tighten the set screws.

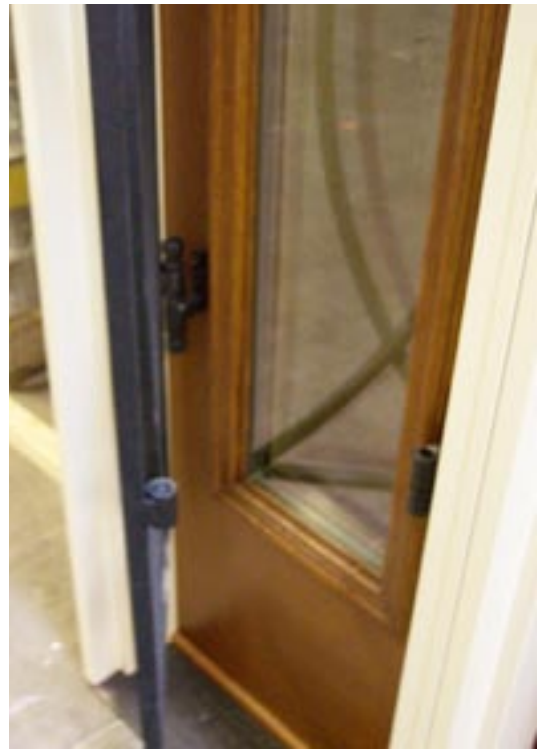

### **Maintenance of Wrought Iron Grilles:**

If touch-up is necessary; Universal Flat Black touch-up paint is available at most auto parts stores. Clean the area to be touched up and apply two coats of paint.