INTEGRATED SENSOR TROUBLESHOOTING GUIDE FOR HINGED DOORS

Table Of Contents

Pella Insynctive® Bridge 2
- About the Bridge 2
- Setting Up Sensors with the Bridge 2
- Operation 2
- Troubleshooting 3
- App Troubleshooting 4

Alula® Universal Translator - Model RE524XP 5
- About the Translator 5
- Configuring Translator, Sensors and Security Panel 5
- Translator Operation 6
- Repeater Operation 6
- Troubleshooting 7

Hinged Patio Door Sensors - Single (includes Active/Fixed Double Doors) 8
- Lock/Unlock Sensor 8
  - Learn Sensor to Translator 8
  - Learn Sensor to Casement 8
  - Learn Sensor to Bridge 8
  - Operation 9
  - Troubleshooting 9
- Open/Close Sensor 11
  - Getting Started 11
  - Learn Sensor to Bridge 11
  - Learn Sensor to Translator 11
  - Operation 12
  - Troubleshooting 12

Hinged Patio Door Sensors - Double Door 13
- Lock/Unlock Sensor 13
  - Learn Sensor to Hinged Patio Door 13
  - Learn Sensor to Bridge 13
  - Learn Sensor to Translator 13
  - Operation 13
  - Troubleshooting 14
- Open/Close Sensor 16
  - Getting Started 16
  - Learn Sensor to Bridge 16
  - Learn Sensor to Translator 16
  - Operation 16
  - Troubleshooting 17

Hinged Patio Door Sensors - Curve Top Door (single or Double Doors 19
- Lock/Unlock Sensor 19
  - Learn Sensor to Hinged Patio Door 19
  - Learn Sensor to Bridge 19
  - Learn Sensor to Translator 19
  - Operation 19
  - Troubleshooting 20
- Open/Close Sensor 22
  - Getting Started 22
  - Learn Sensor to Bridge 22
  - Learn Sensor to Translator 22
  - Operation 22
  - Troubleshooting 23

© 2021 Pella Corporation

Pella Insynctive® Bridge:

For additional help with the Pella Insynctive Bridge, call Pella Customer Service at 855-473-5524. Additional information on bridge and sensor operation can be found in the Bridge and Sensors Product Guide on ConnectPella.com as well as the the Insynctive App Overview.

About the Bridge:

The Pella Bridge can be used to interface between Pella Insynctive products and either a home automation system or the Pella Insynctive App.

Setting Up Sensors with the Bridge:

Power up bridge with accompanying 12V wall adaptor and use the accompanying ethernet cord to connect bridge to either a local network switch or router. Upon powering up, the LED on bridge will turn green and stay green for 45-60 seconds, then the LED will go through a color wheel (a series of different colors) while it looks for any updates on the internet. When the LED then turns off the bridge is now ready to be used.





Learning sensors to the bridge can be done either through the Insynctive app, or manually. To add them in the app, just follow the directions given in the app, it should be straight forward. For help with the Insynctive app, call 855-473-5524 or see the App product guide on Pella.com.

To add them manually, the bridge must first be put into learn mode. This is done by pressing the bottom button on the bridge and holding for a second or so. An orange light should start blinking, which indicates the bridge is now in learn mode and ready to learn in sensors. See **Product Sensor** sections on how to learn specific sensors to the bridge.

When a sensor has been learned to the bridge, the bridge will make a long beep, and the LED will turn green. A sensor can also be unlearned from the bridge using the same process for learning the sensor. Upon unlearning a sensor, the bridge will give three short beeps, and the LED will flash red three times.

NOTE: Bridge will not beep if Chimes are turned off, see Troubleshooting section for more details.

Operation:

Once sensor(s) have been learned to the bridge, the bridge should make a beep whenever a unit becomes unlocked or opened (it won't for locked or closed), unless chimes are turned off.

The product status in the Insynctive app or home automation system should reflect the actual state of the product, and update within a few seconds of a state change.

© 2021 Pella Corporation

Troubleshooting:


- Bridge will not beep nor does green LED come on to indicate the bridge has learned in the sensor.
    - Check **Product Sensor** sections to troubleshoot sensor.
    - Check to see if the sensor shows up on either the app or home automation system. If the sensor does, ensure it is working and updating properly.
        - If sensor shows up but does not work properly, delete the sensor and relearn it following the **Setting Up Sensors with the Bridge** section.
    - Power cycle bridge and retry learning in the sensor following the **Setting Up Sensors with the Bridge** section.
    - Contact Pella Customer Service at 855-473-5524.

- Bridge won't beep upon opening/unlocking of any products.
    - Check to see if the chimes are turned on. Chime settings can be checked in app. (See Chime Settings photo.)
    - Manual Method: Press and hold bottom button, orange light should come on, keep holding button until purple light turns on.
        - Let go of button and scroll through chime settings by pressing bottom button. Levels are high, low, off.
        - When desired setting found, stop pressing bottom button and the chime setting will time out.
        - Try opening/unlocking product again.
    - Ensure sensors are learned to the bridge by checking the app or home automation system.
    - Try relearning sensors to bridge following the **Setting Up Sensors with the Bridge** section.
    - Power cycle bridge then try opening/unlocking products again.
    - Contact Pella Customer Service at 855-473-5524.



Chime Settings

- Bridge will beep upon opening/unlocking of some products, not with others.
    - Check **Product Sensor** sections to troubleshoot sensor. Signal strength can be checked in app. (See Signal Strength photo.)
    - Check to see if range is an issue. Typical open air range is >100ft, but will vary depending on number of walls and materials between sensor and bridge. Can check signal strength in app.
        - Try moving bridge closer to sensor to see if bridge will pick up sensor status.
        - If range does seem like an issue, use the Alula Universal Translator model RE524XP as a repeater. See **Alula Universal Translator** section for details.
    - Power cycle bridge then try opening/unlocking unresponsive products again.
    - Contact Pella Customer Service at 855-473-5524.

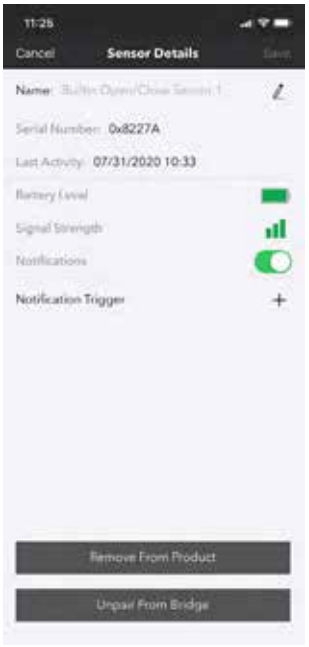

Signal Strength

© 2021 Pella Corporation

Troubleshooting – Insynctive App Only:

- Trouble connecting to bridge in the app.
    - Make sure the phone or table is connected to the internet.
    - Close out the app, power cycle the bridge, and then open the app again.
    - Call Customer Service at 855-473-5524.

- Sensor won't seem to learn through the app.
    - Check **Product Sensor** sections to troubleshoot sensor.
    - Close out the app, power cycle the bridge, and then open the app again.
    - Try adding sensor manually following **Setting Up Sensors with the Bridge** section.
    - Call Customer Service at 855-473-5524.

- Sensor status wont update on the app.
    - Check **Product Sensor** sections to troubleshoot sensor.
    - Close out the app, power cycle the bridge, and then open the app again.
    - Check to see if range is an issue. Typical open air range is >100ft, but will vary depending on number of walls and materials between sensor and bridge.
        - Try moving bridge closer to sensor to see if bridge will pick up sensor status.
        - If range does seem like an issue, use the Alula Universal Translator model RE524XP as a repeater. See **Alula Universal Translator** section for details.
    - Call Customer Service at 855-473-5524.

- The bridge will beep upon opening/unlocking of product, but the status won't update in the app.
    - Close app, and then open back up again.
    - Check the local network internet speed, the internet connection is probably the reason, it will update.
    - Call Customer Service at 855-473-5524.

© 2021 Pella Corporation

Alula® Universal Translator – Model RE524XP

For additional help with the Alula Universal Translator, call Alula Technical Support at 888-882-5852.


About the Translator:

The translator is used to translate Insynctive sensor signals to signals most major security panel manufacturers can understand.

The translator can also act as a signal repeater when sensor signal range may be an issue.

Configuring Translator, Sensors, and Security Panel:

Open translator front panel, and then power it up using the 12V wall adaptor supplied.

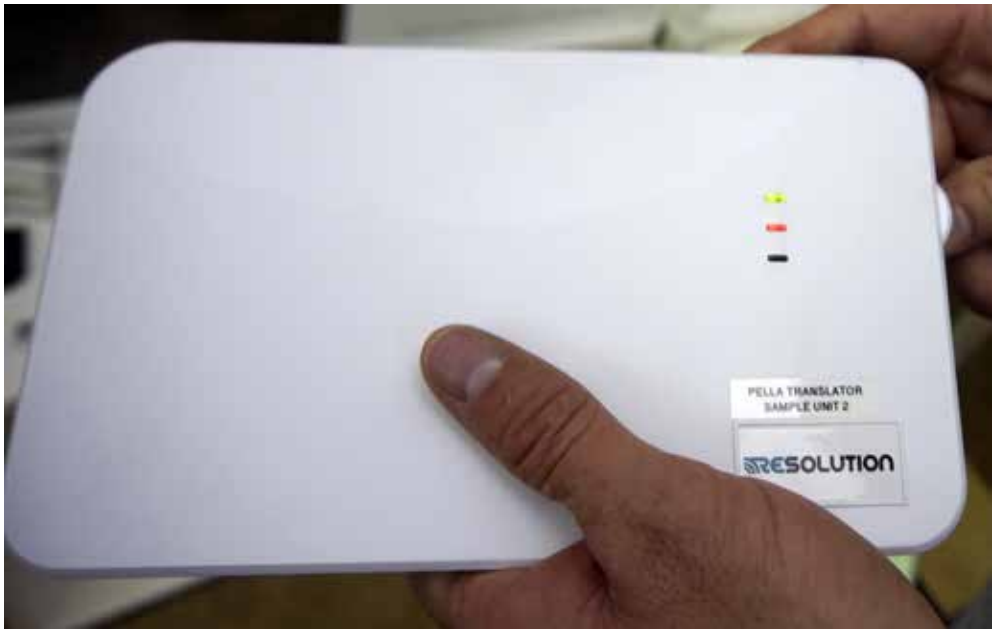

With translator powered on and open, place the **Panel Select** dial to the correct security panel manufacturer. For Pella Insynctive® sensors, place the **Sensor Select** dial to seven.



© 2021 Pella Corporation

Configuring Translator, Sensors, and Security Panel (Continued):

To configure sensors with translator and security panel, security panel must first be put into wireless learn mode (contact panel manufacturer if unsure how this is done.)

Next, the panel must learn in the translator. With the security panel still in wireless learn mode, close the front panel on the translator and after a few seconds open it back up again. Security panel should learn in translator.

The translator must also learn the sensor before it can translate and transmit the signal to the security panel. To do this, with front panel opened and translator powered up (security panel should still be in wireless learn mode too), press the configure button on the circuit board, an orange light should come on. With orange light on, trigger each sensor which needs to be learned, one at a time (see **Product Sensor** sections for information on sensor operation). The translator will beep when it learns each sensor. The translator should now transmit the sensor signal to be learned into the security panel. Once all sensors are learned to translator, configuration is complete. Front panel can be closed now.

The security panel should now pick up the statuses of the sensors learned to it.

NOTE: Be sure the translator model number **IS RE524XP**, and **NOT RE524X**. The RE524X model number will **NOT** work with Insynctive sensors. The translator PCB (green board) label may say RE524X, which is ok. The Alula translator box should say RE524XP though and should only be ordered through Pella Corp to ensure the correct model is ordered.

NOTE: For Honeywell, DSC systems, sensors must be tripped, not tampered to learn into security panel properly. For Interlogix systems, the sensors must be tampered, not tripped to learn into security panel properly.

Translator Operation:

Once sensors have been configured to the translator, the green and red lights on the translator should flash when a sensor is triggered. The green light flashing indicates the translator has received a signal, and the flashing red light indicates the translator is transmitting a signal.

Repeater Operation:

The translator can also be used as a signal repeater when needed. Set both Sensor and Panel dials to seven, and follow the same set up in **Configuring Translator, Sensors, and Security Panel**. Once sensors have been configured to the translator, the green and red lights on the translator should flash when a sensor is triggered. The green light flashing indicates the translator has received a signal, and the flashing red light indicates the translator is transmitting a signal.



© 2021 Pella Corporation

Troubleshooting:

- Translator won't configure or learn sensor in, no flashing green (receive) or flashing red lights (send).
    - Check to confirm the correct translator model. The translator model number **IS RE524XP**, and **NOT RE524X**. The RE524X model number will **NOT** work with Insynctive sensors.
    - Check to see if **Panel** and **Sensor Select** dials are correct.
    - Check specific **Product Sensor** sections to see if sensor has been prepped correctly or is working correctly.
    - Call Alula Technical Support at 888-882-5852.

- Translator configured sensor fine, and will receive signal (green flashing light), but will not send to panel (red flashing light).
    - Check to see if sensor has been configured to the translator by following the **Configuring Translator, Sensors, and Security Panel** section.
    - Sensor may have initially been learned in as wrong sensor type, call Alula Technical Support for further help on resetting translator at 888-882-5852 and relearning sensor in as the correct type.

- Translator shows it is sending (red flashing light) and receiving (green flashing light) sensor signals, but the security panel is not responding.
    - Check to see if **Panel** and **Sensor Select** dials are correct.
    - Check to see if translator has been configured to the security panel by following the **Configuring Translator and Sensors and Security Panel** section.
    - Check to confirm security panel is in wireless learn mode.
    - Contact Alula Technical Support at 888-882-5852 or contact security panel manufacturer for further assistance.

- Security panel intermittently responds to sensor status changes.
    - Check specific **Product Sensor** sections to see if sensor has been prepped correctly or is working correctly.
    - Check to see if range is an issue. Typical open air range is >100ft, but will vary depending on number of walls and materials between sensor and translator.
        - Try using another translator as a repeater if range might be an issue.
    - Contact Alula Technical Support at 888-882-5852 or contact security panel manufacturer for further assistance.

© 2021 Pella Corporation

Hinged Patio Door Sensors – Single Door (includes Active/Fixed Double Doors)

For additional help with Pella Insynctive® sensors, call Pella Customer Service at 855-473-5524. Additional information on bridge and sensor operation can be found in Bridge and Sensor Product Guide on ConnectPella.com.

Lock/Unlock Sensor

Learn Sensor to Hinged Patio Door:

For the sensor to work with the single hinged patio door, the sensor must first learn the product type it is in.

To do so, remove the battery (or plastic cover from the battery) and place it back in. Within two minutes of placing battery back in, place the sensor back into the hinged door panel, close the panel, then pull up on the handle and throw the lock at the same time. Leave the door closed and locked for 15 seconds. The sensor should now have learned the product and be working properly.





Learn Sensor to Bridge:

See **Pella Insynctive® Bridge** section on how to prepare bridge for learning sensors.

Before the hinged patio door lock sensor can be learned to the bridge, it must first learn the product it is in, see **Learn Sensor to Hinged Patio Door** section.

Once the sensor has learned the product it is in, make sure the bridge is in learn mode. Within two minutes of placing the battery back into the sensor, lock and unlock the hinged patio door twice within a few seconds, then wait. After 5-10 seconds the bridge should beep and then the LED should turn green. The bridge has learned in the sensor.

The bridge will beep upon unlocking the hinged patio door unit, and the product status in the app or home automation should show actual product status and update with any state change.

Learn Sensor to Translator:

See **Alula Universal Translator** section on how to prepare translator and security panel for learning sensors.

Before the hinged patio door lock sensor can be learned to the bridge, it must first learn the product it is in, see **Learn Sensor to Hinged Patio Door** section.

With the security panel and translator in learn mode lock or unlock the closed hinged patio door unit, and sensor should learn into security panel.

The security system should show actual product status, and update with any state change.

© 2021 Pella Corporation

Operation:

For hinged patio door lock sensor to read locked, door should be closed and locked, with upper and lower deadbolts thrown as well (these engage by pulling up on the handle before throwing the lock). Sensor will read unlocked upon unlocking of door.

NOTE: Make sure after closing the door to pull up on the handle to throw upper and lower shoot-bolts, and then throw the lock at the same time. Sensor will not read locked, or properly learn product until done so.

NOTE: The lock may physically turn even if the upper and lower shoot-bolts have not been thrown by pulling up on the handle, but the lock will not properly engage until the upper and lower deadbolts have been thrown.

Troubleshooting:

If sensor status does not update correctly, or there sensor shows tampered, here are some steps to try:



- Make sure after closing the door to pull up on the handle to throw upper and lower shoot-bolts, and then throw the lock at the same time.
    - Sensor will not read locked, or properly learn product until done so.
    - If this had not been done, follow **Learn Sensor to Hinged Patio Door** and **Operation** to see if sensor is working properly.

- Take sensor out and ensure the plastic tab has been pulled out from the battery.
    - If not, pull out tab and then follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.






- If plastic tab has been pulled, check battery voltage or replace battery with a new CR-2032 coin cell.
    - With new battery, follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.

- Sensor updates state, but reads tamper
    - Make sure sensor is fully pushed into unit
    - Check to confirm tamper switch is in good condition

© 2021 Pella Corporation

Troubleshooting (continued):

- With sensor pulled out, inspect to confirm the sensor has all the correct connectors and tabs
    - If any missing or damaged, replace with new sensor. Follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.

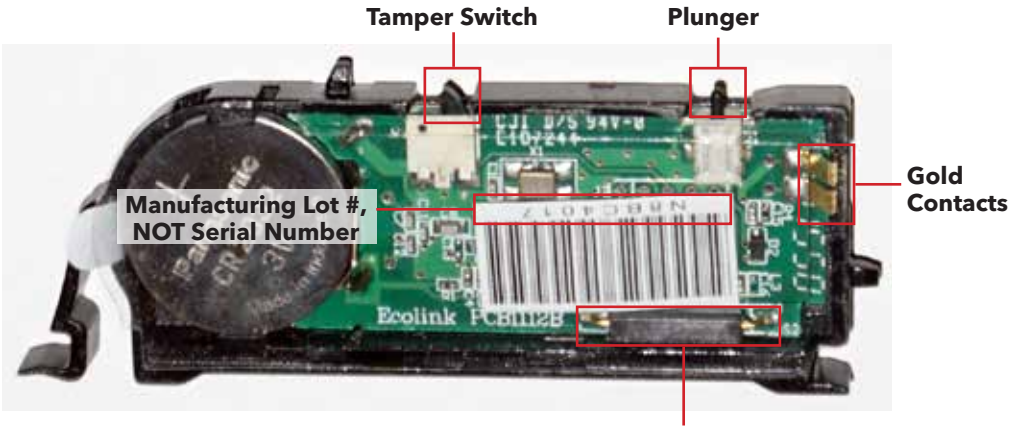

Sensor shown is in good condition

- Try replacing sensor with either a new one, or a working one from another unit. Follow the **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if the hinged patio door unit is working properly.
    - If new sensor works, the issue was with the sensor. Keep/get new sensor for unit, properly dispose of non-working sensor.

- If operating door lock properly, plastic tab has been pulled, battery voltage is good, and sensor has all correct connectors and tabs with none damaged, but still cannot get another sensor to work in the hinged patio door lock either, the issue may be with the hinged patio door unit itself.
    - **To check lock mechanism in door use Sensor Field Testing Device (057R0000), and user manual on PERL (81WR0000).**

- See Alula Universal Translator and Pella Insynctive® Bridge sections for further troubleshooting.


© 2021 Pella Corporation

Open/Close Sensor

Getting Started:

With single hinged patio door panel open, look for a black rectangle in the head of the frame, near where the locking edge. Using a flat head screwdriver (or similar tool) remove the cap by getting under the tab.

Once the cap is off, remove the plastic tab from the battery (or take out and replace battery if tab has been removed).

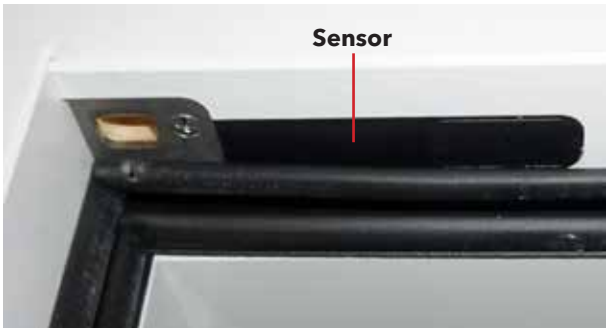





Battery tab removal

NOTE: Weatherstrip may need to be moved or removed to access sensor.

Learn Sensor to Bridge:

See **Pella Insynctive® Bridge** section on how to prepare bridge for learning sensors.

After removing plastic tab from battery or taking the battery out and putting it back in, and properly replacing sensor, make sure the bridge is in learn mode. Within two minutes of placing the battery back into the sensor, open and close the hinged patio door twice within a few seconds, then wait. After 5-10 seconds the bridge should beep and then the LED should turn green. The bridge has learned in the sensor.

The bridge will beep upon open the hinged patio door unit, and the product status in the app or home automation should show actual product status and update with any state change.

Learn Sensor to Translator:

See **Alula Universal Translator** section on how to prepare translator and security panel for learning sensors.

With the security panel and translator in learn mode, open or close the hinged patio door unit, and sensor should learn into security panel.

The security system should show actual product status, and update with any state change.

© 2021 Pella Corporation


Operation:

For single hinged patio door open/close sensor to read closed, door must be in closed position, and cap must be placed back on sensor. Sensor will read open upon opening of hinged patio door.

Troubleshooting:


If sensor status does not update correctly, or there sensor shows tampered, here are some steps to try:

- Located on the top of the door panel, adjacent from the sensor in frame, should be a black plastic circle. This is a magnet the sensor is sensing.
  - If missing, order part number 05380001.

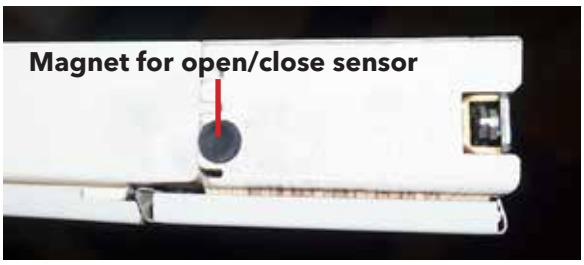

- Take cap off sensor housing and ensure the plastic tab has been pulled out from the battery.
  - If not, pull out tab and then follow **Getting Started** and **Operation** sections to see if sensor is working properly.



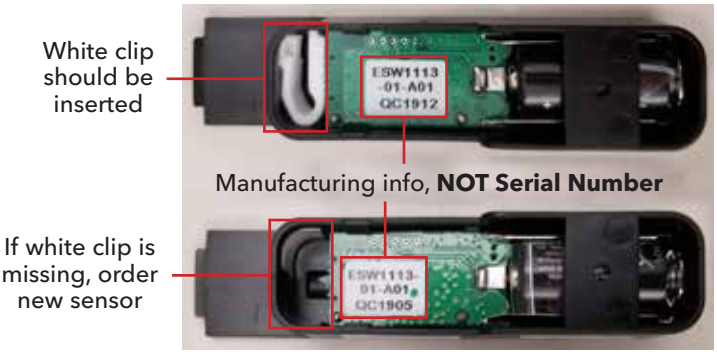

- If plastic tab has been pulled, check battery voltage or replace battery with a new Lithium CR2 3V cell.
  - With new battery, follow **Getting Started** and **Operation** sections to see if sensor is working properly.

- Try replacing sensor with either a new one, or a working one from another unit. Follow the **Getting Started** and **Operation** sections to see if the hinged patio door unit is working properly.
  - If new sensor works, the issue was with the sensor. Keep/get new sensor for unit, properly dispose of non-working sensor.

- Sensor updates state, but reads tamper
  - Make sure sensor is fully pushed into unit
  - Check to confirm tamper switch is in good condition



- See **Alula Universal Translator** and **Pella Insynctive® Bridge** sections for further troubleshooting as well.

© 2021 Pella Corporation

Hinged Patio Door Sensors – Double Door

For additional help with Pella Insynctive® sensors, call Pella Customer Service at 855-473-5524. Additional information on bridge and sensor operation can be found in Bridge and Sensor Product Guide on ConnectPella.com.

Lock/Unlock Sensor

Learn Sensor to Hinged Patio Door:

For the sensor to work with the double hinged patio door, the sensor must first learn the product type it is in.





To do so, remove the battery (or plastic cover from the battery) and place it back in. Within two minutes of placing battery back in, place the sensor back into the hinged door panel, close the panels, then pull up on the handle and throw the lock at the same time on the active panel. Leave the door closed and locked for 15 seconds. The sensor should now have learned the product and be working properly.

Learn Sensor to Bridge:

See **Pella Insynctive Bridge** section on how to prepare bridge for learning sensors.

Before the hinged patio door lock sensor can be learned to the bridge, it must first learn the product it is in, see **Learn Sensor to Hinged Patio Door** section.

Once the sensor has learned the product it is in, make sure the bridge is in learn mode. Within 2 minutes of placing the battery back into the sensor, lock and unlock the hinged patio door (while it is closed) twice within a few seconds, then wait. After 5-10 seconds the bridge should beep and then the LED should turn green. The bridge has learned in the sensor.

The bridge will beep upon unlocking the closed hinged patio door unit, and the product status in the app or home automation should show actual product status and update with any state change.

Learn Sensor to Translator:

See **Alula Universal Translator** section on how to prepare translator and security panel for learning sensors.

Before the hinged patio door lock sensor can be learned to the bridge, it must first learn the product it is in, see **Learn Sensor to Hinged Patio Door** section.

With the security panel and translator in learn mode, lock or unlock the closed hinged patio door unit, and sensor should learn into security panel.

The security system should show actual product status, and update with any state change.

Operation:

For hinged patio door lock sensor to read locked, both doors should be closed and locked, with upper and lower deadbolts thrown on the active panel (these engage by pulling up on the handle before throwing the lock). Sensor will read unlocked upon unlocking of door on active panel.



NOTE: Make sure after closing the door to pull up on the handle to throw upper and lower deadbolts **on the active panel**, and then throw the lock at the same time. Sensor will not read locked, or properly learn product until done so.

NOTE: The lock may physically turn the lock even if the upper and lower deadbolts have not been thrown by pulling up on the handle, but the lock will not properly engage until the upper and lower deadbolts have been thrown.

© 2021 Pella Corporation

Troubleshooting:

If sensor status does not update correctly, or there sensor shows tampered, here are some steps to try:

- Make sure both doors are closed and have latched with one another.



- Make sure after closing the doors to pull up on the handle to throw upper and lower deadbolts on the active panel, and then throw the lock at the same time.
    - Sensor will not read locked or properly learn product until done so.
    - If this had not been done, follow **Learn Sensor to Hinged Patio Door** and **Operation** to see if sensor is working properly.

- Take sensor out and ensure the plastic tab has been pulled out from the battery.
    - If not, pull out tab and then follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.






- Sensor updates state, but reads tamper
    - Make sure sensor is fully pushed into unit
    - Check to confirm tamper switch is in good condition

- If plastic tab has been pulled, check battery voltage or replace battery with a new CR-2032 coin cell.
    - With new battery, follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.

- With sensor pulled out, inspect to confirm the sensor has all the correct connectors and tabs.
    - If any missing or damaged, replace with new sensor. Follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.

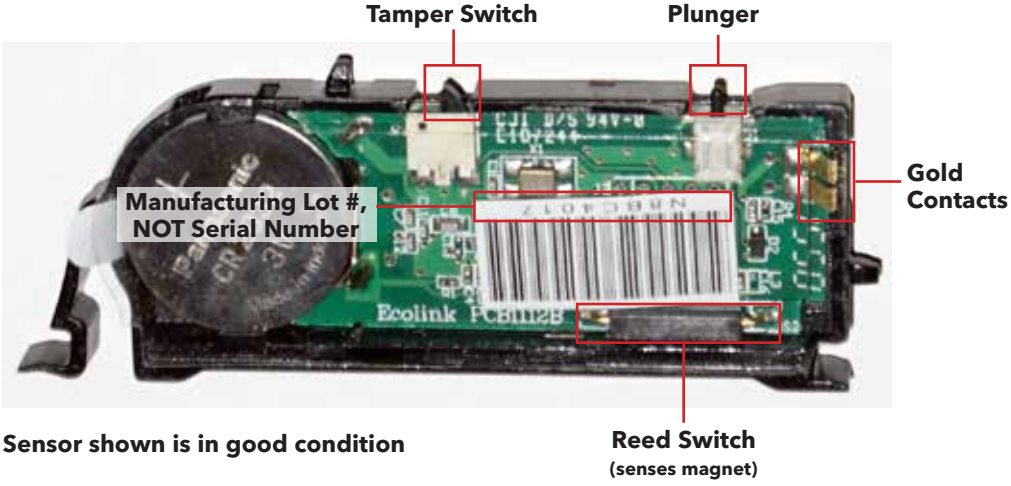

Sensor shown is in good condition

© 2021 Pella Corporation

Troubleshooting (continued):

- Try replacing sensor with either a new one, or a working one from another unit. Follow the **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if the hinged patio door unit is working properly.
    - If new sensor works, the issue was with the sensor. Keep/get new sensor for unit, properly dispose of non-working sensor.

- If operating door lock properly, plastic tab has been pulled, battery voltage is good, and sensor has all correct connectors and tabs with none damaged, but still cannot get another sensor to work in the hinged patio door lock either, the issue may be with the hinged patio door unit itself.
    - **To check lock mechanism in door use Sensor Field Testing Device (057R0000), and user manual on PERL (81WR0000).**

- See **Alula Universal Translator** and **Pella Insynctive® Bridge** sections for further troubleshooting as well.

© 2021 Pella Corporation


Open/Close Sensor

Getting Started:

With double hinged patio door panels open, look for a black rectangle in the head of the frame, near where the locking edge on the active panel. Using a flat head screwdriver (or similar tool) remove the cap by getting under the tab.

Once the cap is off, remove the plastic tab from the battery (or take out and replace battery if tab has been removed).

NOTE: Weatherstrip may need to be moved or removed to access sensor.

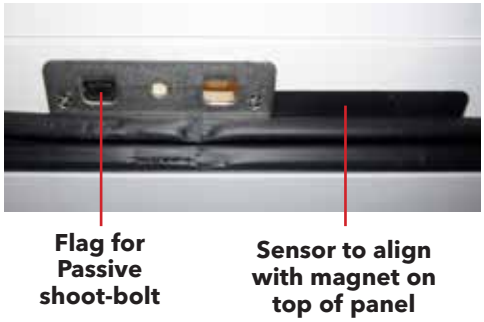

Learn Sensor to Bridge:

See **Pella Insynctive® Bridge** section on how to prepare bridge for learning sensors.

After removing plastic tab from battery or taking the battery out and putting it back in, and properly replacing sensor, make sure the bridge is in learn mode. Within two minutes of placing the battery back into the sensor, open and close the active hinged patio door twice (with the inactive panel still locked with upper and lower deadbolts) within a few seconds, then wait. After 5-10 seconds the bridge should beep and then the LED should turn green. The bridge has learned in the sensor.

The bridge will beep upon opening the active hinged door panel or deactivating the upper and lower deadbolts of the inactive panel. The product status in the app or home automation should show actual product status and update with any state change.

Learn Sensor to Translator:

See **Alula Universal Translator** section on how to prepare translator and security panel for learning sensors.

With the security panel and translator in learn mode, open or close the active hinged patio door panel (with the inactive panel still locked with upper and lower deadbolts), and sensor should learn into security panel.

The security system should show actual product status, and update with any state change.

Operation:

For double hinged patio door open/close sensor to read closed, both doors should be closed and latched together, with upper and lower deadbolts thrown on the passive panel (these engage by pulling up on the handle of passive panel).

Sensor will read open upon opening of active panel or disengaging upper and lower deadbolts in passive panel (done by operating handle on passive panel as to open door).


NOTE: For some inactive doors, the flush bolts located on the locking style need to be thrown instead of pulling up on the handle.

© 2021 Pella Corporation

Troubleshooting:

If sensor does not read open upon opening of double hinged patio door, here are some steps to try:

- Located on the top of the active door panel, adjacent from the sensor in frame, should be a black plastic circle. This is the magnet the sensor is sensing.
    - If missing, contact your local Pella branch to order a new magnet assembly for a hinged patio door.

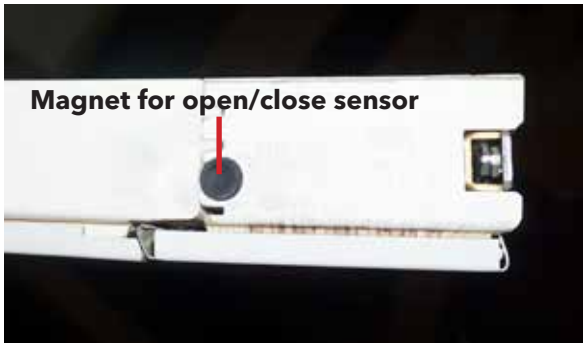

- Sensor should have a flag-like appendage coming through to the upper deadbolt strike in the head of the frame on the passive panel side make sure flag is rotating freely.
    - If missing, order new hinged open/close sensor for double hinged door in PQM. Configured item under unit> sensor service item.

- If flag-like appendage is there, try closing the active panel, and then depressing the flag. Sensor should read closed if they depress the flag and close the active panel.
    - If not, continue for further troubleshooting.





- Take cap off sensor housing and ensure the plastic tab has been pulled out from the battery.
    - If not, pull out tab and then follow **Getting Started** and **Operation** sections to see if sensor is working properly.

- Sensor updates state, but reads tamper
    - Make sure sensor is fully pushed into unit
    - Check to confirm tamper switch is in good condition


- If plastic tab has been pulled, check battery voltage or replace battery with a new Lithium CR2 3V cell.
    - With new battery, follow **Getting Started** and **Operation** sections to see if sensor is working properly.


© 2021 Pella Corporation

Troubleshooting:

- Try replacing sensor with either a new one, or a working one from another unit. Follow the **Getting Started** and **Operation** sections to see if the hinged patio door unit is working properly.
    - If new sensor works, the issue was with the sensor. Keep/get new sensor for unit, properly dispose of non-working sensor.

- See **Alula Universal Translator** and **Pella Insynctive® Bridge** sections for further troubleshooting as well.

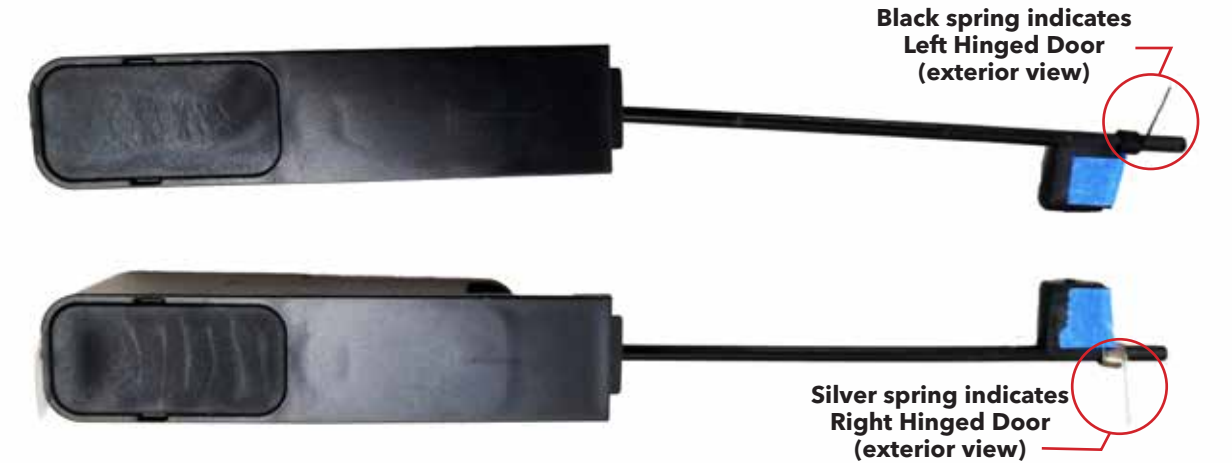

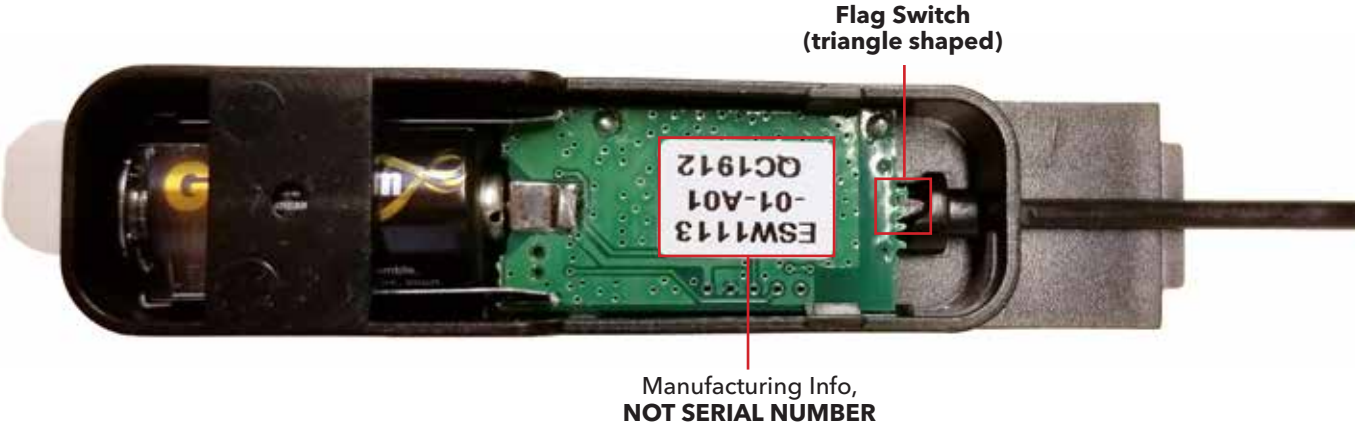

© 2021 Pella Corporation

Hinged Patio Door Sensors – Curved Top Door (single or double doors)

For additional help with Pella Insynctive® sensors, call Pella Customer Service at 855-473-5524. Additional information on bridge and sensor operation can be found in Bridge and Sensor Product Guide on ConnectPella.com.

Lock/Unlock Sensor

Learn Sensor to Hinged Patio Door:

For the sensor to work with the hinged patio door, the sensor must first learn the product type it is in.

To do so, remove the battery (or plastic cover from the battery) and place it back in. Within two minutes of placing battery back in, place the sensor back into the hinged door panel, close the panel(s), then pull up on the handle and throw the lock at the same time on the active panel. Leave the door closed and locked for 15 seconds. The sensor should now have learned the product and be working properly.





Learn Sensor to Bridge:

See **Pella Insynctive Bridge** section on how to prepare bridge for learning sensors.

Before the hinged patio door lock sensor can be learned to the bridge, it must first learn the product it is in, see **Learn Sensor to Hinged Patio Door** section.

Once the sensor has learned the product it is in, make sure the bridge is in learn mode. Within two minutes of placing the battery back into the sensor, lock and unlock the hinged patio door twice (while it is closed) within a few seconds, then wait. After 5-10 seconds the bridge should beep and then the LED should turn green. The bridge has learned in the sensor.

The bridge will beep upon unlocking the closed hinged patio door unit, and the product status in the app or home automation should show actual product status and update with any state change.

Learn Sensor to Translator:

See **Alula Universal Translator** section on how to prepare translator and security panel for learning sensors.

Before the hinged patio door lock sensor can be learned to the bridge, it must first learn the product it is in, see **Learn Sensor to Hinged Patio Door** section.

With the security panel and translator in learn mode, lock or unlock the closed hinged patio door unit, and sensor should learn into security panel.

The security system should show actual product status, and update with any state change.

Operation:

For hinged patio door lock sensor to read locked, door panel(s) should be closed and locked, with upper and lower deadbolts thrown on the active panel (these engage by pulling up on the handle before throwing the lock). Sensor will read unlocked upon unlocking of door on active panel.

NOTE: Make sure after closing the door to pull up on the handle to throw upper and lower deadbolts **on the active panel**, and then throw the lock at the same time. Sensor will not read locked, or properly learn product until done so.

NOTE: The lock may physically turn the lock even if the upper and lower deadbolts have not been thrown by pulling up on the handle, but the lock will not properly engage until the upper and lower deadbolts have been thrown.



© 2021 Pella Corporation

Troubleshooting:

If sensor status does not update correctly, or there sensor shows tampered, here are some steps to try:

- Make sure panel(s) are closed and have latched.



- Make sure after closing the door to pull up on the handle to throw upper and lower deadbolts on the active panel, and then throw the lock at the same time.
  - Sensor will not read locked or properly learn product until done so.
  - If needed, follow **Learn Sensor to Hinged Patio Door** and **Operation** to see if sensor is working properly.

- Take sensor out and ensure the plastic tab has been pulled out from the battery.
  - If not, pull out tab and then follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.






- Sensor updates state, but reads tamper
  - Make sure sensor is fully pushed into unit
  - Check to confirm tamper switch is in good condition.

- If plastic tab has been pulled, check battery voltage or replace battery with a new CR-2032 coin cell.
  - With new battery, follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.

- With sensor pulled out, inspect to confirm the sensor has all the correct connectors and tabs.
  - If any missing or damaged, replace with new sensor. Follow **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if sensor is working properly.

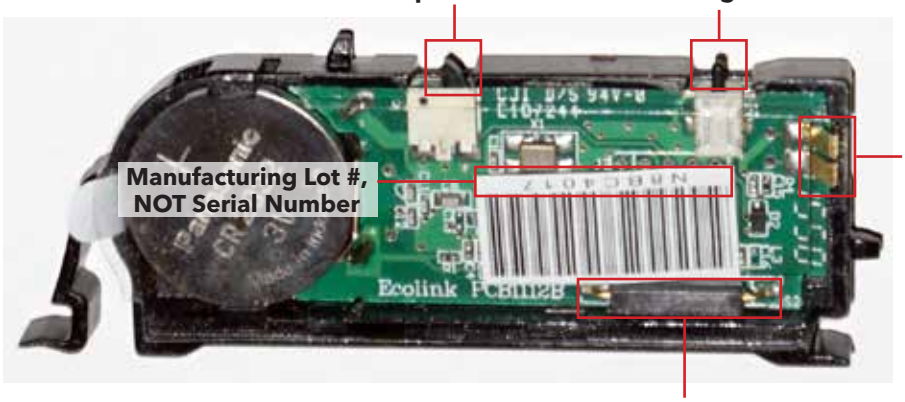

Sensor shown is in good condition

© 2021 Pella Corporation

Troubleshooting:

- Try replacing sensor with either a new one, or a working one from another unit. Follow the **Learn Sensor to Hinged Patio Door** and **Operation** sections to see if the hinged patio door unit is working properly.
    - If new sensor works, the issue was with the sensor. Keep/get new sensor for unit, properly dispose of non-working sensor.

- If operating door lock properly, plastic tab has been pulled, battery voltage is good, and sensor has all correct connectors and tabs with none damaged, and but still cannot get another sensor to work in the hinged patio door lock either, the issue may be with the hinged patio door unit itself.
    - **To check lock mechanism in door use Sensor Field Testing Device (057R0000), and user manual on PERL (81WR0000).**

- See **Alula Universal Translator** and **Pella Insynctive® Bridge** sections for further troubleshooting as well.

© 2021 Pella Corporation

Open/Close Sensor

Getting Started:

With hinged patio door panel open, look for a black circle on top of the active panel located on the radius near the locking stile. Using a flat head screwdriver (or similar tool) remove the cap by getting under the tab.

Once the cap is off, pull the circuit board out and remove the plastic tab from the battery. Then place circuit board back in the house and place cap back on too. Sensor is now ready.

NOTE: Circuit board will only slide back into the housing in one orientation. To insert, keep rotating the circuit board while trying to push it in until it starts to slide into the housing (it should slide in fairly easily when lined up properly). Cap is the same way. Keep rotating the cap until it snaps into place.



Photo shows sensor on top of curved panel, magnet is located in the curved frame aligned with the sensor.

Learn Sensor to Bridge:

See **Pella Insynctive® Bridge** section on how to prepare bridge for learning sensors.

After removing plastic tab from battery or taking the battery out and putting it back in, and properly replacing sensor, make sure the bridge is in learn mode. Within two minutes of placing the battery back into the sensor, open and close the active hinged patio door twice within a few seconds, then wait. After 5-10 seconds the bridge should beep and then the LED should turn green. The bridge has learned in the sensor.

The bridge will beep upon opening the active hinged patio door panel, and the product status in the app or home automation should show actual product status and update with any state change.

Learn Sensor to Translator:

See **Alula Universal Translator** section on how to prepare translator and security panel for learning sensors.

With the security panel and translator in learn mode, open or close the active hinged patio door panel, and sensor should learn into security panel.

The security system should show actual product status, and update with any state change.

Operation:

For curved top hinged patio door open/close sensor to read closed, door must be in closed position, with circuit board and cap properly in the sensor housing. Sensor will read open upon opening of the curved top hinged patio door.

© 2021 Pella Corporation

Troubleshooting:

If sensor status does not update correctly, or the sensor shows tampered, here are some steps to try:

- Located on the frame, adjacent from the sensor, should be a small black circle. This is the magnet the sensor is sensing.
    - If missing order part number 05380001.

- Take circuit board out of sensor housing and ensure the plastic tab has been pulled out from the battery.
    - If not, pull out tab and then follow **Getting Started** and **Operation** sections to see if sensor is working properly.

- If plastic tab has been pulled, check battery voltage or replace battery with a new Lithium CR2 3V cell.
    - With new battery, follow **Getting Started** and **Operation** sections to see if sensor is working properly.

- With circuit board pulled out, inspect to confirm the board has all the correct connectors and tabs.
    - If any missing or damaged, replace with new sensor. Follow **Getting Started** and **Operation** sections to see if sensor is working properly.



- Sensor updates state, but reads tamper
    - Make sure sensor is fully pushed into unit
    - Check to confirm tamper switch is in good condition.

- Try replacing sensor with either a new one, or a working one from another unit. Follow the **Getting Started** and **Operation** sections to see if the hinged patio door unit is working properly.
    - If new sensor works, the issue was with the sensor. Keep/get new sensor for unit, properly dispose of non-working sensor.

- See **Alula Universal Translator** and **Pella Insynctive® Bridge** sections for further troubleshooting as well.

© 2021 Pella Corporation