©Pella Corporation 2005

Part Number: 80GG0100

INSTALLATION INSTRUCTION – INSTRUCCIONES DE INSTALACION FOR INTERIOR AND EXTERIOR LEVER PARA LAS PALANCAS (INTERIOR Y EXTERIOR)

IMPORTANT! Read thoroughly before beginning. Failure to install as recommended will void any warranty, express or implied.


TOOLS REQUIRED:

- Phillips screwdriver
- Drill
- 3/32", 5/16" and 1/2" drill bits
- Allen wrench (provided)

1 INTERIOR LATCH ASSEMBLY

A. Place the interior lever onto the interior latch housing.

B. Secure using the interior assembly set screw with the Allen wrench provided.

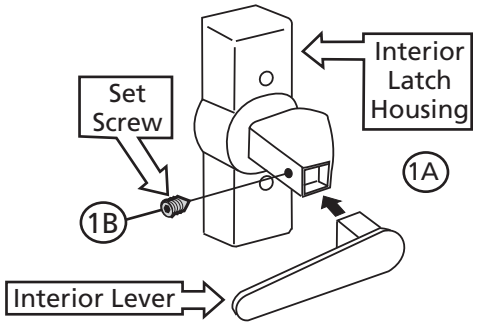

2 APPLY THE DRILLING TEMPLATE TO THE DOOR

A. Cut out the template located at the bottom of the page and fold on the two lines as indicated.

B. Place the template on the door locating the center holes 39-1/2" from the bottom of the door. Tape the template to the door panel.


NOTE: Make certain the template holes are aligned vertically.


C. Close the storm door, and hold the interior latch assembly in position. Check to make sure the interior lever will not interfere with the handle of your main entry door.

NOTE: If there is interference, move the template up or down enough to provide adequate clearance.


D. Center punch the three interior and three exterior hole locations, then remove the template.

E. Drill the template holes using a 1/2" drill bit for the center hole and 5/16" drill bit for the top and bottom hole. Drill part way through the door from each side, allowing the holes to meet in the middle of the door.

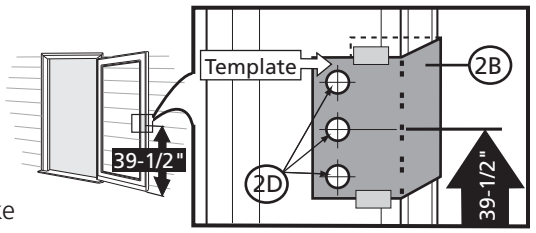

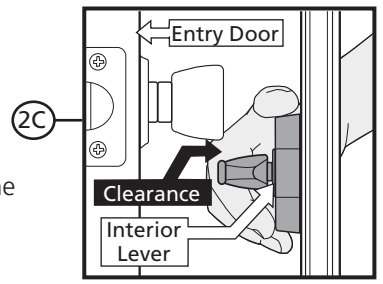

Continue onto page 2.

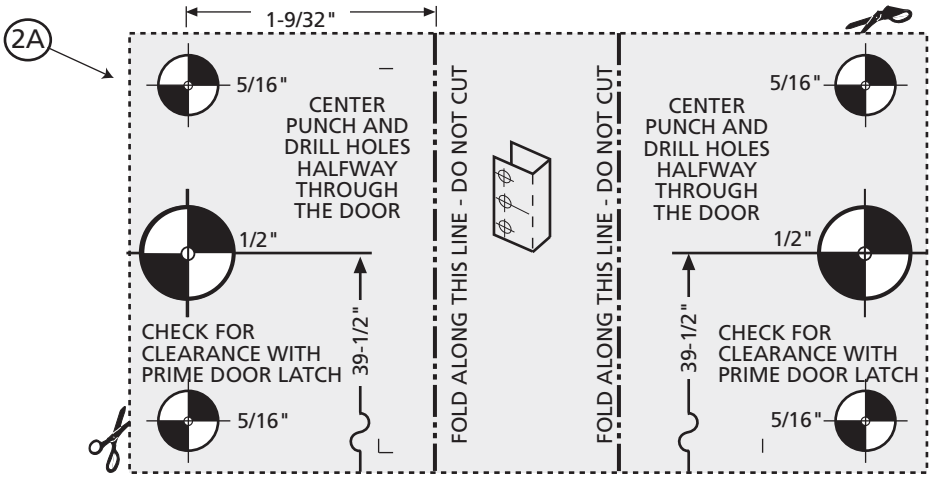

3 INSTALL THE INTERIOR AND EXTERIOR HANDLES

A. Insert the latch spindle into the interior latch assembly.


B. Slide the latch spacer onto the interior latch assembly.


C. Position the interior latch assembly on the door panel, sliding the latch spindle through the center hole on the door panel.

D. Position the exterior lever on the door panel, sliding the lever onto the latch spindle.

E. Hold the interior latch and exterior lever together, and tighten the exterior lever set screw with the Allen wrench provided.


F. Secure the interior latch and exterior lever to the door panel, using two #6-32 x 1-1/8" Phillips pan head screws.




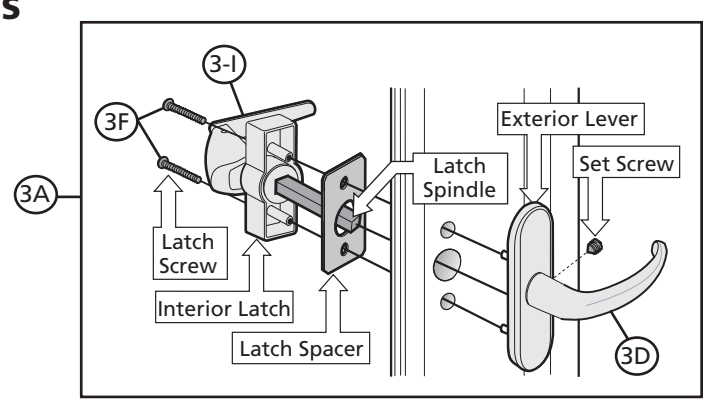

G. Close the door and position the strike behind the latch bolt.

H. Mark and drill the two strike holes using a 3/32" drill bit in the center of the holes and secure using two #6 x 1-1/4" pan head screws.



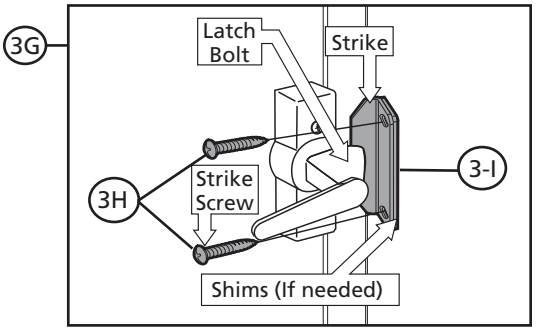

I. Adjust the strike for proper operation. Shims are included if necessary to move the strike closer to the latch bolt.