©Pella Corporation 2006

Part Number: 80HH0001

ROLSCREEN® RETRACTABLE SCREEN FOR SLIDING DOOR BOTTOM RIDING CONVERSION INSTRUCTIONS

WARNING SCREEN IS NOT DESIGNED TO KEEP CHILDREN OR ANIMALS IN OR OUT. KEEP SMALL CHILDREN AND ANIMALS AWAY FROM SCREEN.

TOOLS REQUIRED:

- Pencil
- Tape measure
- Screwdrivers (Phillips and Flat blade)
- Drill with a Phillips driver bit
- Stiff putty knife
- Scissors
- Side Cutter

REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.


1 REMOVE THE HEAD AND SILL PLUG

A. **Remove the screws that attach the top track** to the door frame. Slide the top track off of the lead stile/control bar.

B. **Remove the screws that attach the bottom track** to the door frame. Slide the bottom track off of the lead stile/control bar.

C. **Remove the head plug** by removing the head plug screw and pulling the head plug off the top of the control bar.

D. **Remove the sill plug** by pulling it off the bottom of the control bar.

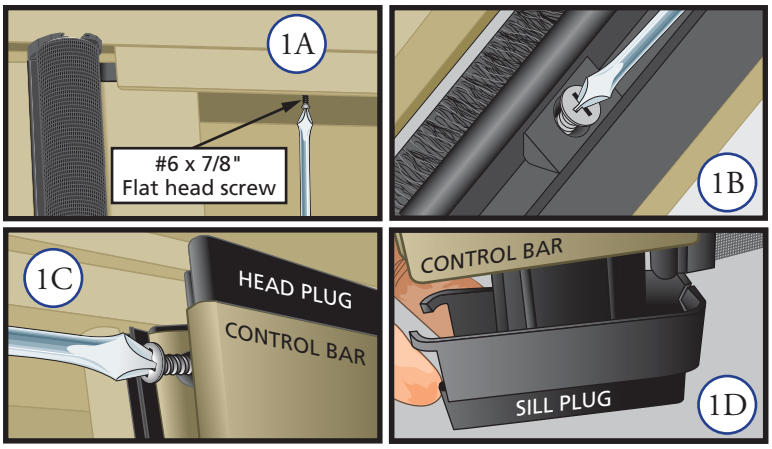


2 PREPARING THE LEAD STILE/CONTROL BAR ATTACHMENT STRIP

A. **Using a stiff putty knife, push on the back of the canoe clip** to remove it from the head end of the attachment strip.

B. **Slide the attachment strip up so the top edge of the screen is at least 3" above the top of the control bar.** Using side cutters or sharp scissors, cut out a 5/8" x 3/16" notch from the head end of the attachment strip.

C. **Repeat Step B on the bottom of the attachment strip.**


D. **Slide the attachment strip back to the original position** in the control bar.

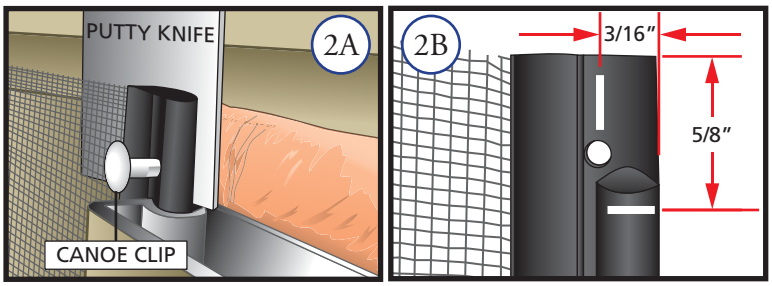

3 INSTALL THE TOP AND BOTTOM TRACK


A. **Re-install the top track at the top of the door** and insert the screws to secure the top track.

B. **Re-install the bottom track** using the screws and screw guides.

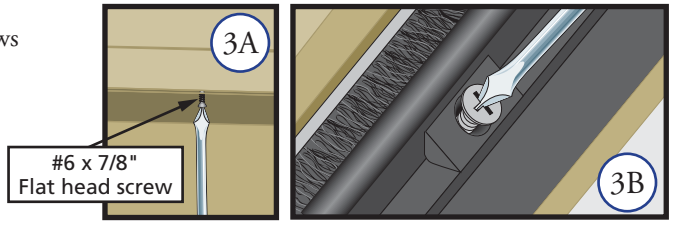


4 INSTALL THE CONTROL BAR

A. **Install the replacement head plug on the top track and the replacement sill plug on the bottom track.** ***Note: The "V" notched end of each plug must face towards the lock jamb and the square end towards the fixed panel.***

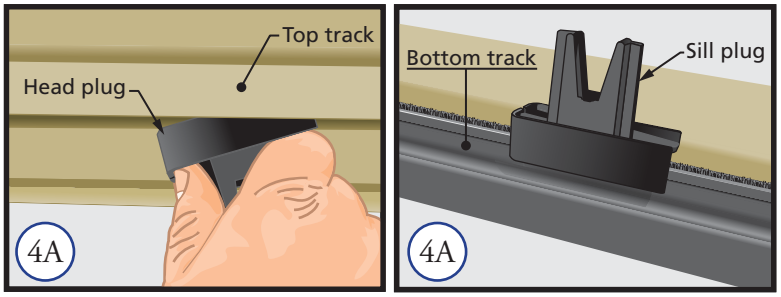


B. **Lift the control bar high enough to place it over the sill plug.** Tilt the top of the control bar towards the lock jamb until there is enough room to insert the head plug into the top of the control bar.

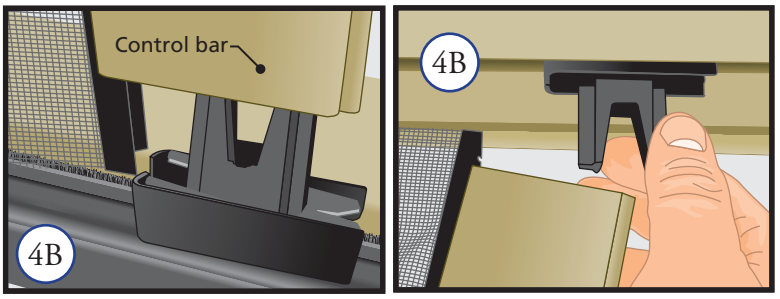

5 LATCH ALIGNMENT

Doors with adjustable strike (Step A):


A. **Align the bottom edge of the strike with the lock catch** as shown. If necessary, loosen the strike screw and the strike base screw and adjust the strike base up or down. Tighten the strike base screw to secure in place and tighten the strike screw.

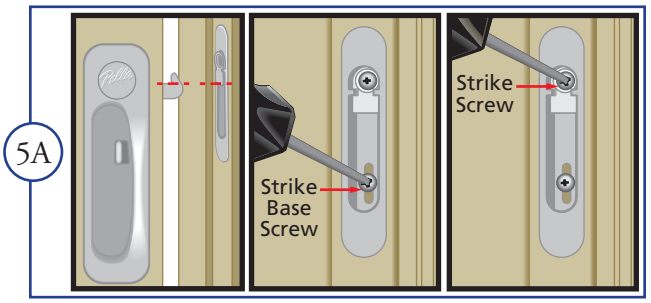

Doors without adjustable strike (Step B thru E):

B. **Tilt the control bar towards the lock jamb** until there is enough room to remove the head plug from the top of the control bar.

C. **Lift the control bar off of the sill plug.**

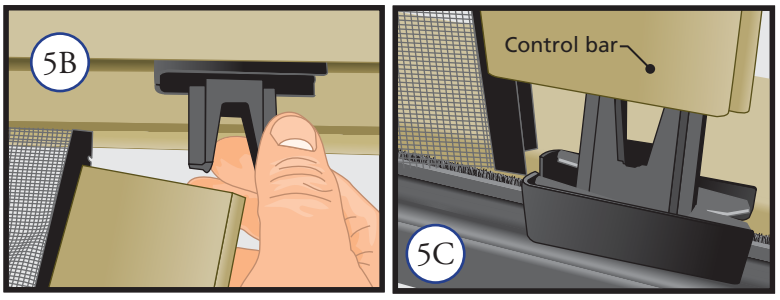

D. **Use sill plug spacers** to raise the control bar to align the bottom edge of the strike with the lock catch.

E. **Re-install the control bar** as described in Step 4. Adjust the number of sill plugs as needed.

