© 2017 Pella Corporation Part Number: 81US0100

# TEMPORARY DOOR LOCK CARRIAGE BOLT AND WING NUT INSTALLATION INSTRUCTION

**TEMPORARY DOOR LOCK CONTENTS:**


- Carriage bolt and wing nut (to lock door when handle is not installed)

**NOTICE**

Door cannot be opened from the exterior with carriage bolt and wing nut installed.

***Note: Carriage bolt and wing nut are used to lock door when temporary handle is not being used.***

***Insert carriage bolt through exterior side keylock hole and place the wing nut on the interior side.***

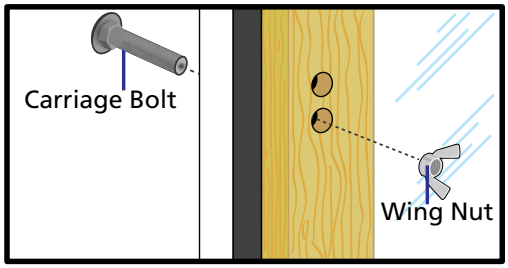


© 2017 Pella Corporation Part Number: 81US0100

TEMPORARY DOOR LOCK CARRIAGE BOLT AND WING NUT INSTALLATION INSTRUCTION

TEMPORARY DOOR LOCK CONTENTS:


- Carriage bolt and wing nut (to lock door when handle is not installed)

NOTICE

Door cannot be opened from the exterior with carriage bolt and wing nut installed.

*Note: Carriage bolt and wing nut are used to lock door when temporary handle is not being used.*

*Insert carriage bolt through exterior side keylock hole and place the wing nut on the interior side.*

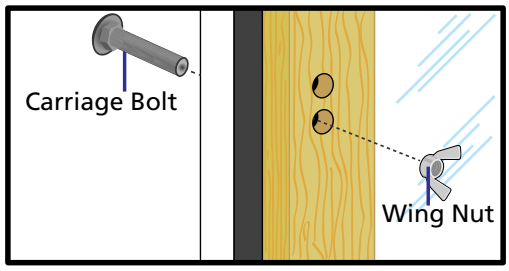


© 2017 Pella Corporation Part Number: 81US0100

TEMPORARY DOOR LOCK CARRIAGE BOLT AND WING NUT INSTALLATION INSTRUCTION

TEMPORARY DOOR LOCK CONTENTS:

- Carriage bolt and wing nut (to lock door when handle is not installed)

NOTICE

Door cannot be opened from the exterior with carriage bolt and wing nut installed.

*Note: Carriage bolt and wing nut are used to lock door when temporary handle is not being used.*

*Insert carriage bolt through exterior side keylock hole and place the wing nut on the interior side.*

