Clad Wood Hinged Door Hardware

INSTALLATION INSTRUCTIONS

Active, Passive and Inactive Functions

1 Install the Active and/or Passive Panel Hardware:

A. Remove the top housing screw. Install the lock cylinder with key (active) or lock cylinder without key (passive) into the exterior plate. Insert the Z-clip over the lock cylinder and secure it by inserting the top housing screw.

B Insert the spindle into the exterior handle.

C. Place the isolator over the back of the exterior plate.

D. Place the round rubber gasket over the bottom screw boss of the exterior handle plate.

E. Place the exterior handle assembly onto the door from the exterior making sure that the lock cylinder tail piece is in the horizontal position and is aligned with the lock slot in the door.


Note: The slot may be rotated with a flat-bladed screwdriver.

F. Rotate the handle down to release the latch and shoot bolts. The panel will open.

G. Rotate the thumbturn on the interior handle assembly to the vertical position so that it is aligned with the lock cylinder tail piece. Hold the exterior handle in place, then slide the interior handle onto the handle spindle and the thumbturn onto the lock cylinder tail piece from the inside.

Note: The handles should be in the horizontal position pointing toward the glass.

H. Hold the interior and exterior handle assemblies together and insert the two (2) screws provided into the top and bottom of the handle plate from the interior.

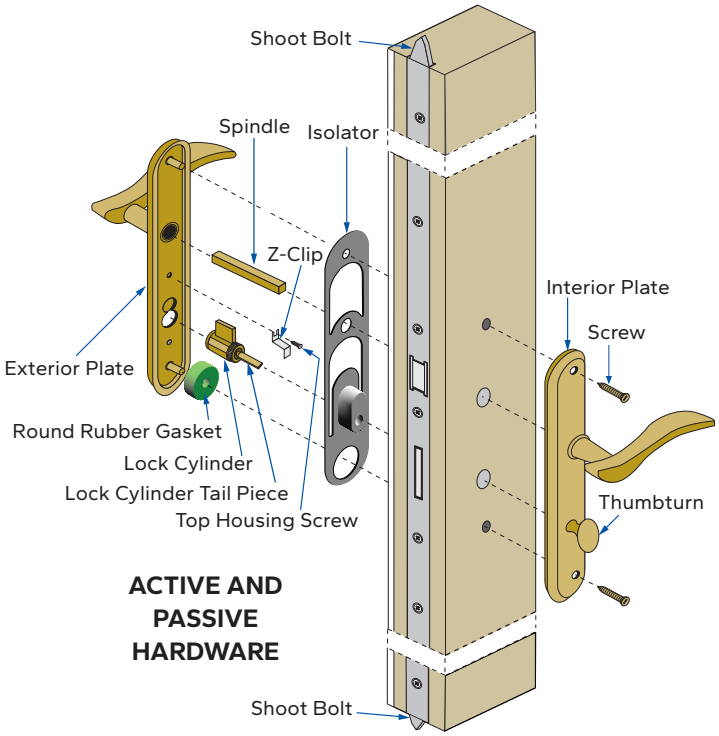

ACTIVE AND PASSIVE HARDWARE

2 Check the Operation:


A. With the door open, lift the handle to activate the shoot bolts. Rotate the thumbturn or key to lock the shoot bolts.

Note: If the door is not locked, remove the exterior assembly and rotate the key cylinder tail piece 180°, then reinstall and test the assembly.

B. Rotate the key or thumbturn to unlock the door. Rotate the handle down. This will release and withdraw the shoot bolts.

C. Close the door and raise the handle again. Turn the key to lock the bolt, then attempt to open the door. The door should not open.

D. Rotate the key or thumbturn to unlock the door. Rotate the handle down to withdraw the shoot bolts and open the door.

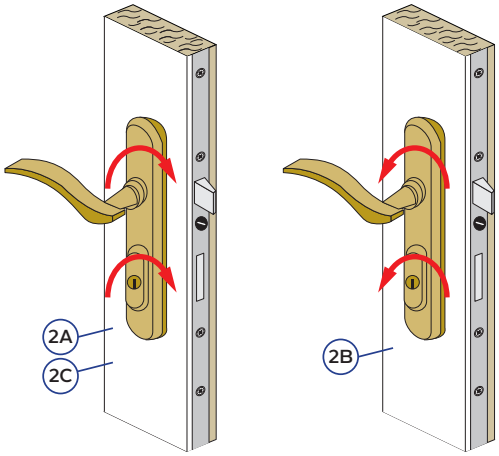


3 Install the Inactive Hardware (AI and IA Doors Only):

A. Place the isolator over the back of the exterior plate.

B. Place the round rubber gasket over the bottom screw boss of the exterior handle plate.

C. Place the interior and exterior hardware in position on the door and insert the screws provided from the interior to secure the trim.

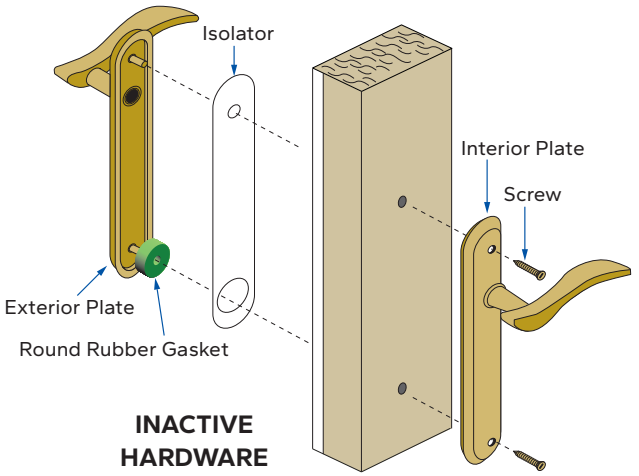

INACTIVE HARDWARE

© 2026

GIF-000000547-1 Part Number: 803K0103