Sliding Patio Door Interior Trim Installation


INSTALLATION INSTRUCTION

Tools Required:


- Saw to cut trim

1 Interior Trim Installation:

A. **Locate positions to apply interior trim on door.** Locate the head and the 2 jambs, and joiner trim for 3- and 4-panel units.

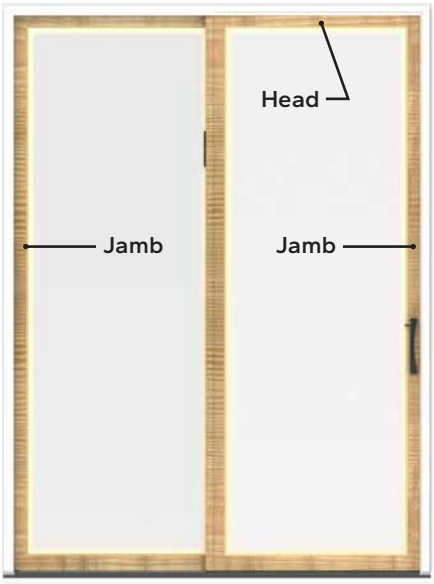


2-Panel, 3-Panel, and 4-Panel Doors

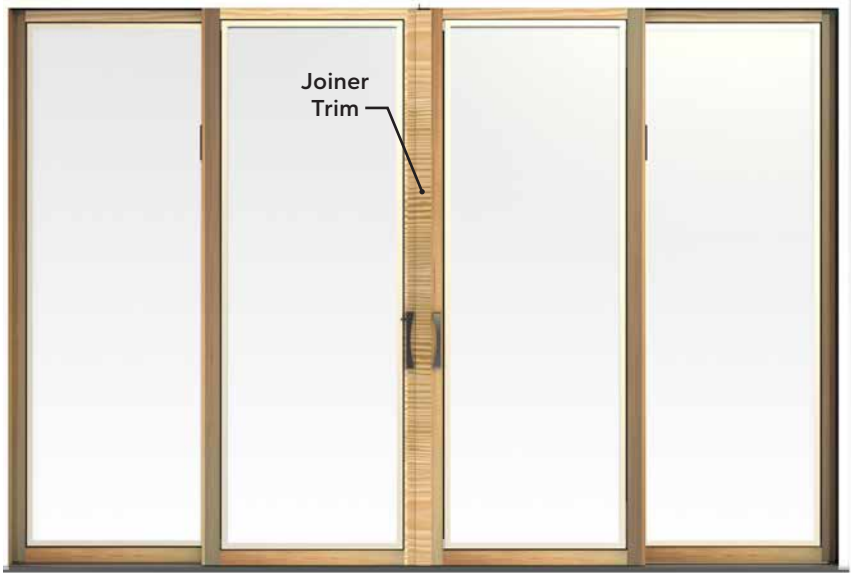

3-Panel and 4-Panel Doors

B. **Remove the release paper from the adhesive tape on the interior trim pieces.** There should be 2 jamb trim pieces and 1 head trim piece.

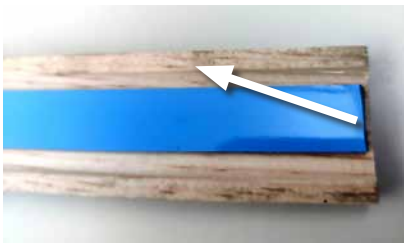





NOTICE Some 3-Panel and 4-Panel units may have 2 head trim pieces.

© 2026


1 Interior Trim Installation (continued):


C. **Position the jamb trim piece on the jamb.** Make sure the top of the trim is aligned with the bottom edge of the head. The long edge of the trim should be aligned with the interior edge of the jamb.

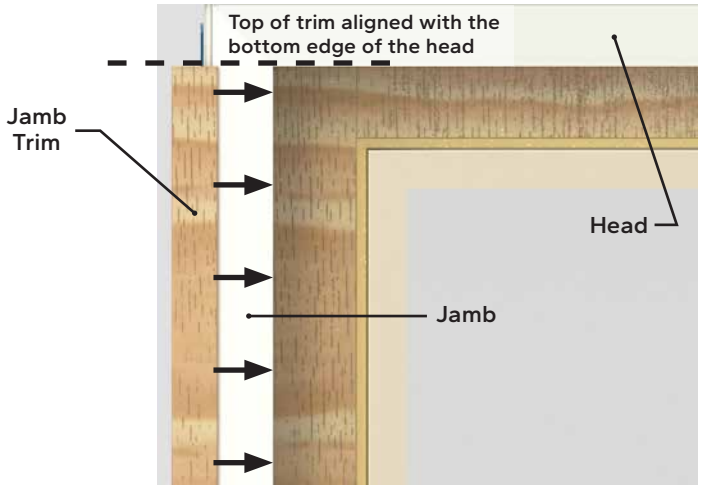


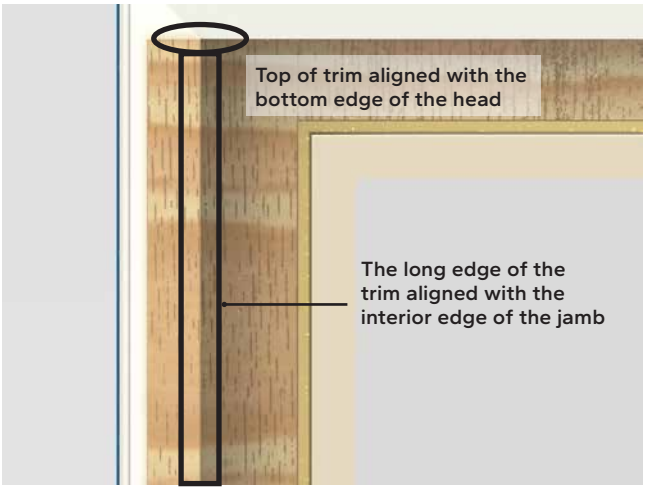


D. **Press the jamb trim against the jamb.** Press along the length of the jamb trim to make sure the adhesive tape sticks to the jamb.

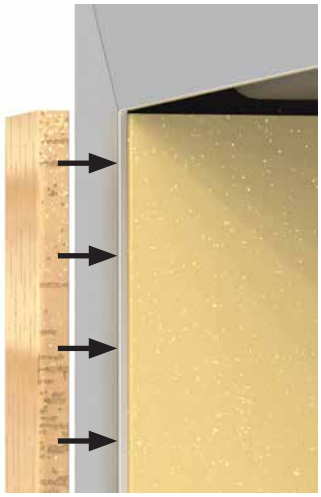


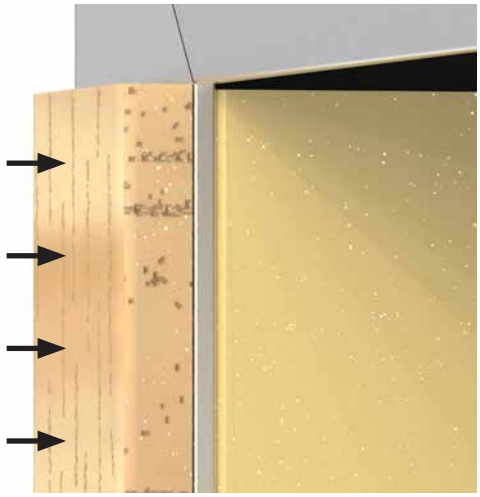

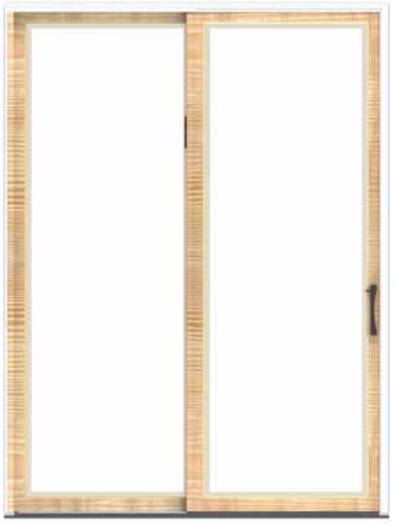


E. **Repeat steps 1C - 1D to install jamb trim piece** on the other door jamb.

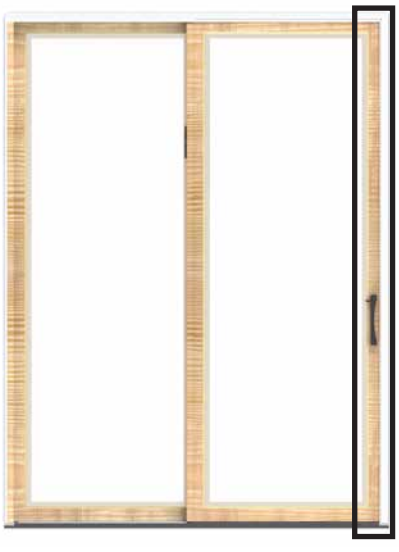


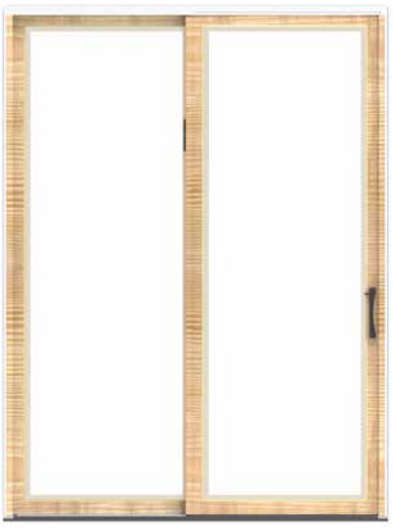


1 Interior Trim Installation (continued):


F. **Position the head trim piece on the head.** Make sure the long edge of the head trim is aligned with the top edge of the jamb trim. The short edge of the head trim should be aligned with the outer edge of the jamb trim.

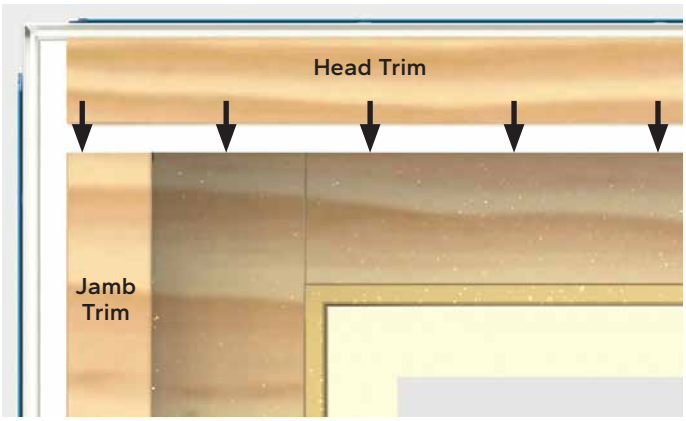

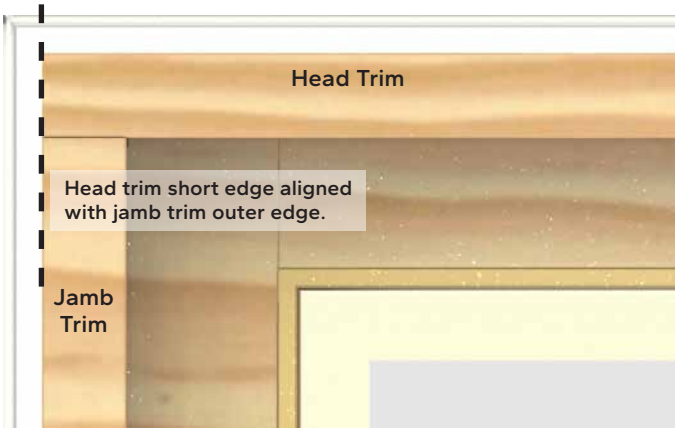

G. **Press the head trim against the head.** Press along the length of the head trim to make sure the tape sticks to the head.

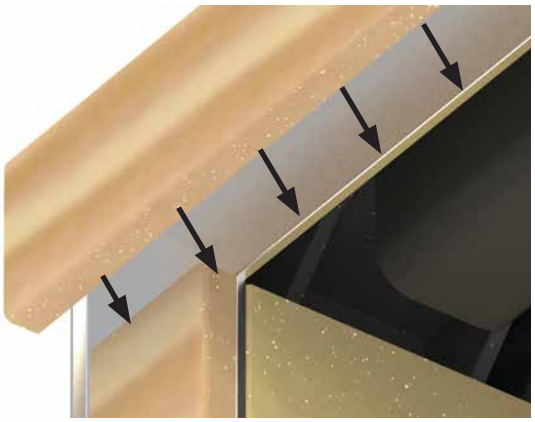

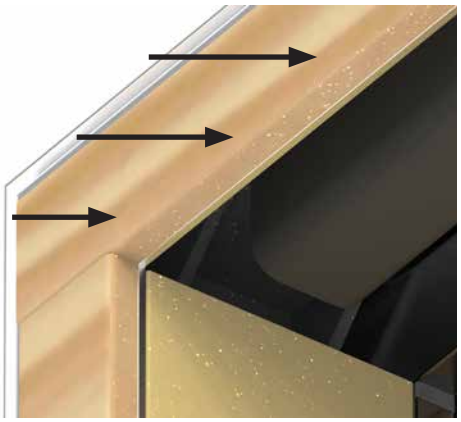



NOTICE Some 3-panel and 4-panel units may have two equal length head trim pieces. Repeat steps 1F-1G with the second head trim piece on the other end of the frame head.

2 Joiner Trim Installation:

NOTICE For 3-panel and 4-panel units only.


NOTICE Joiner trim should be installed only after final adjustment of both vent and joining panels.

A. **Locate joining trim.**

The joiner trim is provided in a longer length than needed and must be cut to size.

From the interior, measure from the bottom of the metal joiner part to the head. Take this measurement and subtract 1/8" (.125"). This will be the length to which the trim will need to be cut.

The trim is 1/8" short because for a type 4 unit, there needs to be room for the joiner trim not to rub against the head as the panel is operated.

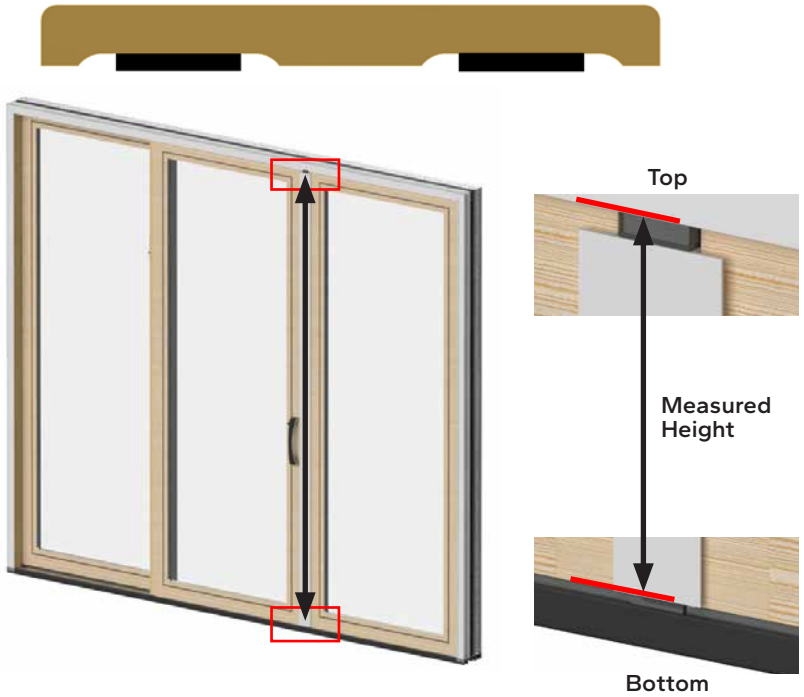



B. **Remove the release liner** from the adhesive tape on the joiner trim piece.



2 Joiner Trim Installation (continued):

C. **Position the joiner trim piece** on the joiner.

Make sure the BOTTOM of the trim is FLUSH with the BOTTOM edge of the joiner. The long edge of the trim should be aligned with the long edge of the joiner.

Press firmly along the entire length of the joiner trim to make sure the adhesive tape properly wets out and adheres to the joiner.



