SLIDING PATIO DOOR FLAT SCREEN

INSTALLATION INSTRUCTION

Note: The Sliding Screen is installed on the **exterior** of the Sliding Patio Door.

Parts List:

- (1) Screen door
- (2) Screen roller
- (1) Screen strike (OX / XO OOX / XOO Standard / Premium) (OX / XO – Classic)
- (1) Screen strike (OXO Classic only)
- (2) #8 x 1/2" screw (screen strike)
- (2) #8 x 3/4" screw (Classic screen clip)
- (2) #8 x 1-1/4" screw (Standard / Premium screen clip)

Tools Required:

- Phillips screwdriver
- Drill with Phillips bit
- Painters tape (optional)
- Pencil (optional)



Roller



Clip




Strike:
OX / XO OOX / XOO
(Standard / Premium)
OX / XO (Classic)



Strike:
OXO
(Classic Only)


Note: Unit and screen handing viewed from the exterior.

STANDARD / PREMIUM AND CLASSIC

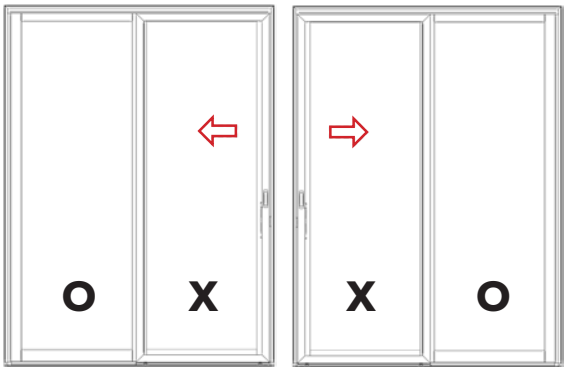


(OX) Locking Screen (XO) Locking Screen

STANDARD / PREMIUM AND CLASSIC

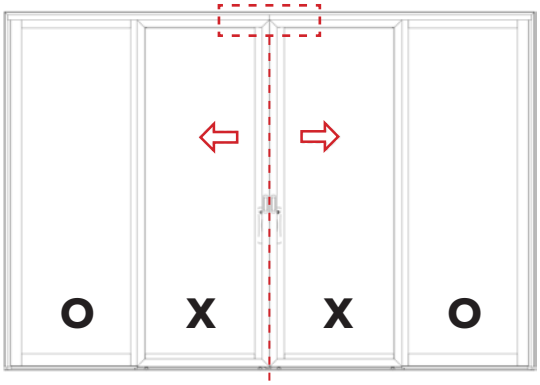


(OX) Joining Screen (XO) Locking Screen

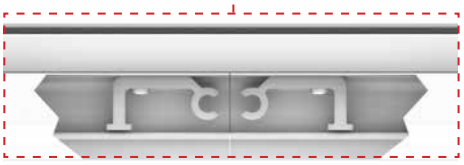


Note: On OXXO Doors, install screen clips in center of head track after the screens are installed.

STANDARD AND PREMIUM ONLY

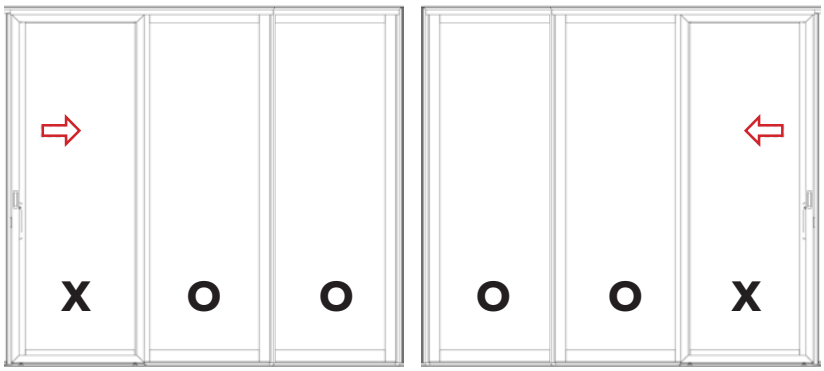

(XOO) XO Locking Screen (OOX) OX Locking Screen

CLASSIC ONLY

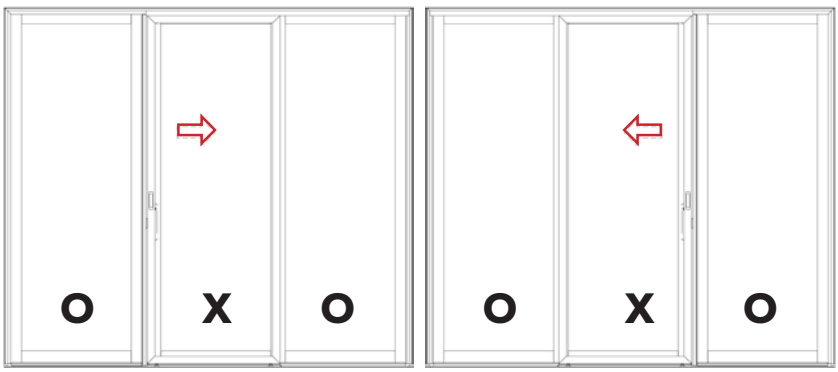


(XO) Locking Screen (OX) Locking Screen

© 2025

GIF-000003063-1 Part Number: V990189

1 Screen Installation:

A. **Insert the screen rollers into the track** through the roller cutout on the end of the track. Make sure the rollers are positioned in the track as shown.

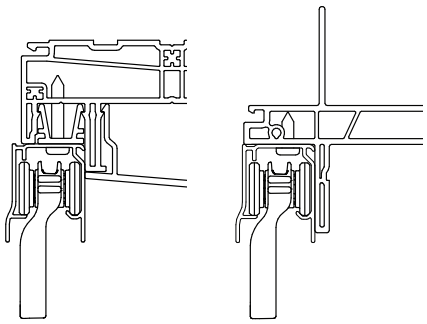

Standard / Premium **Classic**







B. **Position the screen up to the upper screen track** and insert the rollers into the holes on the top of the screen.



C. **Make sure the rollers are fully inserted into the top of the screen.** It may be helpful to prop the screen up with the installer's foot or a block of wood.





D. **Insert and tighten the provided screen attachment screws.**







1 Screen Installation (continued):

E. **Lift each glide carriage at the bottom of the screen** to confirm its positioned onto the lower screen track on the sill.

Note glide carriage slot location for Standard / Premium vs Classic.

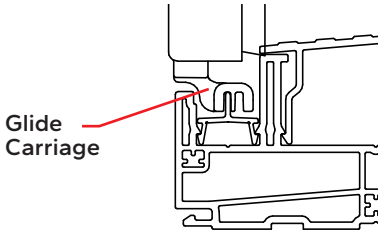

Standard / Premium

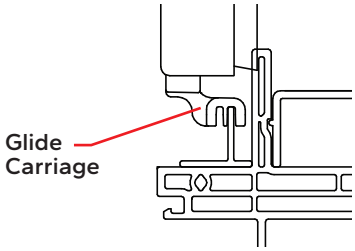

Classic





F. **Make sure the reveal between the screen and frame lock jamb is even** along the length of the screen. Screws can be adjusted to confirm the reveal is even.

Note: To adjust the screen reveal, loosen the adjustment screws to lower the screen or tighten the screws to raise it. Adjust the screen as needed to eliminate and visible gaps.



G. **OXXO Only:** at the center of the head track, remove the two track installation screws and install screen clips using the supplied #8 x 1-1/4" screws for Standard / Premium doors or 3/4" screws for Classic doors. Make sure the "C-shaped" end of each clip is facing the center of the door.

2 Screen Strike Installation:

A. **Position the screen strike** on the lock jamb and align the strike hook with the hole on the edge of the screen lock stile.

B. **Completely close the screen door,** so the strike is between the screen and the door frame. Position the screen strike against the frame so the strike hook is still aligned with the hole on the edge of the screen stile.
A pencil can be used to mark the strike location.

C **Insert and tighten the provided screen strike attachment screws.** Finish tightening with a Phillips handheld screwdriver.







Standard / Premium strike reveal



Classic strike reveal