Window Opening Control Device (WOCD)
IMPORTANT SAFETY INFORMATION

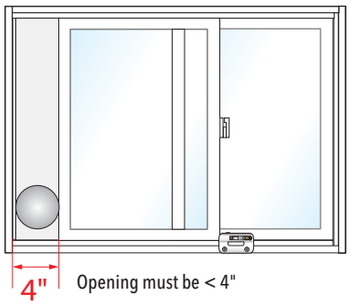
LEAVE SAFETY INFORMATION FOR THE OCCUPANT
1761 WINDOW OPENING CONTROL DEVICE

The window opening control device (WOCD) is designed to assist in protection against accidental falls by children five (5) years old and younger. When properly installed and engaged, there shall be no space at the maximum open position of a window sash which would permit a rigid 4" (102mm) diameter sphere to pass through the opening. Failure to correctly install and engage the WOCD may result in falls or injury. Window must be unlocked and the WOCD disengaged to allow for emergency exit. This window control device is not a substitute for attentive supervision of young children. Tested to ASTM F2090.

⚠WARNING!
POSSIBLE FALL HAZARD

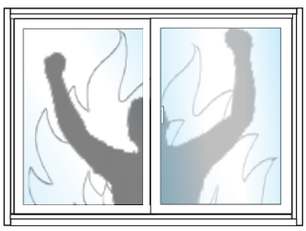


1. Follow manufacturer's assembly and installation instructions carefully. Failure to do so may result in accidental falls.
2. This WOCD is designed to protect against accidental window falls by children five years and younger.
3. This WOCD is not a substitute for careful supervision of young children.
4. Keep WOCD engaged unless needed for emergency.



Opening must be < 4"

1. Use only recommended materials and techniques.
2. Make sure WOCD is securely attached to the window.
3. Make sure the window frame is in good condition.
4. Verify WOCD is installed so that a rigid sphere 4 inches in diameter cannot pass through the window opening.



NO WINDOW RESCUE ABOVE 75 FT (6TH FLOOR)

1. Fire rescue ladder may not reach beyond 75 feet (6th floor).
2. Do not rely on being rescued from windows about 75 feet (6th floor); follow building fire escape plan.

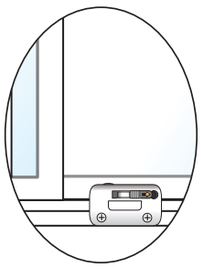
BLOCKS ESCAPE IN FIRE AND EMERGENCY UNLESS RELEASED

1. Follow instructions below to operate WOCD to open window.
2. Never apply padlocks or devices that require a key or tool to unlock them to the WOCD.

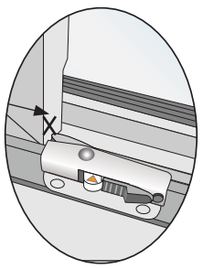
CONFIRM WOCD OPERATION

ENGAGED WOCD

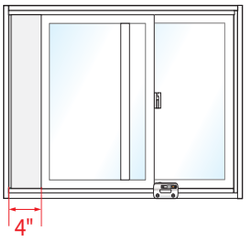
1


Engaged WOCD

2


Move sliding sash toward open position– WOCD will stop it

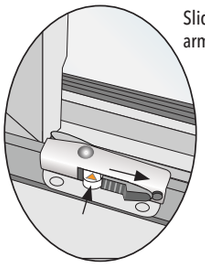
3



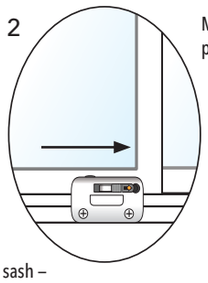
With the WOCD engaged the clear opening cannot exceed 4"

DISENGAGED WOCD

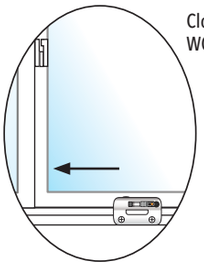
1


Slide tab and push in restriction arm to disengage WOCD

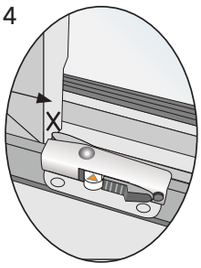
2


Move sliding sash to open position sash past the WOCD

3


Close sliding sash – WOCD will reset

4


Move sliding sash toward open position – WOCD will stop it

⚠WARNING!

- WINDOW OPENING CONTROL DEVICE SHOULD AUTOMATICALLY RE-ENGAGE WHEN SASH IS CLOSED.
- CONFIRM DEVICE RE-ENGAGEMENT AFTER EACH TIME IT IS RELEASED.
- TEACH HOUSEHOLD MEMBERS SIX YEARS OLD AND OLDER HOW TO OPERATE THE RELEASE MECHANISM IN CASE OF AN EMERGENCY.
- CLEAR OPENING MUST BE LESS THAN 4".
- CONFIRM WOCD IS SECURE AND OPERATES CORRECTLY ON A REGULAR BASIS.

© 2014 Pella Corporation

Part Number: 81PU0100