
Pella® Lifestyle Series Triple-Pane Hinged Glass Panel Blind and Shade Instructions

LEAVE FOR HOMEOWNER


⚠ **CAUTION:** On hinged and sliding patio doors, DO NOT remove or cut the white cord that limits the opening of the hinged glass panel. Doing so may cause serious damage, including glass breakage, to your Pella product. The cord should only be detached by a qualified service technician when performing service related procedures.

TABLE OF CONTENTS:

1. Operating the Hinged Glass Panel
2. Bottom Up Slimshade Blind and Cellular Shade Removal and Installation

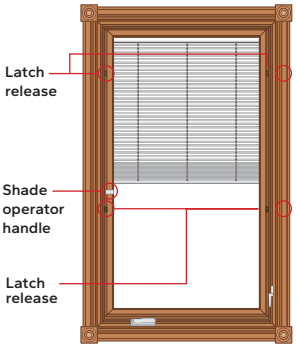

Casement window is shown.

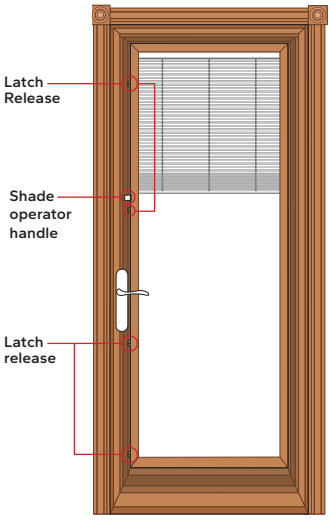

Hinged patio door is shown.

1 OPERATING THE HINGED GLASS PANEL:


Note: Venting Windows go to step A or B. Fixed windows and patio doors proceed to step C.

A. **Awning or Casement window with flat screen:** Remove the flat screen by unlatching the screen clip(s) and pulling the screen to the interior.

B. **Casement window with Rolscreen® Retractable Screen:** Unlock and open the sash to 90° so the hinged panel will not interfere with the Rolscreen. (Or remove the Rolscreen tracks and cartridge.)

C. **Sliding Doors with interior screen:** Slide the flat screen to the other side of the frame so it is not blocking the panel with the HGP or remove the Open Rolscreen® Retractable screen.

D. **Hinge Doors:** Remove the handle set.

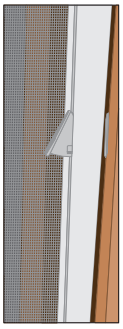


Windows and Patio Door Latch Releases:

E. **Locate the hinged glass panel latch release(s).**


Note: Depending on the product type and size, there may be multiple latch releases on each side, top and/or bottom of the HGP. ***Patio doors with no visible latch release skip step F.***

F. **Insert a small Phillips head screwdriver into the opening in the HGP** release. Press the screwdriver in to release the HGP latch. Repeat on all other latch releases. **Skip steps G - K .**

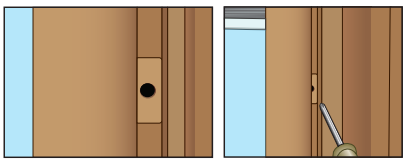


Patio Doors with no visible HGP release:


Note: For latch locations on sliding doors see figures below. Top and bottom latches located only on patio doors with a HGP width greater than 30-1/4".

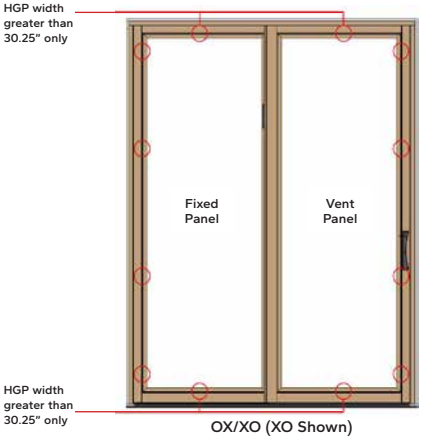


OX/XO (XO Shown)

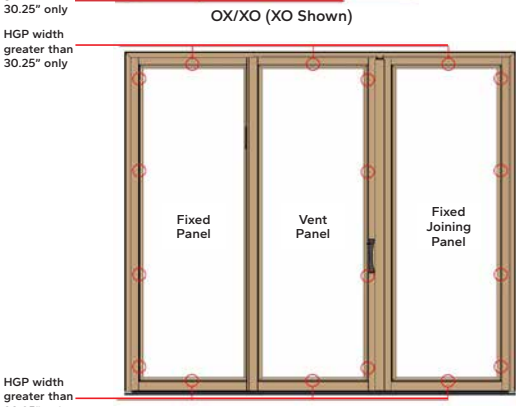

O/XO

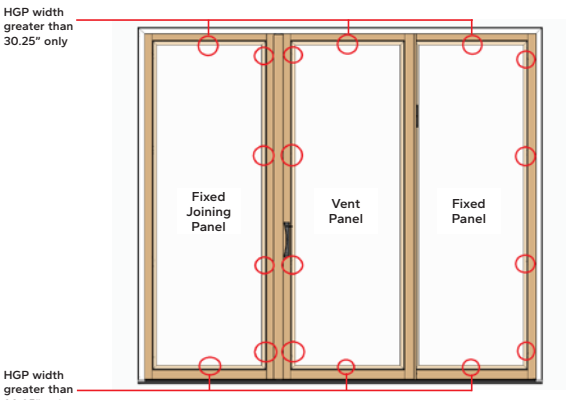

OX/O

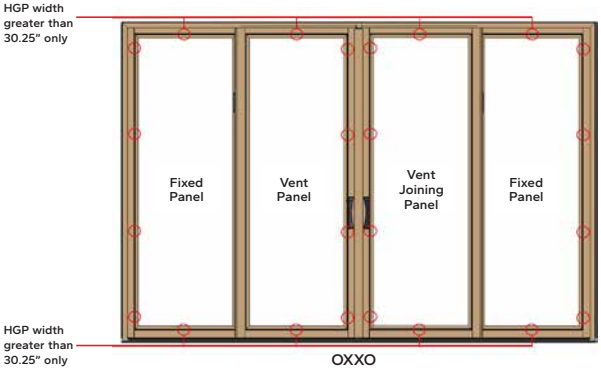

OXXO

© 2025 Pella Corporation

GIF-000000747-5 Part Number: 80ML0108

1 OPERATING THE HINGED GLASS PANEL (CONTINUED):


G. **Locate latches using a flashlight.** Shine the flashlight in the slit beside the HGP. Move the flashlight along the slit to locate each latch.

H. **Insert a small stiff putty knife into the slit.** Angle the putty knife handle toward the HGP. Tilt the putty knife toward the HGP to release the HGP Latch as done in Step G. **Repeat step H until all HGP latches are released.**

Note: If unable to locate latches with flashlight, latches can also be found using a putty knife and the following directions.

I. **Insert a small stiff putty knife into the slit next to the HGP** starting with the top latch located about 3 to 4 inches from the top of the HGP. Angle the putty knife handle toward the HGP to release the HGP Latch.

J. **Insert the putty knife back into the slit.** Angle the putty knife handle toward the HGP.

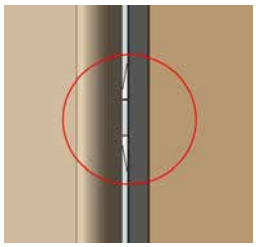




K. **Slide the putty knife down the slit until it hits the next latch.** Tilt the putty knife handle away from the HGP and slide the putty knife down another 1 to 2 inches. Tilt the putty knife toward the HGP to release the next HGP Latch as done in step G. Repeat step H until all HGP latches are released.

Note: The putty knife will be harder to slide at each latch location.

Patio Doors:


Door HGP's hinge on the side and are held open by a restrictor cord in the channel on the top of the HGP.

L. **Open the hinged glass panel.** DO NOT unhook or cut the white cord that restricts the opening of the hinged glass panel.

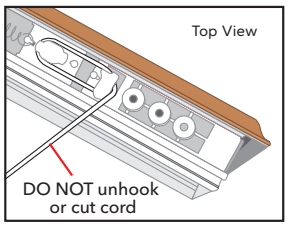

Windows:

Window HGP's hinge at the bottom are held open by the restrictor arm in the channel on the top of the HGP.

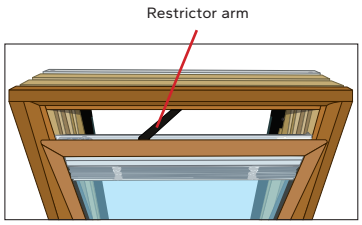



To remove the panel:

M. **Hold the panel with one hand to keep it from falling.**


N. **Release the restrictor arm** with the other hand while continuing to hold the panel with the other hand.

O. **With both hands holding the panel,** tilt it downward until it can be removed (about 35 to 45 degrees).

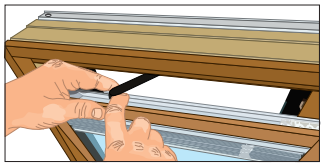

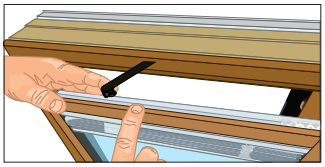


Windows (continued):

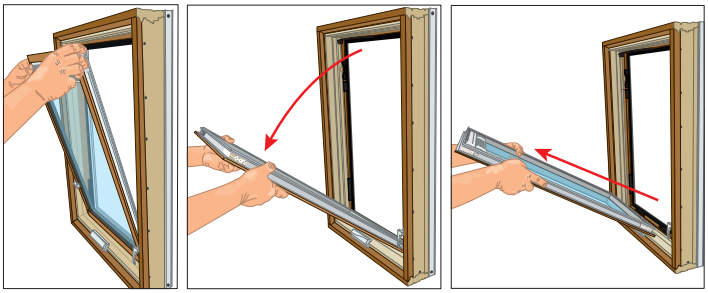



Note: When re-installing HGP, hold the panel until the restrictor arm is re-attached.

To install the panel:


P. **Position the HGP centered in the sash above the HGP locking lugs** holding the HGP at approximately a 5° angle. Lower the HGP over the top of the hinge locking lugs.

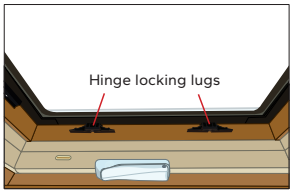


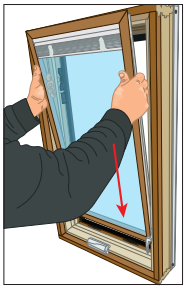


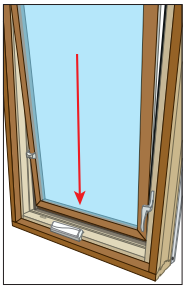


Q. **Tilt the HGP down to approximately a 30° angle** and an audible click will be heard, signaling the HGP is correctly locked on the hinge locking lugs and can then be tilted back up to the upright position.

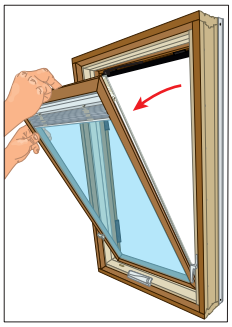


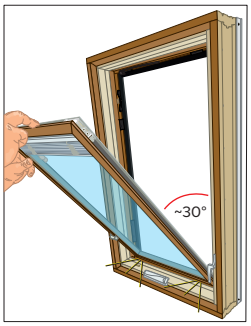

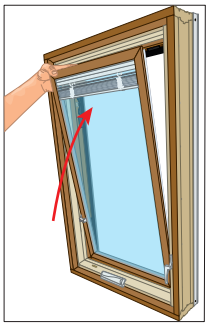

R. **Insert the end of the restrictor arm into the top of the HGP.**

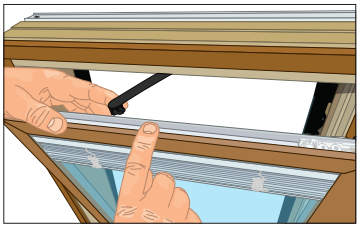

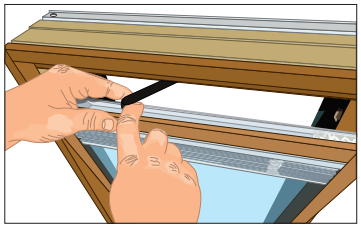





1 OPERATING THE HINGED GLASS PANEL (CONTINUED):

Windows and Patio Doors:


S. **Close the hinged glass panel,** noting the latch locations. Press firmly on the hinged glass panel frame at the latch locations until you hear a click which indicates the latch has engaged.

Note: Ensure all latches are engaged.

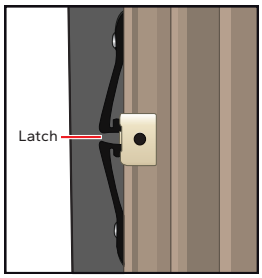

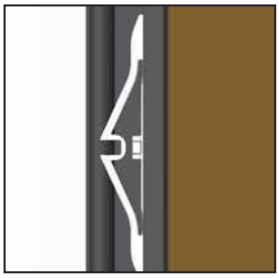

2 BOTTOM UP SLIMSHADE® BLIND AND CELLULAR SHADES:

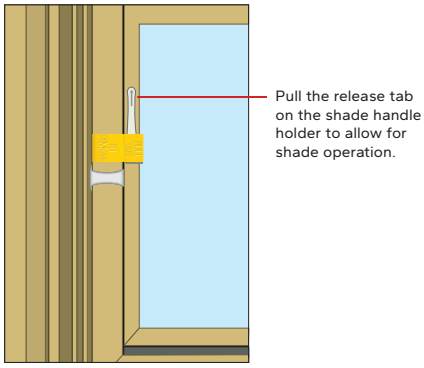

Note: Remove the protective strips at the top of the HGP located near each side.

Note: Follow the steps in Instruction 1 to open the hinged glass panel.


Removal:


A. **Place the blind/shade in the full open position**.

B. **For shades 47" or wider only:** Remove the shade support clip located near the center of the shade mounting channel. Remove the clip from the bottom of the mounting channel, then remove the clip from the hinged glass panel.


C. **Release the blind/shade** from the mounting stud by pulling the plastic tab.

D. **Remove the blind/shade head rail** from the drive gear and second mounting stud by sliding it away from the operator side of the hinged glass panel.

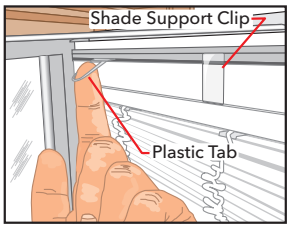

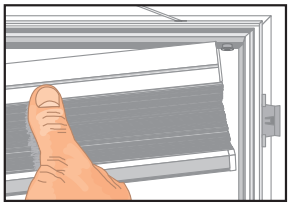

2 BOTTOM UP SLIMSHADE® BLIND AND CELLULAR SHADES (CONTINUED):

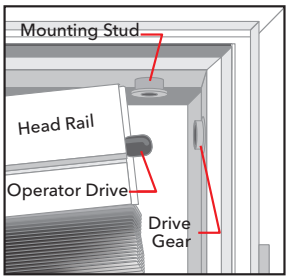

Installation:


E. **Make sure the shade operator handle is near the bottom** of the hinged glass panel. This allows for full travel of the operator handle to raise or lower the blind/shade completely.

F. **To install the blind/shade,** slide the operator end of the top rail over the mounting stud, while guiding the operator drive into the drive gear. It may be necessary to move the shade operator handle up slightly to help align the gear.

G. **Press the opposite end of the rail** over the second mounting stud.

Note: Bottom-up cellular shades may appear to be too short for the unit. The shade will lengthen after hanging in the down position for a few hours. If the shade does not hang straight, open and close it completely two to three times.

H. **For shades 47" or wider:** Attach the shade support clip to the top of the hinged glass panel near the center of the hinged glass panel. Next, lift up on the shade head rail, to engage the clip.

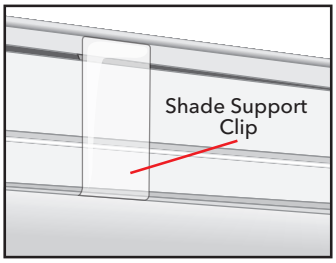

WARNING

Cords can loop around a child's neck and strangle. To keep cords out of children's reach, keep children away from window or door while the movable inner glass is open.

© 2025 Pella Corporation

GIF-000000747-5 Part Number: 80ML0108