IMPORTANT SAFETY INFORMATION

Window Opening Control Device (WOCD)

81PH0101

NOTICE

THIS IMPORTANT SAFETY INFORMATION MUST BE LEFT WITH THE BUILDING OWNER AND A COPY FOR ANY SUBSEQUENT OCCUPANT(S) IN THE DWELLING WHERE THE WINDOW OPENING CONTROL DEVICE WILL BE INSTALLED.

1761 WINDOW OPENING CONTROL DEVICE

The window opening control device (WOCD) is designed to assist in protection against accidental falls by children five (5) years old and younger and is not a substitute for attentive supervision of all young children. This window opening device is not a security device that provides intrusion protection. Failure to correctly install and engage the WOCD may result in falls or injury. Window must be unlocked and the WOCD disengaged to allow for emergency exit. CONFIRM DEVICE RE-ENGAGEMENT AFTER EACH TIME IT IS DISENGAGED. This WOCD complies with ASTM F2090.

⚠ WARNING



Possible Fall Hazard

- The window opening control device is designed to protect against accidental operation of windows by children five years and younger.
- This window opening control device is not a substitute for attentive supervision of all young children.
- Keep window opening control device properly engaged unless needed for use in an emergency.


⚠ WARNING



No Window Rescue above 75 ft. (6th floor)

- Fire rescue ladder may not reach beyond 75 ft. (6th floor).
- Do not rely on being rescued from windows above 75 ft. (6th floor).
- Follow building fire escape plan.

⚠ WARNING

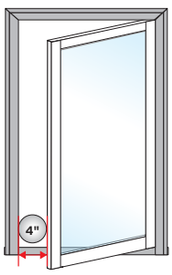

Opening must be < 4".

Possible Fall Hazard

- Young children may fall out of the window if all installation instructions are not followed and the WOCD is not installed correctly.
- Install the device so that a rigid 4 in. (102 mm) diameter sphere does not pass through any space at the lowest opening portion in the window opening after the WOCD is in place.
- Use recommended materials and techniques.
- Make sure the WOCD is securely installed in accordance with manufacturer's instructions.
- Make sure the window frame is in good condition.

⚠ WARNING



Blocks Escape in Fire and Emergency Unless Released

- Follow instructions below to properly operate the window opening control device to fully open window sash.
- Never apply padlocks or devices that require aw key or tool to unlock them to the release mechanism of the window opening control device.

FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS MAY RESULT IN SERIOUS INJURY OR DEATH.

Additional Important Safety Information

- Window opening control device should automatically re-engage when sash is closed.
- CONFIRM DEVICE RE-ENGAGEMENT AFTER EACH TIME IT IS DISENGAGED.
- All household members six (6) years old and older should know how to operate the release mechanism on case of an emergency.
- The release mechanism and releasable window opening control device should be tested on a monthly basis (once a month). After testing, the WOCD should be closed securely.

Instructions on Proper Release and Engagement of Window Opening Control Device (WOCD)

DISENGAGE Window Opening Control Device:

1



Push **RED** release button on WOCD.

2



Slide release up.

3



Continue to hold release up and crank the window to release WOCD arm from track.

4



With arm released, window can be fully opened.

RE-ENGAGE Window Opening Control Device:

1



Crank window closed.

2



Stud on WOCD arm should align with slot in black housing.

3



Device should re-engage automatically at or near the fully closed position.

4



Crank window open to confirm engagement.

© 2025

GIF-000000915-3 Part Number: 81PH0101