Out-Swing Door Adjustable Hinge Replacement

SERVICE INSTRUCTION

These instructions apply to:

Pella® Front Doors – Clad Wood (COS07) 2026 - Current
Pella® Reserve 2017 - Current
Architect Series® 08/2006 - 04/2024
Designer Series® 02/2007 - 12/2018

Tools Required:

- 1/8" Allen wrench
- Phillips head screw driver
- T20 Torx wrench

Note: Adjustable hinges are **NOT** retrofitable on previous vintages or other brands of doors not listed above.

1 Removing the Hinges:


A. **Remove the screws** from the frame hinge leaf.


B. **Remove the top and bottom screw** from the panel hinge leaf.

C. **Designer Series 08/2006 - 05/2013, Architect Series 02/2007 - 01/2011:** Use 1/8" Allen wrench to loosen the center screw on the panel leaf so the hinge leaf clears the hinge rout.


Pella® Front Doors Clad Wood (COS07) 2026 - Current Pella® Reserve 2017 - Current, Architect Series 02/2011 - 04/2024, Designer Series 05/2013 - 12/2018: Use a T20 Torx wrench to loosen the center screw on the panel leaf so the hinge leaf clears the hinge rout.

D. **Lift the hinge leaf off the center screw.** If needed, remove center screw.

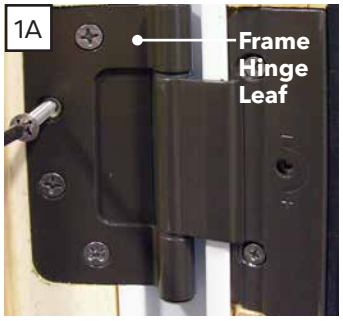

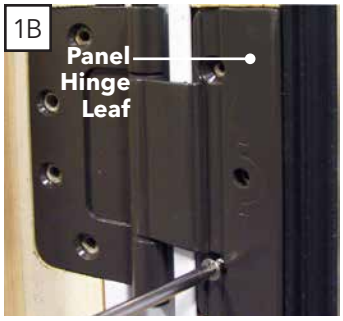



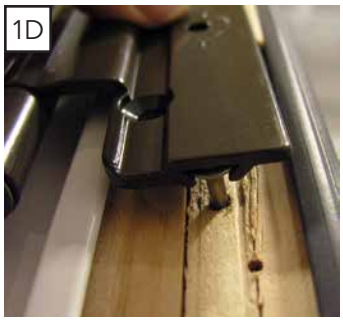

2 Installing the Hinges:

A. **Install hinge** by performing steps 1A-1D in reverse order.

B. **Adjust the reveal if needed.** The hinges can be used to move the panel side to side by moving all hinges in the same direction or the hinges can slightly rotate the panel by adjusting the hinges in opposite directions. Using a T20 Torx wrench, turn the center screws clockwise (+) to increase the space (gap) between the hinge side of the frame and the door panel. Turn the center screw counter-clockwise (-) to decrease the space (gap) between the hinge side of the frame and door panel.

Note: The top and bottom hinge screws must not be loosened during center screw adjustment.

