Astragal Replacement for Out-Swing French Door

SERVICE INSTRUCTION

These instructions apply to:


Pella® Front Doors Clad Wood (COS07) 2026 - Current
Pella® Reserve 2017 - Current
Architect Series® 2/2011-04/2024
Designer Series® 5/2013-03/2019

Tools Required:


- Stiff blade putty knife or flat-blade screwdriver
- Powered driver with a #2 Phillips bit

1 Astragal Removal:

A. **Cut the finish between the astragal and the panel.**

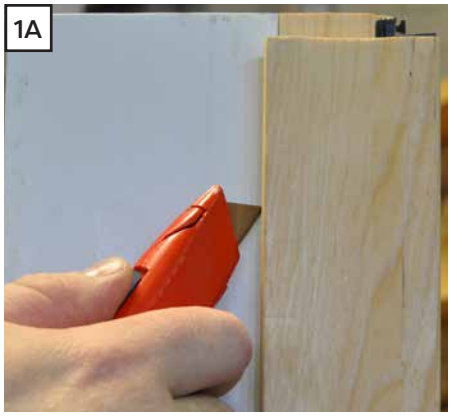

B. **With the Passive panel open, pry the astragal weatherstrip out of the kerf** and remove from the astragal. Set weatherstrip aside to be re-used.

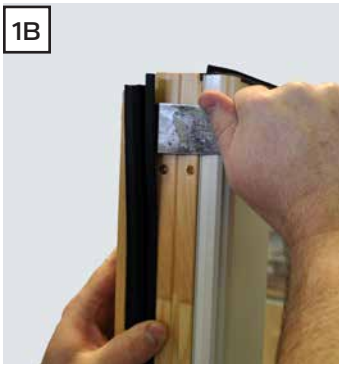



C. Remove inactive flushbolt handles; remove attachment screws from each flushbolt handle, remove from astragal.







© 2019 Pella Corporation