Threshold Replacement for Out-Swing French Door

SERVICE INSTRUCTION

These instructions apply to:

Pella® Front Doors – Clad Wood (COS07) 2026 - Current
Pella® Lifestyle Series Triple-Pane 04/2019 - Current
Pella® Reserve 2017 - Current
Architect Series® 2/2011 - 04/2024
Designer Series® 5/2013 - 03/2019

Tools Required:

- Stiff blade putty knife or flat-blade screwdriver
- Staple gun with 1/2 crown staples
- #2 Phillips screwdriver
- Utility knife
- Sealant gun with sealant
- Small pry bar
- Side cutters
- Brad nail gun

Note: Threshold replacement can be accomplished without removing a jamb frame stop, but threshold replacement is more straightforward if one of the jamb frame stops are removed prior to replacing the threshold.

Table Of Contents

Jamb Frame Stop Removal..... Page 1
Threshold Removal..... Page 2
Threshold Installation ..... Page 4
Frame Stop Installation ..... Page 5



6/11/18 - Threshold profile slight change and addition of black composite threshold option. Replacement procedure is the same as shown in the following steps.

1 Jamb Frame Stop Removal:


A. **Remove the frame weatherstrip(s).** Use a putty knife or straight blade screwdriver to pry the weatherstrip from the kerf in the door frame. There will be one staple near the sill and one near the head on jamb weatherstrip to be removed. Head weatherstrip on curved head doors have staples every 4" across the head.



B. **Remove weatherstrip from kerf.** When one end is loosened, pull the weatherstrip from the kerf.





C. **Cut the finish between the stop and the frame**.

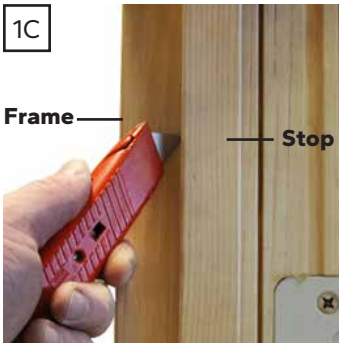


1 Jamb Frame Stop Removal (continued):

D. **Remove the frame stop(s)**. Use a stiff blade putty knife or small pry bar to pry the stop from the frame.

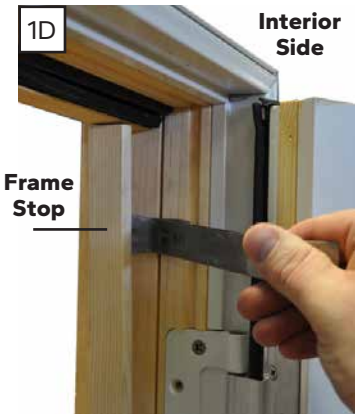


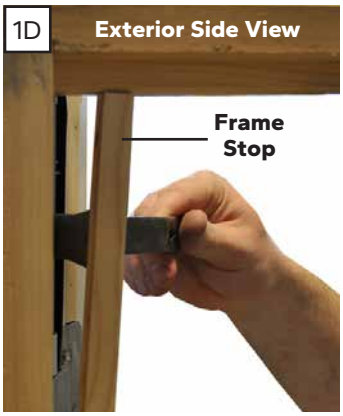

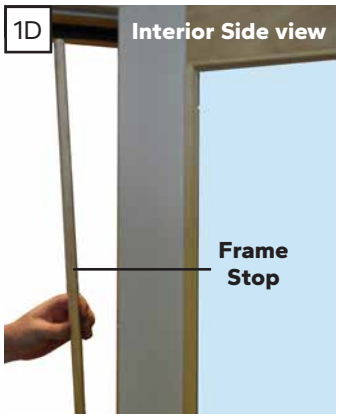





E. **Cut the stop staples.** Use a side cutter to clip off the stop nails/staples.

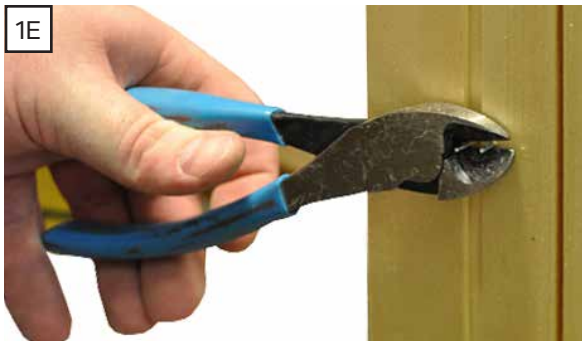

2 Threshold Removal:

A. **Loosen the threshold screws.** Use a Phillips screwdriver to loosen the threshold screws. Save screws to use on replacement threshold.

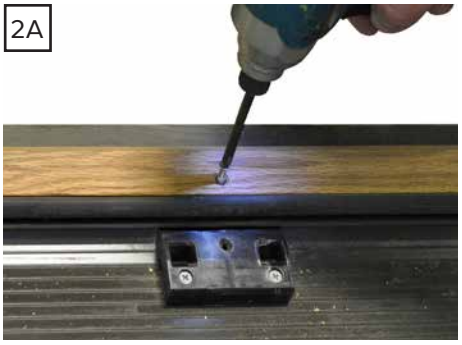

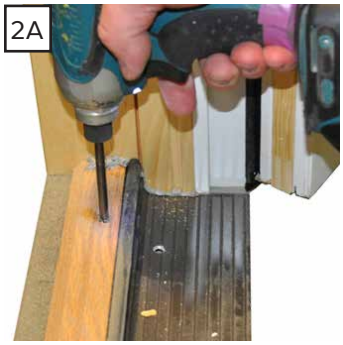

B. **Remove the threshold.** Begin on one end by prying up on the threshold with a stiff putty knife or small pry bar.



2 Threshold Removal (continued):


C. **Cut the butyl.** Once an end is pried up, work across the length of the threshold, prying up and cutting the butyl along the way.



D. **Lift the threshold off the sill.**



E. **Clean any remaining butyl off the sill.**

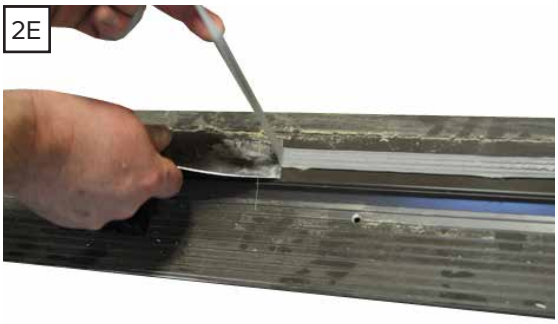



F. **Remove the threshold weatherstrip.** When the threshold is removed, it is easier to remove the threshold weatherstrip.



3 Threshold Installation:

A. **Apply sealant to the sill.** Apply a 3/8" diameter bead of sealant across the length of the sill at the junction of the sill metal and wood.

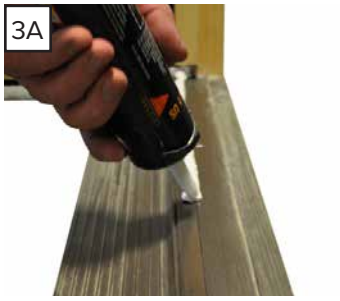

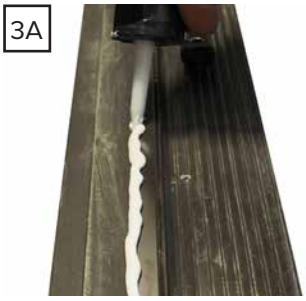




B. **Apply sealant to the threshold.** Place sealant on top of the threshold end that will be installed under the frame stop that was not removed.




C. **Install the threshold.** Insert one end under the jamb frame stop and position it against the frame in the same orientation as the removed threshold. Tilt the other end of the threshold down on to the sill. It may be necessary to pull up on the threshold near the center to bow it slightly to allow the other end of the threshold to be positioned against the opposite jamb. Press down on the threshold to seat it into place and ensure proper contact with the sealant.

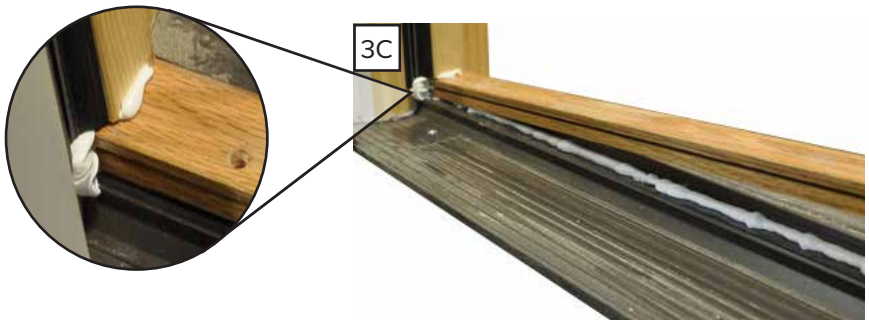



D. **Install the threshold screws.** Insert the screws into the pre-drilled holes in the threshold and tighten to secure the threshold in place.



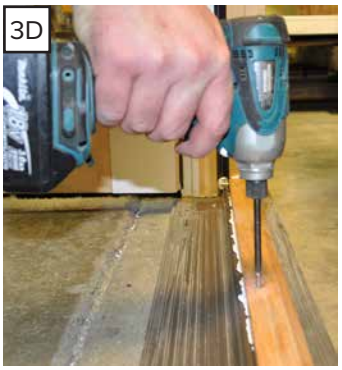

3 Threshold Installation (continued):

E. **Clean off sealant squeeze-out.** Clean any sealant squeeze-out off the sill.




Note: Threshold weatherstrip varies by vintage.

Pella® Front Doors Clad Wood (COS07) 2026 - Current Pella® Lifestyle Series Triple-Pane 04/2019 - Current, Pella® Reserve 2017 - Current, Architect Series®, Designer Series® 5/2013 - 03/2019:
The cross section view shows the barb in the threshold weatherstrip. The barb is installed into the kerf in the side of the threshold.

Architect Series 02/2011 - 5/2013:
The cross section view shows the two barbs on the threshold weatherstrip. One barb is installed down into a kerf in the metal portion of the sill and the other barb goes into the kerf in the side of the threshold. Both of these barbs need to be released from the kerfs to remove the weatherstrip.




5/2013 - Current

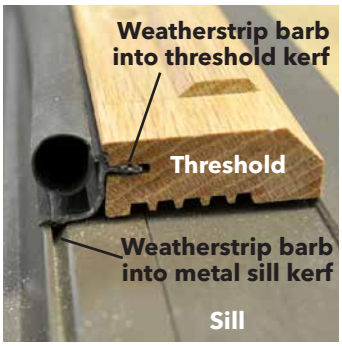

02/2011 - 5/2013

Pella® Front Doors Clad Wood (COS07) 2026 - Current, Pella® Lifestyle Series Triple-Pane 04/2019 - Current, Pella® Reserve 2017 - Current, Architect Series 2011 - 04/2024, Designer Series 5/2013 – 03/2019:

F. **Starting at one end,** insert the weatherstrip barb into the threshold. Push it in along the entire length of the threshold.

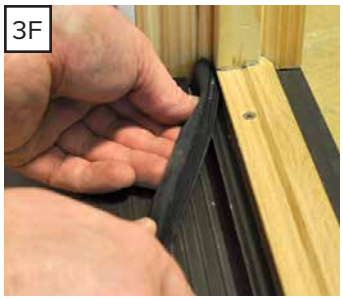






Architect Series 02/2011 - 5/2013 only:

G. **Next, push down on the weatherstrip** along the full width of the sill to seat the bottom weaterhstrip barb into the metal sill kerf.

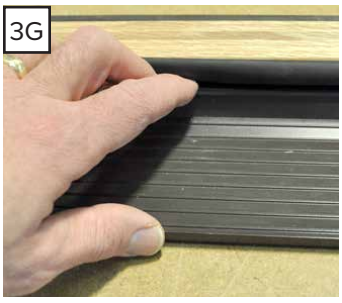

4 Frame Stop Installation:

A. **Place a dab of sealant on top of the threshold** where the frame stop will be installed.



B. **Position the stop on one end of the frame** and tilt to stop into place.






C. **Nail the stop in place along the length of the stop** locating nails every 10" to 14" on center.



D. **Beginning near the sill end;** insert the weatherstrip into the kerf in the same orientation as removed, press it into place along the length of the weatherstrip.



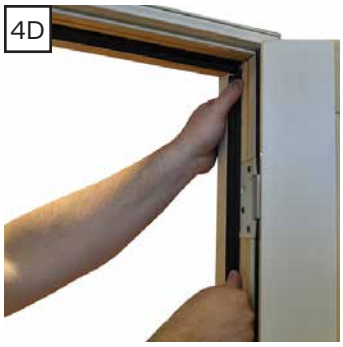

E. **Insert one staple into each end of the weatherstrip**.

