Adjustable Hinge Door Panel Replacement

SERVICE INSTRUCTION

These instructions apply to:

Pella® Front Doors Clad Wood (CIS08, COS07) 2026 - Current
Pella® Reserve 2017 - Current
Pella® Lifestyle Series Dual-Pane 04/2019-Current
Pella® Lifestyle Series Triple-Pane 04/2019-Current
Architect Series® 02/2007–04/2024
Designer Series® In-Swing 07/2006–03/2019
Designer Series® Out-Swing 09/2006–12/2018
Pella® 450 Series 05/2015-12/2018

Tools Required:

1/8" Allen wrench
Phillips Screwdriver
T20 Torx Bit

Supplies Needed:

Replacement Panel

Note: Adjustable hinges are NOT retrofitable on previous vintages or other brands of doors not listed above.


CAUTION!

Weight and size of panel may require two or more persons during removal and replacement process.


1 Removing The Panel

A. Open door, starting with the lowest hinge, remove all the screws from the frame hinge leafs of each hinge releasing the panel from the frame.

B. Remove the top and bottom screw from the panel hinge leaf.

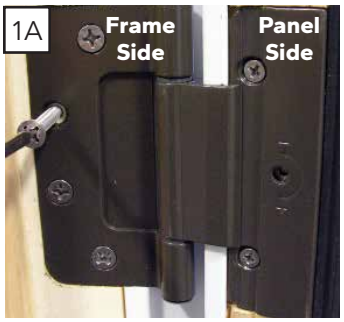

Out-Swing Door

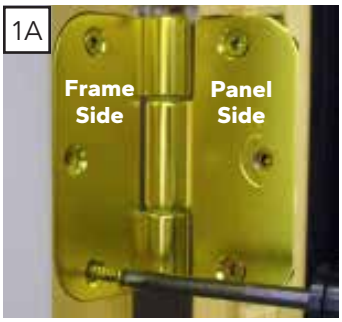

In-Swing Door

C. Use appropriate tool for screw head type:(1/8" Allen wrench or T20 Torx bit) to loosen the 1C center screw on the panel leaf so the hinge leaf clears the hinge route.



Out-Swing Door



In-Swing Door

© 2015 Pella Corporation