Jamb, Head and Astragal Weather Strip Replacement
Service Instruction

These instructions apply to:
Entry Door Model 1: 2000
Entry Door Model 2: 2001-Current

Tools Required:
- Putty knife
- Flathead screw driver


Supplies Needed:
- Weather strip

1 Removing Frame Weather Strip:

A. Open door panel.

B. **2000-2003:** Remove the staples holding the weather strip in place.

2004-Current: Place a putty knife between the frame and the weather strip; pry the weather strip out of the frame weather strip kerf.

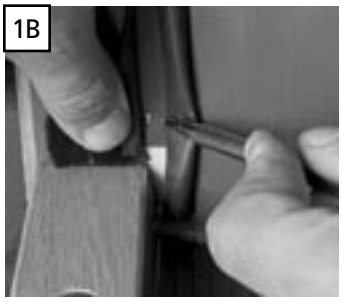

Model 1 (2000)



Model 2 (2001-2003)



Model 2 (2004-Current)

C. Gently pull on the weatherstrip. It should release from the kerf.



Model 1 (2000)



Model 2 (2001-2003)



Model 2 (2004-Current)

© Pella Corporation 2007

Rev. 04/24/07 **Part Number: N/A**

2 Installing Frame Weather Strip (All Vintages 2000-Current):

Note: Beginning in June 2005, all door frames are sent from the factory with "Long Reach" weather strip on the astragals, head and lock jambs. The hinge jamb weather strip is standard. Replacement weather strip sets contain long reach weather strip for the head and lock jamb and standard weather strip for the hinge jamb. Astragal weather strip is NOT included in the sets. Separate replacement standard and long reach weather strip pieces are also available.

A. The head weather strip extends the full width of the frame, jamb to jamb. The jamb weather strip goes up against the head weather strip and down to the sill. If needed, cut the replacement weather strip to the correct length.

B. If replacing both jambs and head weather strip, install the head weather strip first. Beginning at one end, place the barbs of the weather strip into the kerf on the frame. Press the weather strip into place to fully seat it in the kerf.

2B



2B

