SERVICE INSTRUCTION

Door Handle and Lock Replacement, and Lock Throw Adjustment — Sliding Patio Door

Tools Required:

- Phillips #2 or #3 screwdriver
- Flat blade screwdriver

Two or more people will be required for the following instruction!

NOTE: Remember to work safely while doing any maintenance or repair. This includes wearing safety glasses and using safe work practices. Make sure your work area is unobstructed and clear of window coverings, etc..

1 Door Handle and Lock Replacement:


A. Unlock and open door panel. From the interior, remove the two handle attachment screws using a Phillips head screwdriver and remove door handle(s) from the door panel.








B. Remove The two lock attachment screws and remove lock.

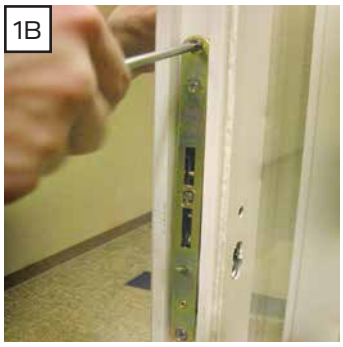



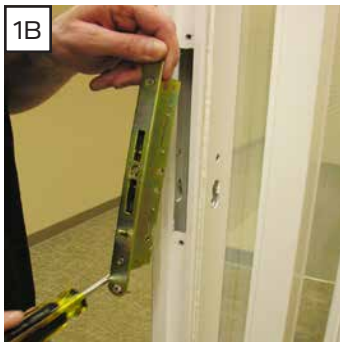

©2021 Pella Corporation

1 Door Handle and Lock Replacement (Continued):

C. Insert lock into lock cut-out in edge of door panel. Align the screw holes in the lock with the holes in the edge of the panel and install attachment screws.






D. Insert handles and attach with attachment screws.

Screw Length:

1-7/8" thick panel = 2-1/8"


1-1/2" thick panel = 1-3/4"



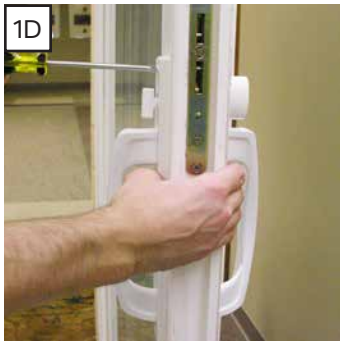


2 Lock Throw Adjustment:

A. Unlock and open door vent panel. Press the lock release button while operating the thumbturn to extend the lock latches to the locked position.

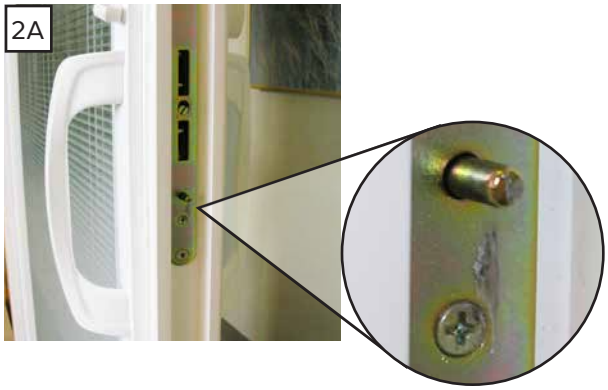



B. Locate the throw adjustment screw on the lock between the two latches. Use a flat blade screw driver to turn the throw adjustment screw to adjust the throw. Turn the screw clockwise to adjust the latches so they extend further out. Turn the screw counter-clockwise to reduce latch extension. Operate thumbturn to retract the latches. Close vent panel and operate thumbturn to test door lock.

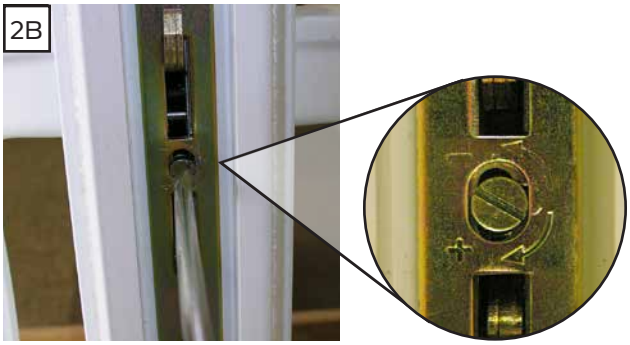

©2021 Pella Corporation