Pella® 250 Series Sliding Patio Door Fixed Sill Filler and Sill Anchor Replacement

Service Instruction

These instructions apply to:

Pella® 250 Series Sliding Patio Door 07/2019 - Current

Tools Required:

- Flat blade screwdriver
- #2 Phillips screwdriver with 6" shaft

1 Fixed Panel Removal:

A. Unlock and open vent panel 6" - 10".





B. Lift panel 1" vertically to allow the bottom to come out of the track toward the interior and remove vent panel from frame.

Place panel in a safe location.





© 2019 Pella Corporation

GIF-000002286-Part Number: V988167

1 Fixed Panel Removal (Continued):

C. Use a hook tool or flat blade screwdriver to lift one end of the threshold cover out of the track. Remove the threshold cover.





D. Remove attachment screws of top and bottom interlocker covers and remove the covers.











E. Lift fixed panel 1" and pull bottom of panel toward the interior and remove from frame.





© 2019 Pella Corporation


2 Sill Filler Replacement:

A. Use a hook tool or flat-blade screwdriver to start the sill filler removal, remove the filler.





B. Insert the sill filler into the exterior sill track. Make sure the sill filler does not block the weep hole.

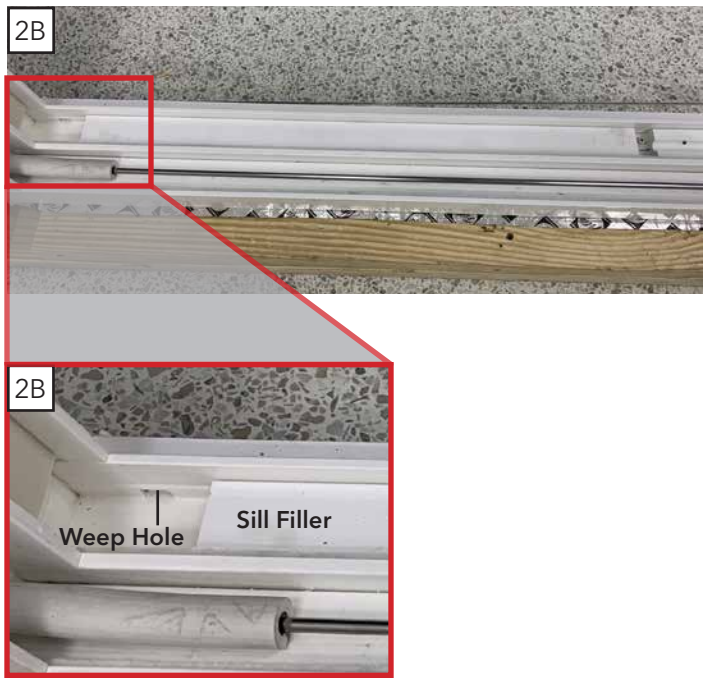

3 Sill Anchor Replacement:

A. Remove the 4 sill anchor attachment screws, use a hook tool to remove the anchor.








B. Insert the sill anchor aligning the anchor holes with the holes in the sill. Install the 4 attachment screws.





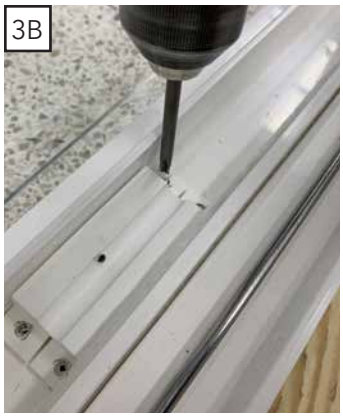

C. Reinstall the fixed and vent panels performing steps 1A - 1E in reverse.