Hinged Door Hinge Replacement

SERVICE INSTRUCTION

These instructions apply to:

Vinyl Hinged Door 05/2024 - Current

Tools Required:

- Allen wrench #3
- Phillips screwdriver
- Suction cups

1 Panel Removal:

A. Open the panel until it clears the frame then lift the panel from the hinges. Using suction cups is recommended. Place the panel in a safe location.










2 Frame Hinge Removal:

A. Remove the frame hinge attachment screws.






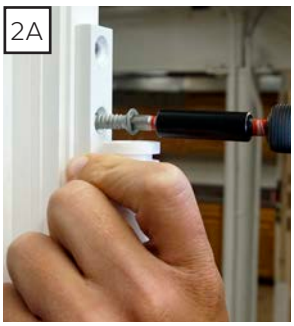

B. Remove the frame hinge from the frame.



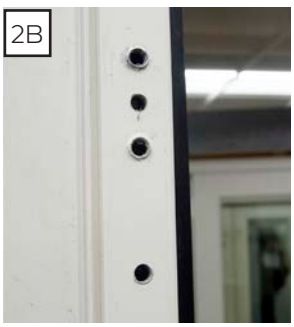

© 2026

GIF-000003015-1 Part Number: V989717

3 Frame Hinge Installation:

A. Install the frame hinge onto the frame by aligning the hinge studs with the holes on the frame.









B. Install the frame hinge attachment screws.








4 Panel Hinge Removal:

A. Loosen set screw using a #3 Allen wrench.





B. Remove the hinge cap by sliding it off.

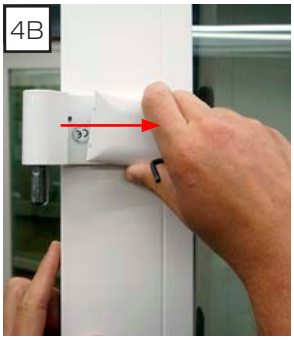


4 Panel Hinge Removal (continued):

C. Remove the panel hinge attachment screws and remove the hinge.

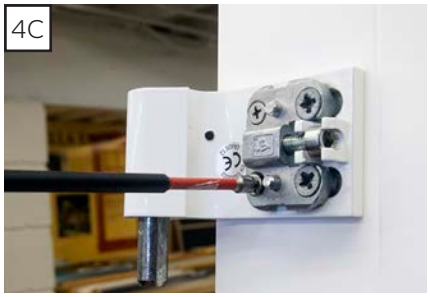


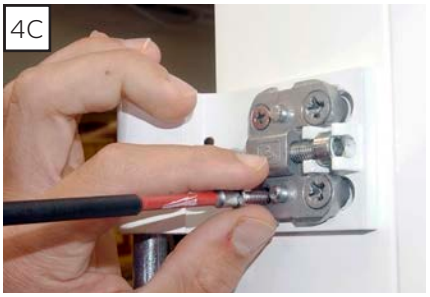

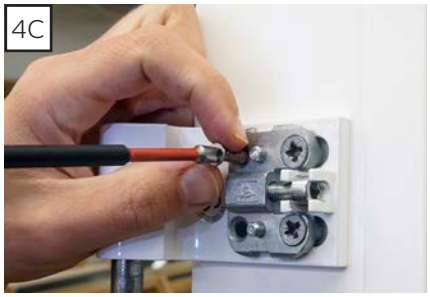





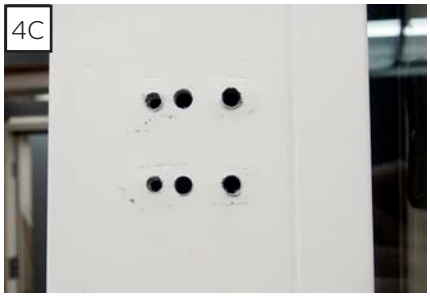


5 Panel Hinge Installation:


A. Install the panel hinge onto the panel by aligning the hinge studs with the holes in the panel.






B. Install the panel hinge attachment screws.

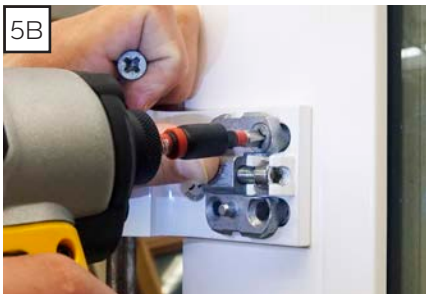

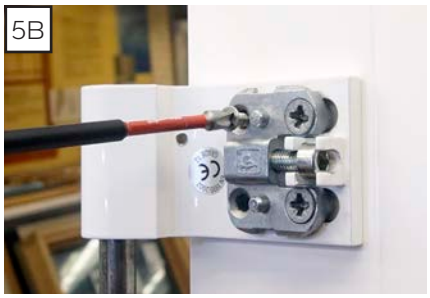



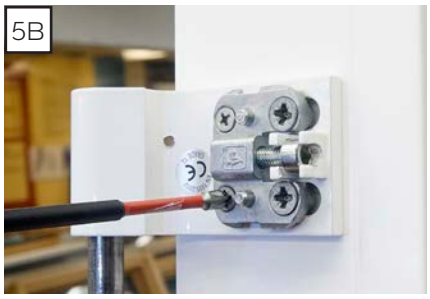

5 Panel Hinge Installation (continued):

C. Install the panel hinge cover by sliding it into position over the hinge attachment screws.



D. Tighten the hinge set screw on the back side of the panel hinge.



6 Panel Installation:

A. Install the panel by aligning the panel hinge pins with the frame hinge mounts and lower the panel onto the frame hinge mounts.













6 Panel Installation (continued):

B. Tighten the hinge set screw.



Tip: Tighten the screws after checking the reveals to allow for adjustments.

C. Close and lock the door panel and check the reveals.

If any panel adjustments are needed; see Supporting Documents – ***Hinge Door Side-to-Side Adjustment or Hinge Door Height Adjustment***.