Pella® 250 Series Standard and Premium Sliding Patio Door Lock Throw Adjustment

Service Instruction

These instructions apply to:

Pella® 250 Series Standard and Premium Sliding Patio Door 05/2024 - Current

Pella® 250 Series Standard and Premium Multi-Slide Patio Door 05/2024 - Current

Tools Required:

• Flat blade screwdriver

NOTE: Standard lock throw adjustment shown.

1 Lock Throw Adjustment:


Double screw adjustment: Each adjustment works independently for each hook. Clockwise will move the one hook further from the panel and counterclockwise will move it closer to the panel.

A. With the door unlocked and open, depress the anti-slam button and turn the thumbturn to extend the lock hooks.





B. Starting on the adjustment screw by the top hook, turning the screw counterclockwise will move the one hook closer to the panel; turning the screw clockwise will move it further from the panel.

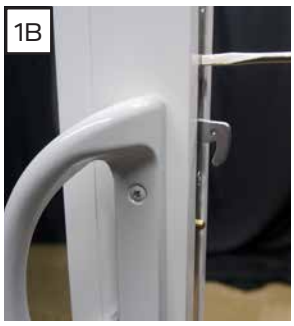





C. The lower hook is adjusted in the same manner.







D. Close and lock the door to test the lock works properly; adjust as needed.

© 2024 Pella Corporation

GIF-000003035- Part Number: V989755

1 Lock Throw Adjustment (continued):

Single screw adjustment (Premium Door): Clockwise will move both hooks further from the panel and counterclockwise will move them closer to the panel.



© 2024 Pella Corporation