SERVICE INSTRUCTION

Double-Hung Upper Vent Stop Replacement

Tools Required:

- Masking Tape
- Putty knife

Supplies Needed:

- Upper vent stop

Note: Remember to work safely while doing any maintenance or repair. This includes wearing safety glasses and using safe work practices. Make sure your work area is unobstructed and clear of window coverings, etc..



Standard Upper Vent Stop




Window Opening Control Device

1 Removing The Upper Vent Stop:

A. Position a piece of masking tape directly above the Upper Vent Stop to protect the sash.



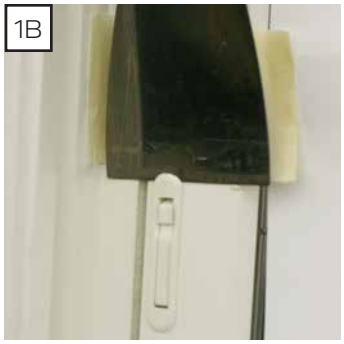


B. Place the putty knife between the top of the Vent Stop and the sash and gently push down to release the stop.

C. Pry the top of the Upper Vent Stop out of the sash stile with the blade of the putty knife.





D. Install by placing the bottom vent stop “groove” on the edge of the slot, then push the top in. Remove the tape.

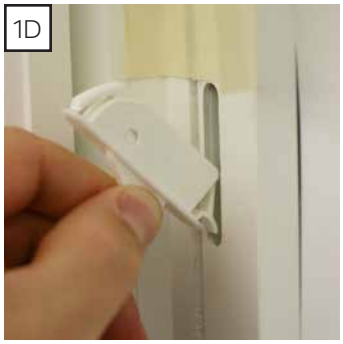





© 2025 Pella Corporation