Sliding Patio Door Lock Keeper Replacement

SERVICE INSTRUCTION

03/2026-Current

Tools Required:

- #2 Phillips screwdriver

1 Lock Keeper Replacement:

A. **Unlock and open vent panel 6" - 10"**.

1A



1A



Note: The keeper may look different depending on the door model, but the steps and overall process remain the same.

B. **Remove the attachment screws and remove the keeper**.

1B



1B



1B



1 Lock Keeper Replacement (continued):


C. **Install the keeper using the existing screw holes.** Insert screws in the slotted holes in the keeper, do not fully tighten.





D. **Confirm the keeper and lock align.** If needed, adjust the lock strike up or down to align with vent panel lock.

Tighten the two screws when alignment is complete.

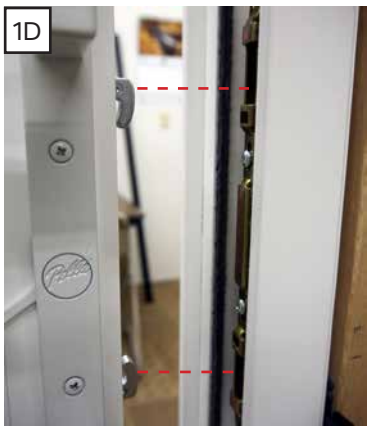

E. **Tighten the screws**.



