VINYL WINDOWS AND DOORS

Manufactured by Pella Corporation

Questions? Call 1 (800) 374-4758

SERVICE INSTRUCTION

Casement Hinge Track Adjustment

These instructions apply to:

Pella® 250 Series Awning/Casement 4/2018 - Current

Tools Required:

- Casement Adjustment Wrench or 7/16" Wrench

Note: Remember to work safely while doing any maintenance or repair. This includes wearing safety glasses and using safe work practices. Make sure your work area is unobstructed and clear of window coverings, etc.

1 Casement Hinge Track Adjustment:

An adjustment wrench is used to rotate the hinge adjustment stud to the left or right. Adjust head/sill hinge adjustment stud for minor adjustments to square the sash relative to the window frame.

By rotating the studs of the head and sill hinges in the same direction the sash can be moved towards the hinge side or away from the hinge side. By rotating the studs of the head and sill hinges in opposite directions (or by adjusting only one of the hinge studs) the sash lock side will be moved upwards or downwards.


The hinge adjustment stud feature located on the hinge slide/track.

A. Remove the screen by disengaging the screen clips and lifting out of the frame. Unlock sash and open to its fully open position.





B. Lift to remove the hinge arm from the stud on the hinge slide. (Sill hinge slide/track and hinge arm shown.)

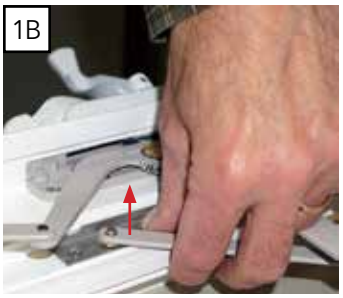



© 2018 Pella Corporation

Part Number: V987386

1 Casement Hinge Track Adjustment (continued):

C. Use the wrench to rotate the hinge adjustment stud to the left or right.







D. Position the hinge arm over the hinge slide stud and press into place over the stud.





E. Repeat B-D on Head hinge slide/track adjustment stud.

F. Crank window closed, fold down crank and engage lock.

Install the screen and engage the screen clips.

