



INSTALLATION INSTRUCTION - APPLYING CLAVOS TO A RUSTIC PANEL

Lea las instrucciones en español en el reverso.

Please read instructions thoroughly before beginning application.

Note: Clavos may be applied to painted, stained or unfinished door panel.

1 Installing Clavos:

- A. **Clean area(s) on panel** with Isopropyl Alcohol where each Clavos are to be applied. The area must be dry before Clavos can be applied.
- B. **Select the appropriate template based on panel type.** (See chart below and templates on following pages.) Cut out the appropriate template including the correct clavos pattern. Template A, B & C should be aligned on plank as shown.

Template A	Template B	Template C
Plank 1 - Panel Arch	Solid Plank Panels	2-Panel Curve, (Left side 2 outer planks, flip template for Right side 2 outer planks)
Plank 2 - Panel Arch		
Plank 2 - Panel Curve (Bottom 3 rows and top center plank)		

- C. **Prior to removing the red backer tape**, place Clavos on panel and verify the position.

Note: The Clavos is not perfectly round. Rotating the Clavos may enhance the appearance.

- D. **Remove the backer tape and place Clavos on the panel** through hole in template.

Note: Once positioned it is extremely difficult to remove and reposition without damaging the adhesive. Trying to remove the Clavos may damage the finish of the panel.


- E. **Firmly press the Clavos on the panel** and apply pressure for ten (10) seconds.



Top Of Plank




Bottom Of Plank

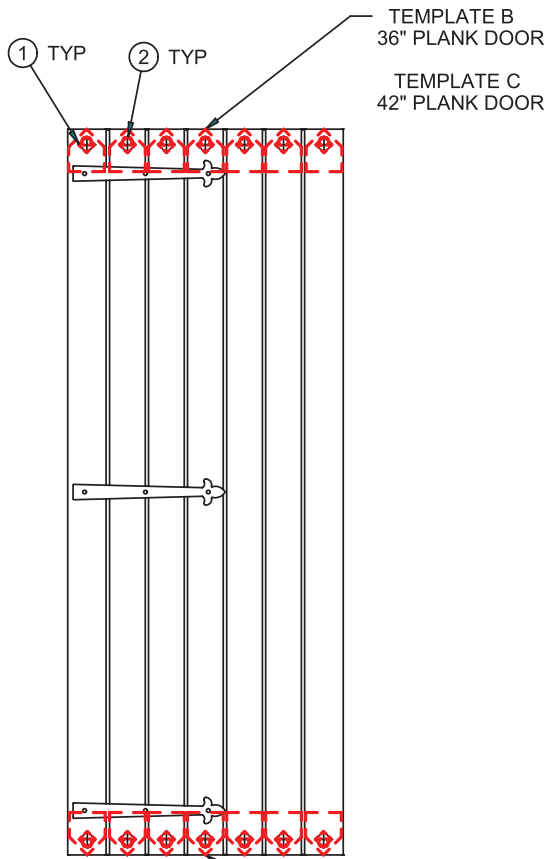


PLANK


TEMPLATE B
36" PLANK DOOR
TEMPLATE C
42" PLANK DOOR

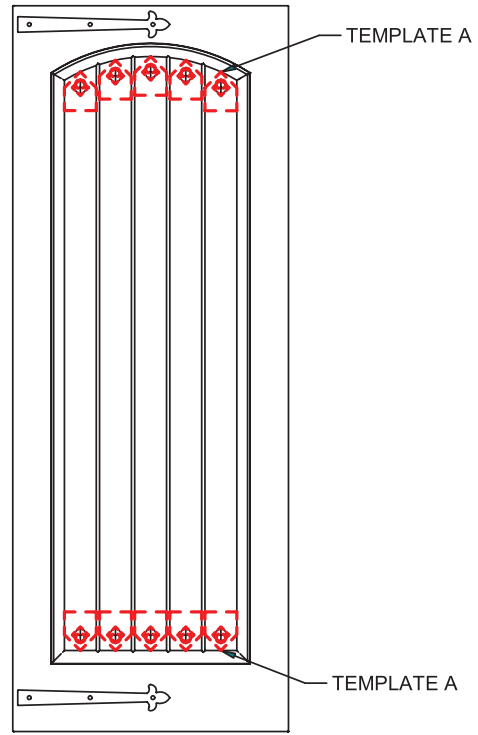


PLANK 1-PANEL ARCH

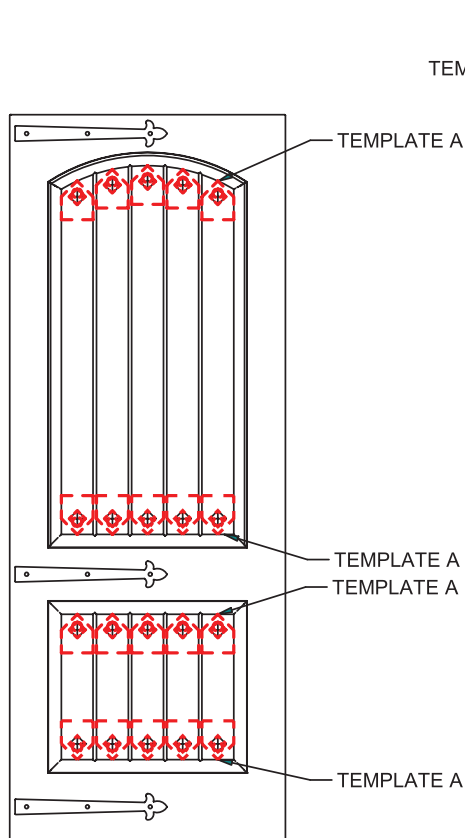

PLANK 2-PANEL ARCH

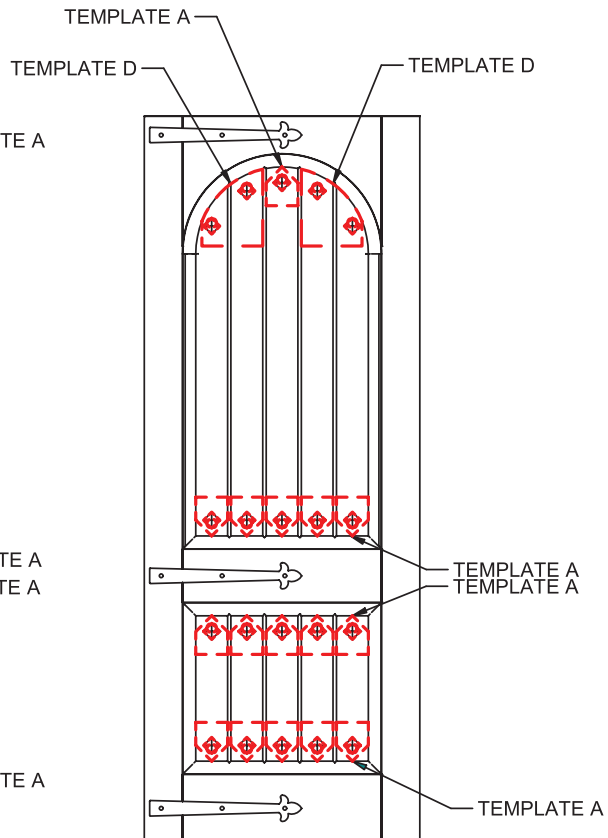

PLANK 2-PANEL CURVE

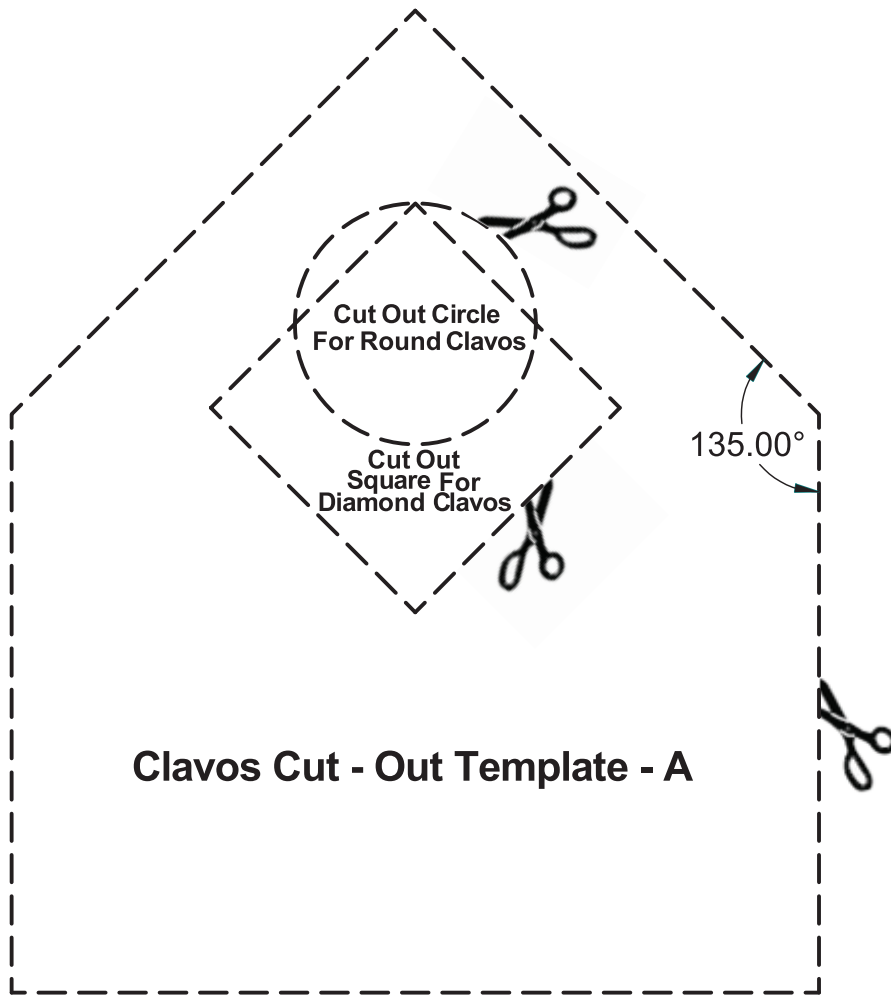


Plank 1: Panel Arch


Plank 2: Panel Arch

Plank 2: Panel Curve (Bottom Three Rows)

(See Page 6 for Top Curve Template)

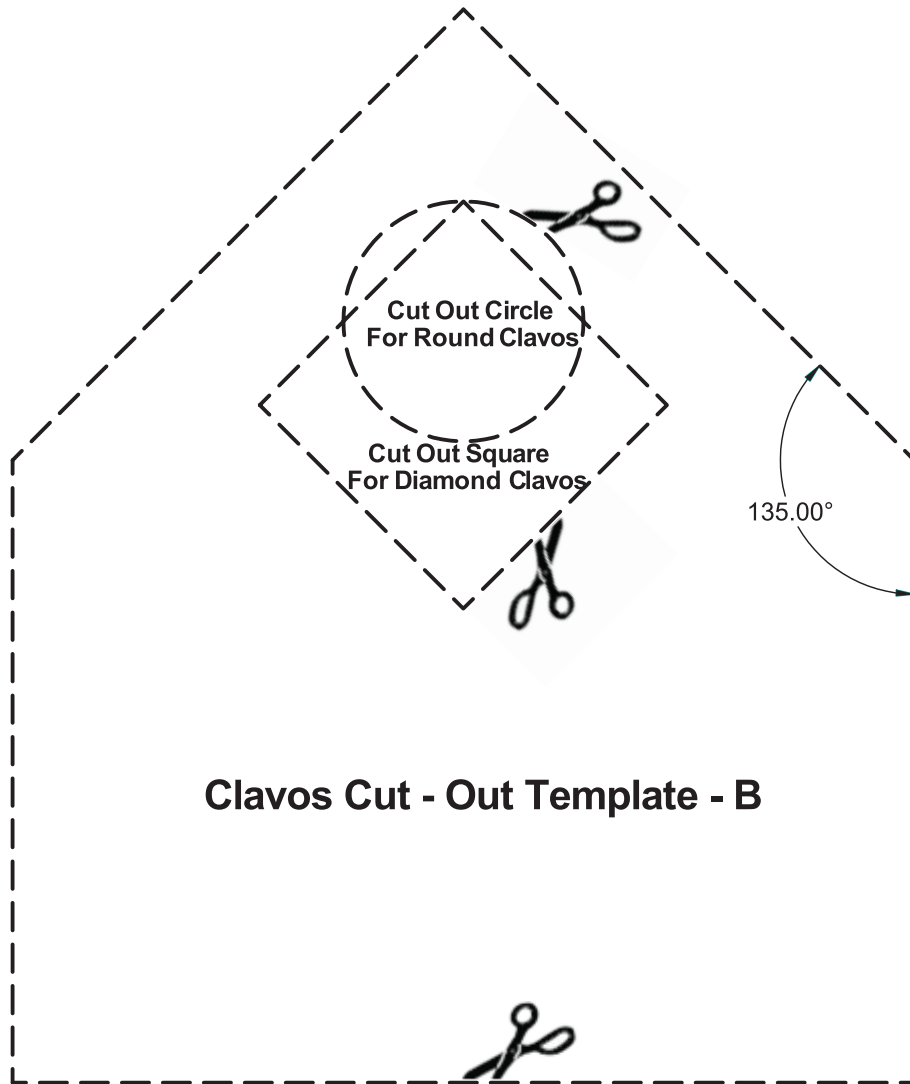


36" Plank Panel

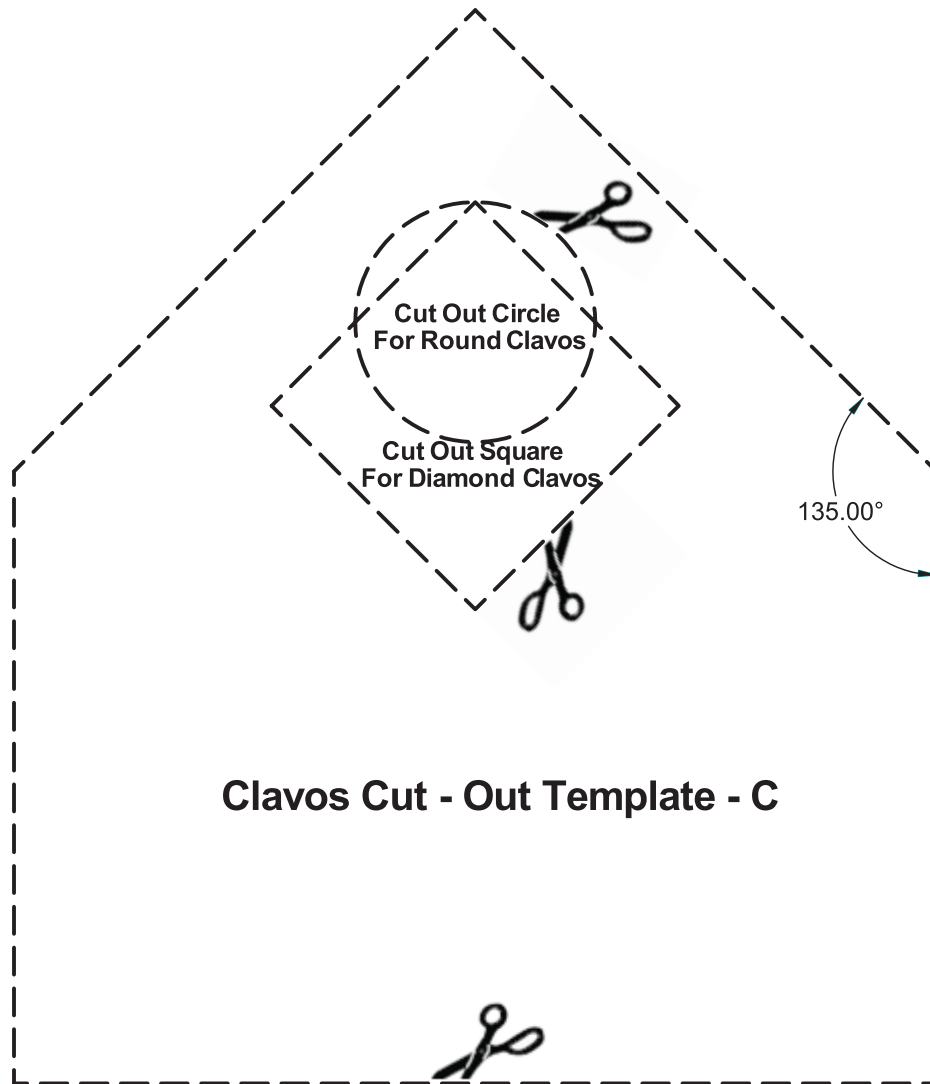

Clavos Cut - Out Template - C

42" Plank Panel

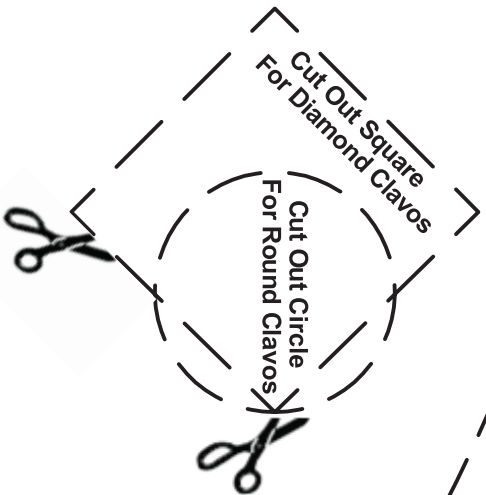

Clavos Cut - Out Template - D

(Used On Curved Panels Top Row Only)

