

INSTALLATION INSTRUCTION - INSTRUCCIONES DE INSTALACION FOR SLIDING DOOR INTERIOR FRAME EXTENDER



Install the sliding door using the installation instructions provided with the door. All interior foam or sealant lines must be in place prior to installing the Sliding Door Frame Extender.

REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.






KIT CONTENTS:


- 2 x 4 or 2 x 6 frame extender head piece (1)
- 2 x 4 or 2 x 6 frame extender jamb piece (2)
- 3/8" to 1/2" sheathed wall adapter head piece (optional) (1)
- 3/8" to 1/2" sheathed wall adapter jamb piece (optional) (2)
- #6 x 3/4" Phillips panhead sheet metal screws 2 each (2 x 4) or 4 each (2 x 6)

YOU WILL NEED TO SUPPLY

- 3d common galvanized nails 
- High quality exterior grade polyurethane or silicone sealant 

TOOLS REQUIRED:

- Tape measure 
- Phillips screwdriver 
- Rubber mallet 
- Sealant gun 
- Hammer 

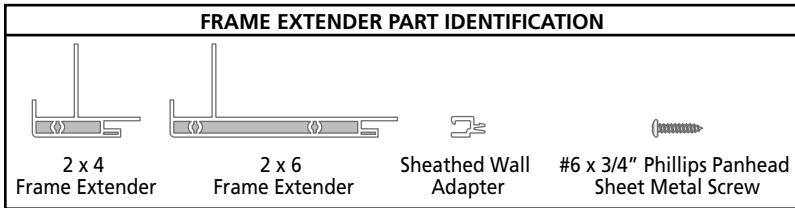

1 SHEATHED WALL ADAPTER

Note: If the Sheathed Wall Adapter is not being used proceed to Step 2.

- A. **Locate the sheathed wall adapter head member.**


Length = Frame width - 5/8".

- B. **Locate the sheathed wall adapter jamb members.**

Length = Frame height - 7/16".

- C. **Position the head sheathed wall adapter** on the door frame, centering it between the jambs. Using a rubber mallet, tap the adapter into the interior accessory groove.

- D. **Position a jamb sheathed wall adapter** on one of the door jambs. Using a rubber mallet, tap the adapter into the interior accessory groove. Repeat on other jamb.

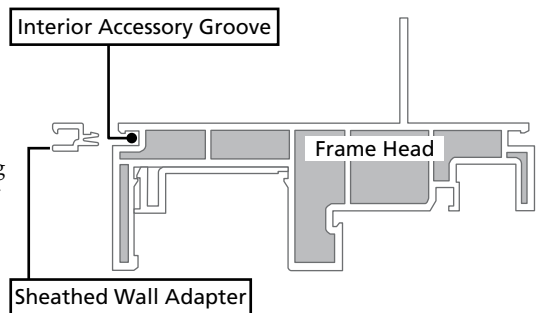


2 FRAME EXTENDERS

- A. Locate the frame extender head member.

Length = Frame width - 1/2".

- B. Locate the frame extender jamb members.

Length = Frame height + 5/8".

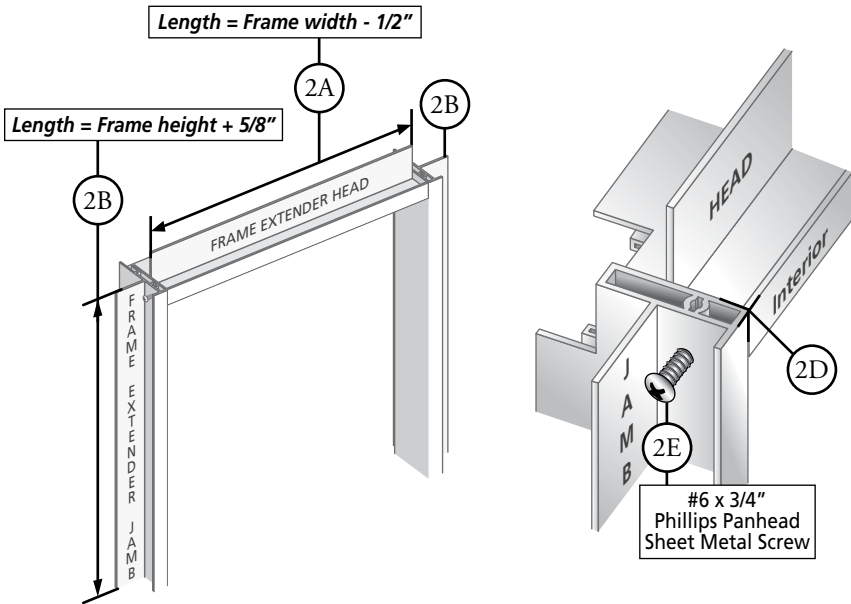

- C. Lay the frame extender head and jambs on a flat clean surface with the interior side down.



- D. Align the top of the jamb extender with the head extender as shown.

- E. Attach the jamb extenders to the head extender with #6 x 3/4" Phillips panhead sheet metal screws (provided).

Note: Location dimples for the screws are located at the top of each jamb extender.


- F. Lift the assembled frame extender and position it in front of the installed sliding door.

- G. **Insert the short leg of the frame extender** into the interior accessory groove or sheathed wall adapter.
- Ensure the frame extender is fully inserted on the head and both jambs.

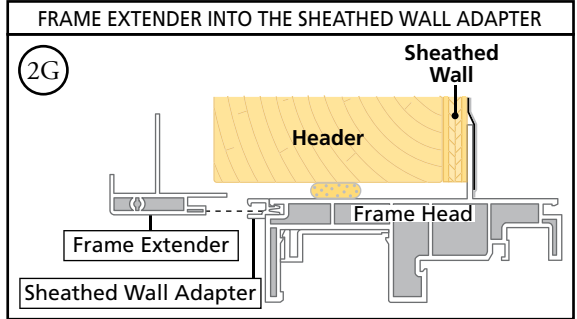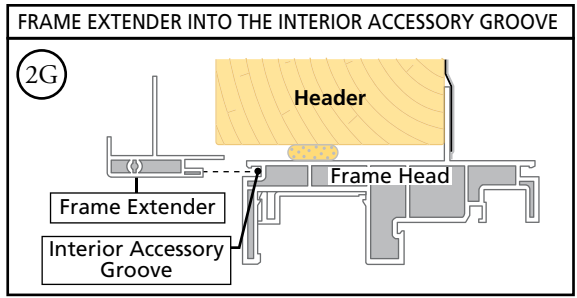

- H. **Check that the frame extender is square** to the door frame at all locations. Fix any problems with the extender before proceeding to the next step.

- I. **Drive a 3d common nail** through the nail fin into the rough opening framing. Begin 6" from each end, and drive additional nails spaced not more than 18" on center.

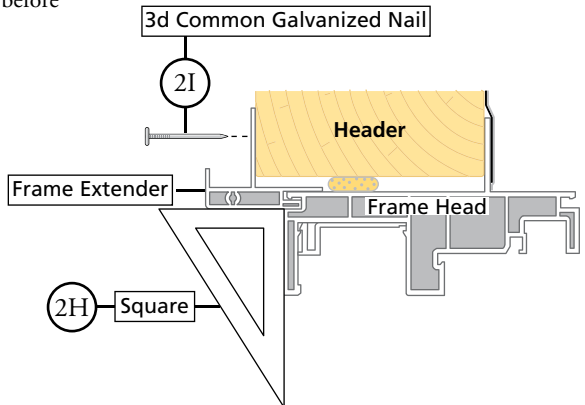

- J. **Seal all corner gaps** in the frame extenders with sealant.

- K. **The frame extender is now ready** to accept sheet rock.

