

INSTALLATION INSTRUCTION - INSTRUCCIONES DE INSTALACION
SLOPED SILL ADAPTER FOR SINGLE-HUNG, FIXED AND SLIDING WINDOWS

TOOLS REQUIRED:


- Tape measure 
- 1/4" drill bit 
- Drill 
- Rubber mallet 

1 PREPARE THE SLOPED SILL ADAPTER

A. Measure the length of the sloped sill adapter.


- a. **2-11/16" Wall depth units:** Ensure that it measures the same width as the width of the window frame.
- b. **3-3/8" Wall depth units:** Ensure that it measures 1/4" less than the window frame width.

B. 2-11/16" Wall depth units: Drill 1/4" diameter weep holes 1" from each end at the bottom of the exterior vertical leg of the sloped sill adapter.

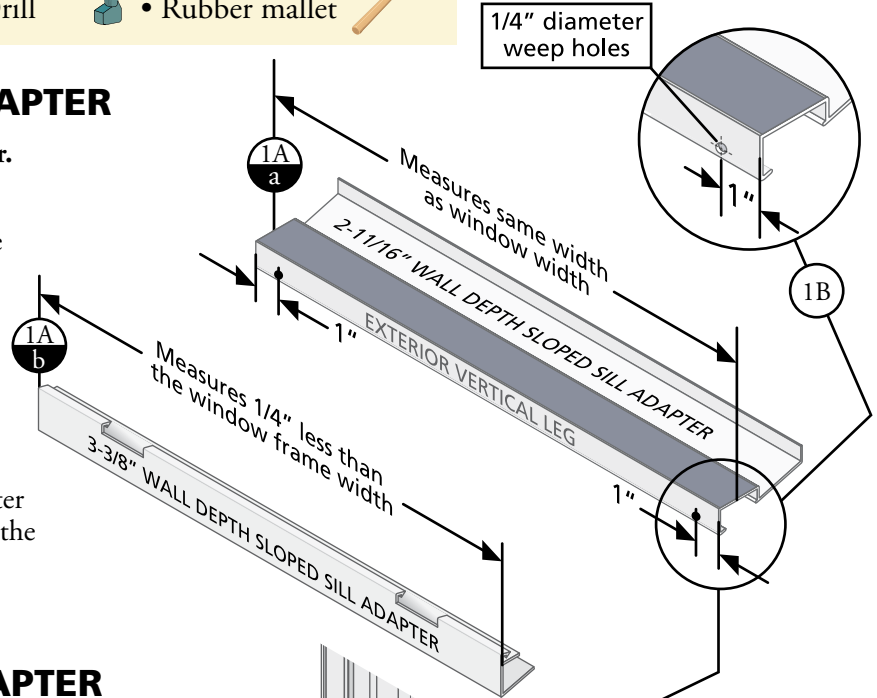

2 INSTALL THE SLOPED SILL ADAPTER

*Note: Steps 2A - 2D are for 2-11/16" wall depth only.
For 3-3/8" wall depth proceed to Step 2E.*

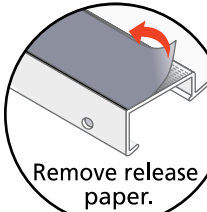- A. Prepare the window.** Ensure the sill of the window is clean and dry, then lay the window interior side down on a smooth clean surface.
- B. Remove the release paper** from the adhesive area of the sloped sill adapter. 
- C. Position the sloped sill adapter** on the sill of the window, however do not allow the adhesive strip to contact the window frame until the adapter is in the correct position.
- D. Press the sloped sill adapter onto the sill of the window.** Apply firm pressure to the adapter at the tape location to ensure proper adhesion to the window frame.
- E. For 3-3/8" wall depth only:** Position the sill adapter so that there is 1/8" from the end of the sill adapter to the edge of the frame. Using a rubber mallet, drive the sill adapter into the accessory groove in the exterior of the window frame.
- F. Install the window** using the installation instructions that were provided with the window.

