



FOLD up on dotted line. LAY the template on the threshold. PUSH against the vent panel.
SLIDE the end against the fixed panel. MARK the hole locations.

803Q0100

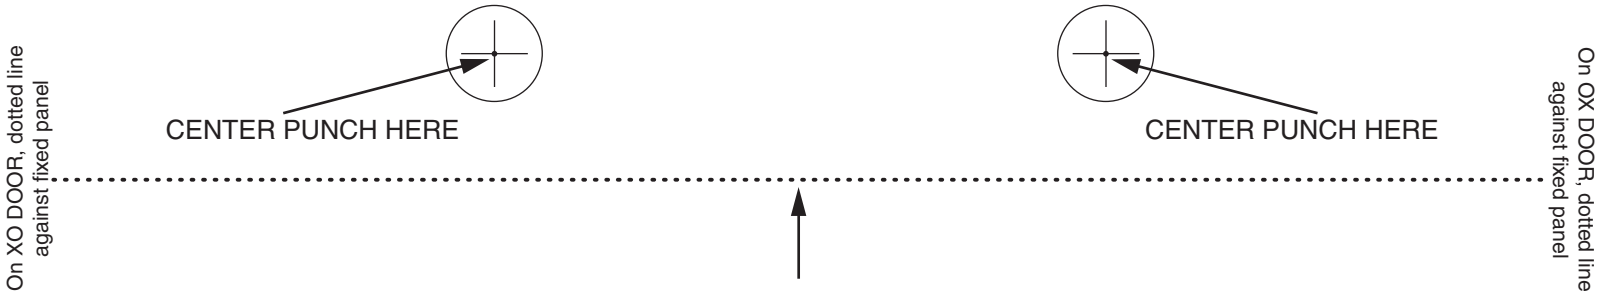


FOLD up on dotted line. LAY the template on the threshold. PUSH against the vent panel.
SLIDE the end against the fixed panel. MARK the hole locations.

803Q0100

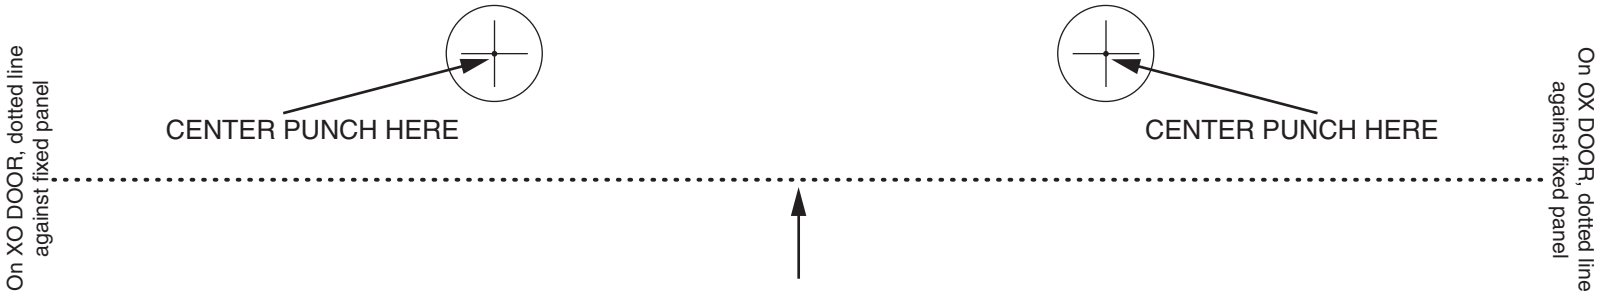

FOLD up on dotted line. LAY the template on the threshold. PUSH against the vent panel.
SLIDE the end against the fixed panel. MARK the hole locations.

803Q0100

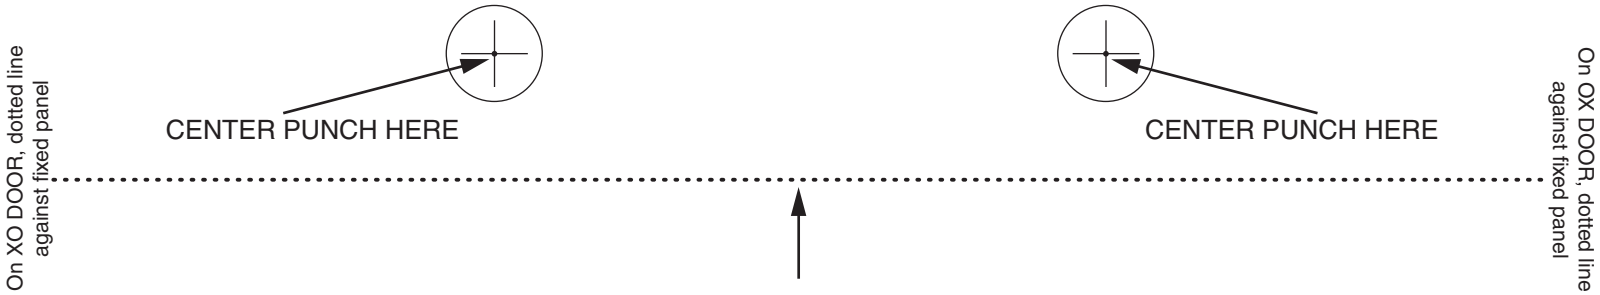

FOLD up on dotted line. LAY the template on the threshold. PUSH against the vent panel.
SLIDE the end against the fixed panel. MARK the hole locations.

803Q0100