2014 © Pella Corporation

Part Number: 80AM0001


INSTALLATION INSTRUCTION

SLIDING DOOR FLAT SCREEN STRIKE AND ROLSCREEN STRIKE INSTALLATION INSTRUCTIONS

REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.


PARTS INCLUDED:

- Strike Base and Srew (#6 x 3/4") 1 each



TOOLS REQUIRED:


- Phillips Screwdriver - #2 bit



1 REMOVE EXISTING STRIKE BASE (IF APPLICABLE):


A. **Loosen and remove the strike base screw(s).** Remove the strike base from the lock jamb.




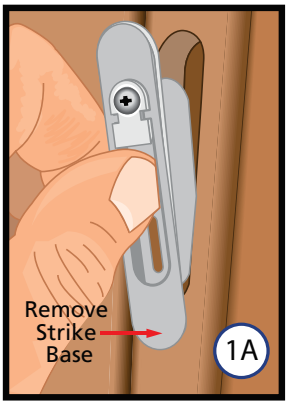

2 STRIKE BASE INSTALLATION AND LOCK ADJUSTMENT:

A. **Insert the strike base into the groove** in the lock jamb. Center the strike base within the groove. Center and drive a screw (provided) in the slot of the strike base.

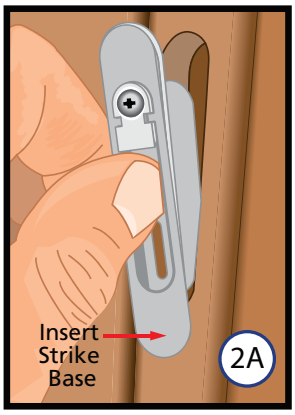


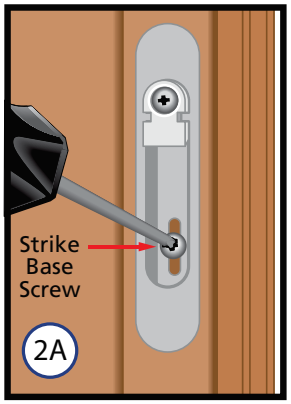


Note: Proceed to the appropriate screen step.
Step B is to be used if installing a Flat Screen,
Step C (page-2) is to be used if installing a Rolscreen.

B. Flat Screen:

1. **Rotate the lock to the locked position.** Line up the bottom edge of the strike with the lock catch as shown. If necessary, loosen the strike base screw and adjust the base up or down. Tighten the strike base screw to secure in place.
2. **Rotate the lock to the unlocked position.** Let the screen close and lock it. If the lock will not engage the strike, adjust the strike screw out until the lock will engage.

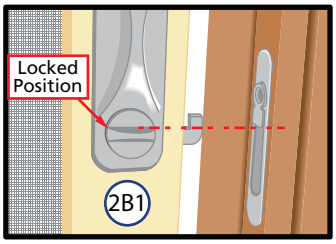

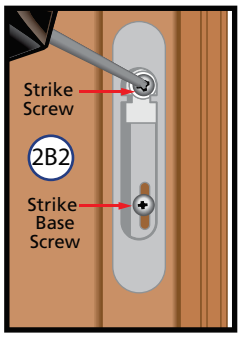

2 STRIKE BASE INSTALLATION AND LOCK ADJUSTMENT (CONTINUED):

C. Rolscreen:

1. **Align the bottom edge of the strike with the lock catch as shown.** If necessary, loosen the strike base screw and adjust the base up or down. Tighten the strike base screw to secure in place.
2. **Slide the Rolscreen closed.** If the lock will not engage the strike, adjust the strike screw out until the lock will engage.

