
Sliding Door Keylock Cylinder
Installation Instruction

Note: If you are installing a keylock cylinder in a handle that has not been installed, proceed to Step 2. If you are installing a keylock cylinder on a door where the handles have been previously installed, begin at Step 1.

1 Removing the Handle


A. **From the interior,** unlock the door and slide it open far enough to access the exterior handle.

B. **Remove the flat head screw** at the bottom of the interior handle insert.

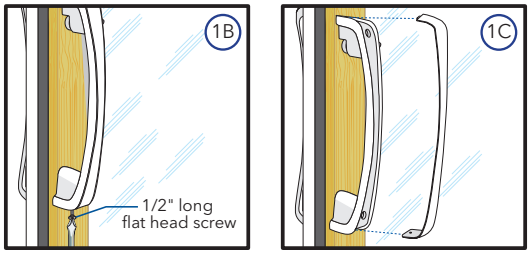


C. **Pull the bottom of the insert away from the handle** and lift the top of the insert out of the groove at the top of the handle.

D. **While holding the exterior handle, remove the two #10 x 3" pan head screws** from the interior handle to release the interior and exterior handles.

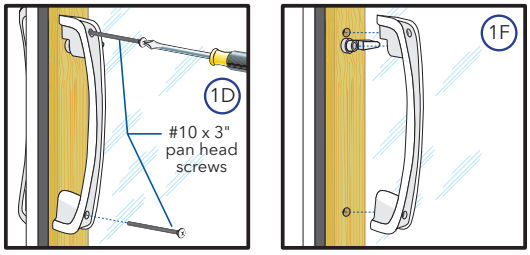

HANDLE NOMENCLATURE (Type 2 handle shown)

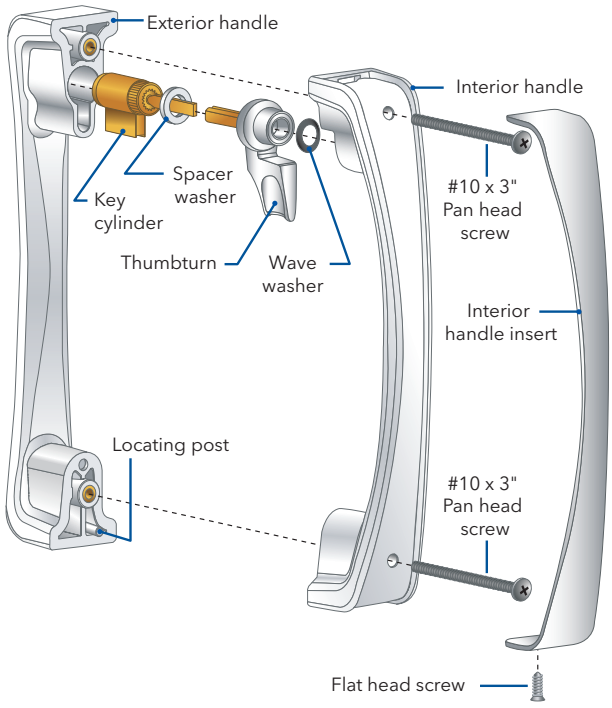

E. **Remove the exterior handle** from the door panel.

F. Lift the interior handle off of the thumbturn on the door panel.

G. Remove the wave washer for the thumbturn hole of the interior handle. Be careful not to lose the wave washer.

2 Installing the Keylock Cylinder


A. **Type 1 handle only:** Remove the two #4 x 3/4" screws and the key cylinder bracket from the back of the exterior handle and set them aside.

B. **Remove the keylock cylinder plug** by pushing on the Pella® logo from the exterior.


C. **Place a keylock cylinder** into the round hole on the exterior handle, making sure the keylock slot shows through the hole on the front of the handle and the key shaft points away from the handle as shown.

D. **Type 2 handle only:** Install the spacer washer over the keylock shaft as shown.
Type 1 handle only: Reinstall the key cylinder bracket with the two #4 x 3/4" screws that were removed in Step A.


TYPE 1 HANDLE

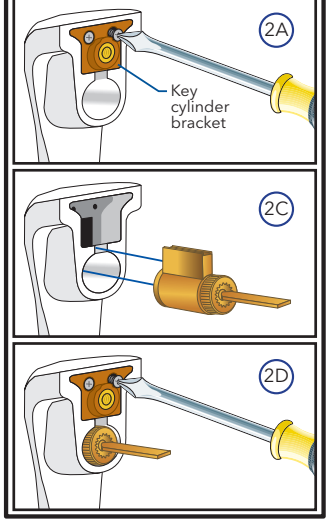

TYPE 1 and 2 HANDLE

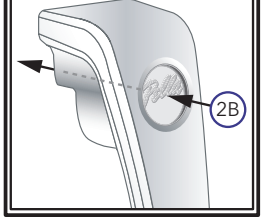


TYPE 2 HANDLE

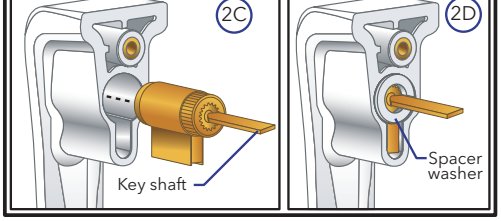


© 2019 Pella Corporation

3 Installing the Handle

A. **Install the thumbturn if not already installed,** on the interior of the door stile by inserting the shaft of the thumbturn into the second hole from the top.

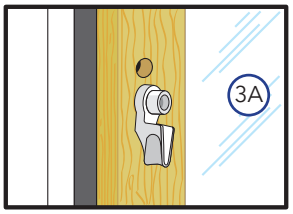


B. **Rotate the thumbturn to the unlocked position (pointed toward the glass),** and then move to the exterior of the door to install the exterior handle. Make sure the tail shaft of the keylock cylinder is in the horizontal position. Engage the tail shaft with the thumbturn shaft in the second hole from the top.

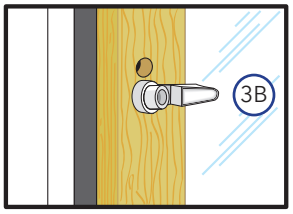

C. **Place the exterior handle on the door stile.**


NOTE: A 1/8" diameter fitting stud is on the bottom of the handle. This stud must fit in the 1/4" diameter hole on the door stile. If it does not fit, you have the wrong hand (L-R) of handle and will need to use the opposite hand handle set.

D. **Place the wave washer** into the thumbturn hole of the interior handle.

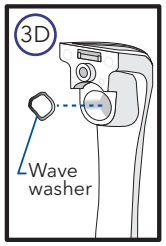


E. **Position the interior handle over the thumbturn** on the door stile, lining up the holes.


NOTE: A 1/8" diameter fitting stud is on the bottom of the handle. This stud must fit in the 1/4" diameter hole on the door stile.

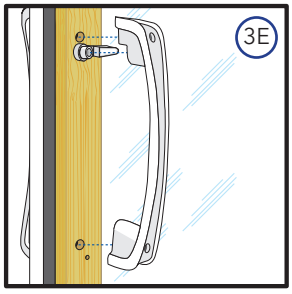

F. **Install the two #10 x 3" pan head screws on the interior handle. NOTE: Use a hand screwdriver. *DO NOT* over tighten the screws. *DO NOT* use power screwdrivers.**

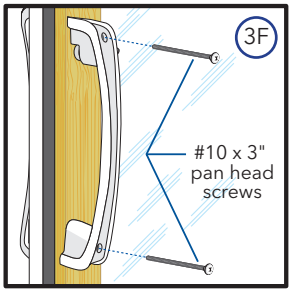

G. **Place the top of the interior handle insert into the groove** at the top of the interior handle.

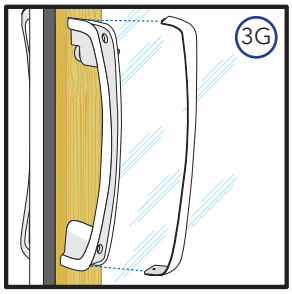

H. **Install the flat head screw** at the bottom of the insert to hold it in place.

Note: use a hand screwdriver. *DO NOT* over tighten the screw. *DO NOT* use power screwdrivers.

