Sliding Door Flat Screen Handle and Strike

INSTALLATION INSTRUCTIONS

Parts Included:



Interior handle




Exterior handle



Locking knob



Snap-in cover

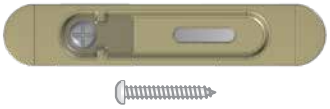

Strike base and screw (#6 x 3/4")




Handle screw



Detent insert

Tools Required:

- Phillips screwdriver - #2 bit



REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.

1 Install the Handle:

A. **Install the exterior handle.** Hook the bottom tab of the exterior handle onto the bottom of the hardware slot. Slide the handle down and push the top of the handle into the hardware slot.


B. **Install the detent insert** into the locking knob.


C. **Install the locking knob.** From the interior, hold the locking knob with the latch down and the thumbturn facing the interior. Slide the latch into the bottom of the hardware slot.


D. **Install the interior handle** in the same manner as the exterior handle, with the thumbturn through the hole in the interior handle.


E. **Attach the handles** by inserting the handle screw through the interior handle into the exterior handle. Hold the exterior handle tight against the screen panel while you insert and tighten the screw.


F. **Insert the snap-in cover.** Remove the release paper from the back of the cover. Align the tabs of the cover with the slots in the interior handle. Press the cover in place.

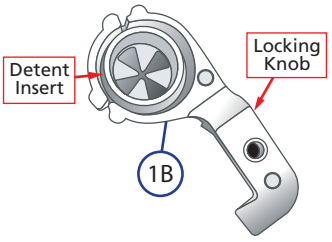


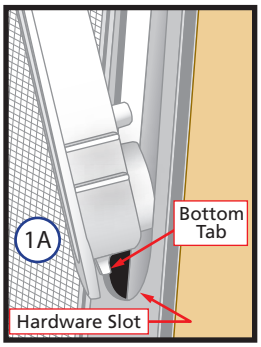


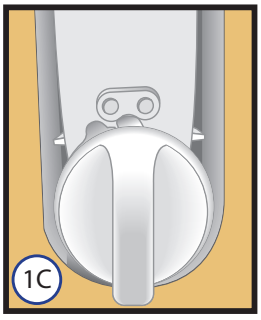

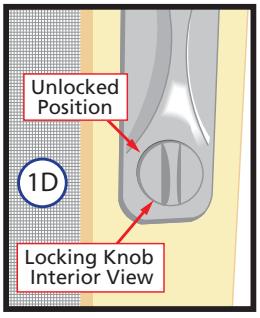

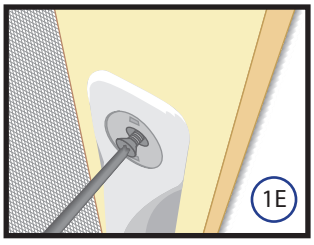

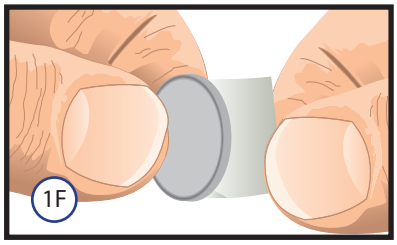

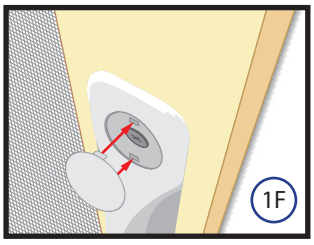


© 2026

GIF-000000597-1 Part Number: 809Z0102


1 Strike Base Installation and Lock Adjustment:

Note: If screen handles have Champagne finish, proceed to Step C.


A. **Remove the Champagne finish strike base (if necessary).** If the screen handles are not Champagne finish, remove the strike base by removing the screw.

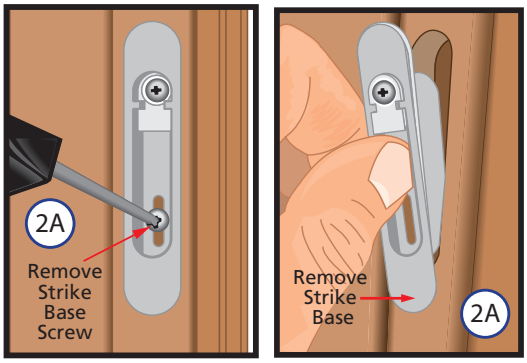

B. **Insert the strike base into the groove in the lock jamb.** Center the strike base within the groove. Center and drive a screw (provided) in the slot of the strike base.

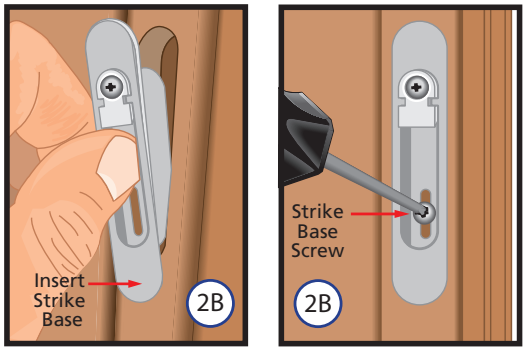

C. **Rotate the lock to the locked position.** Align the bottom edge of the strike with the lock catch as shown. If necessary, loosen the strike base screw and adjust the base up or down. Tighten the strike base screw to secure in place.

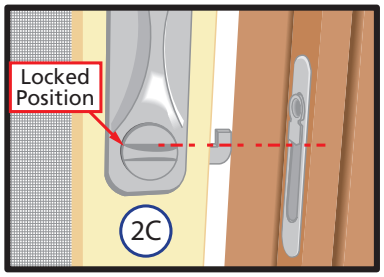

D. **Rotate the lock to the unlocked position.** Let the screen close and lock it. If the lock will not engage the strike, adjust the strike screw out until the lock will engage.

