SLIDING FLAT SCREEN FOR HINGED PATIO DOOR


INSTALLATION INSTRUCTION

Lea las instrucciones en español en el reverso.

Read these instructions thoroughly before performing any steps.



Parts Included:

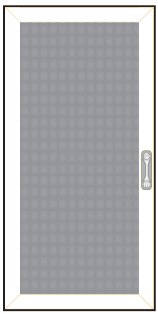

Screen Door



Screen Hanger (2)




Screen Holder (2)

#8 x 3/4" screw (4)

Tools Required:

- #2 Phillips screwdriver bit
- Drill
- 1/8" drill bit

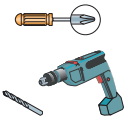


REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.


1 Preparing the Screen Door and Door Frame For Installation:

A. **Install the screen hangers** by sliding each hanger into the top rail holes of the screen door frame.

Note: If the hanger will not go into the top rail hole, turn it around. The hanger only installs one way.

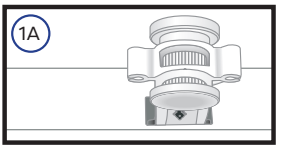

B. **Secure the screen hangers** using the hanger screws pre-installed in the top rail of the screen frame. Tighten the screws until the line on the hanger is lined up with the top of the screen frame.

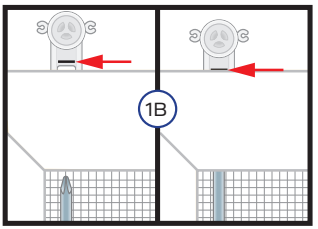


C. Install the screen handle; refer to the separate Screen Handle Installation Instructions. Set the screen aside until Step 2.


© 2026


GIF-000000905-1 Part Number: 81LA0101

1 Preparing the Screen Door and Door Frame For Installation (continued):

D. **Slide the screen track onto the rollers,** with the flat side toward the door and the flared side toward the exterior.

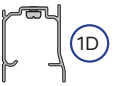

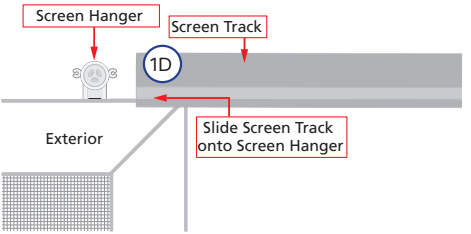


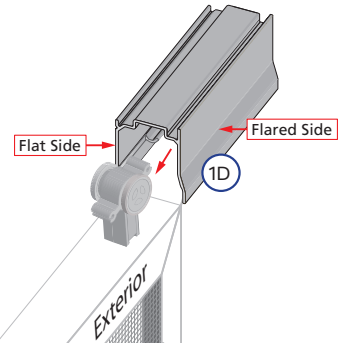


2 Installing the Screen Door:

A. **Insert the bottom screen guide onto the screen sill track.**

Note: The screen mohair should be facing the toward door frame.

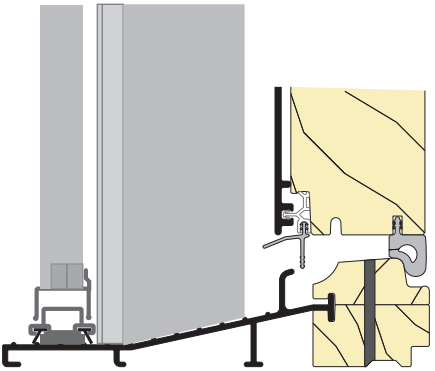


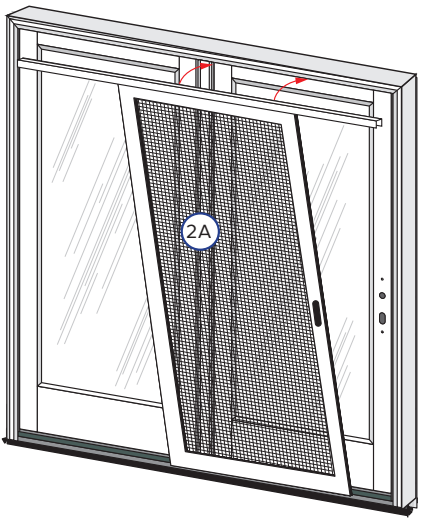


FA (Fixed/Active) Patio Door Shown

2 Installing the Screen Door (continued):

B. **Tilt-in the top of the screen** (with the screen track on the rollers) up to position the screen track against the head of the frame. Hold the screen and track against the frame and drill a 1/8" diameter pilot hole through one of the center two installation holes in the screen track. Install a #8 x 3/4" screw into the hole. This will hold the screen and track in place while drilling the remaining pilot holes and installing the screws and screen holders in steps 2C and 2D.

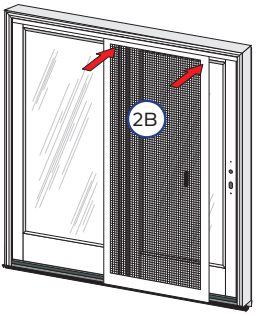


FA (Fixed/Active) Hinged Patio

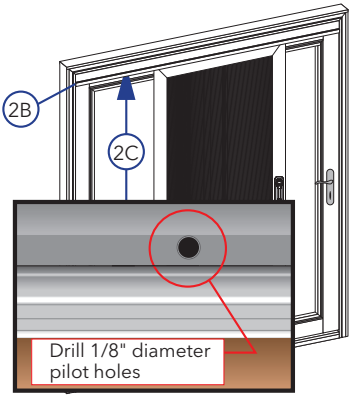



C. **Drill the remaining 1/8" pilot holes** and install #8 x 3/4" screw in the other installation hole in the center of the track.

Note: Move the screen from one end of the track to the other to access the attachment holes.

Tip: Use a screw driver with a magnetic tip to help align the screw tip with the hole.

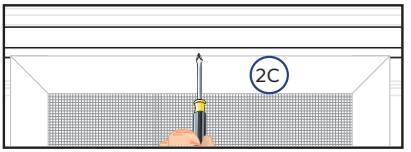


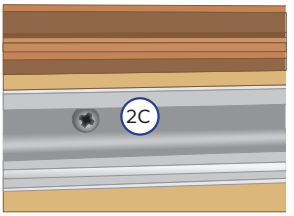

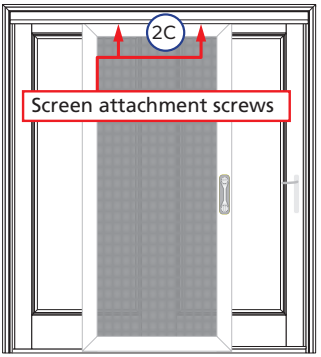


2 Installing the Screen Door (continued):

D. **Install screen holders and remaining installation screws.** On each end of th track, place a screen holder onto the installation/attachment screw to install the holder onto the track and complete the track installation. Make sure the "C-shaped" end of each clip is pointed toward the center of the door.

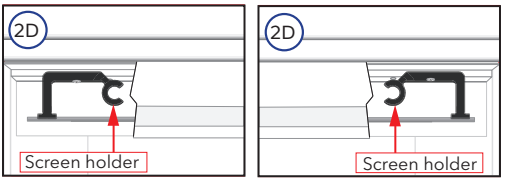

E. **Square the screen to the lock jamb** by adjusting the hanger screws in the top rail of the screen. Turn the screw clockwise to raise the screen or counter-clockwise to lower the screen.

Note: DO NOT adjust too high or too low, or the screen may not slide properly.

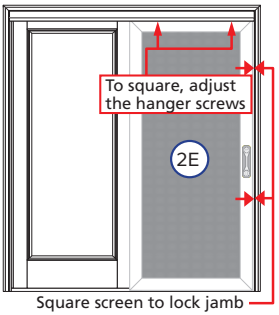

For more troubleshooting information, go to product website.