Pella® Clad-Wood/Wood Sliding Patio Doors
0XX0 Joining Panel Lock Strike Installation

Installation Instruction

These instructions apply to:

Clad-Wood/Wood Sliding Patio Door
OXXO Joining Panels

Tools Required:

- Phillips screwdriver


Parts Required:

- 2 Strikes
- 2 Covers
- 8 Screws




1 Lock Strike Installation:

A. Locate the pilot holes on the joining panel.

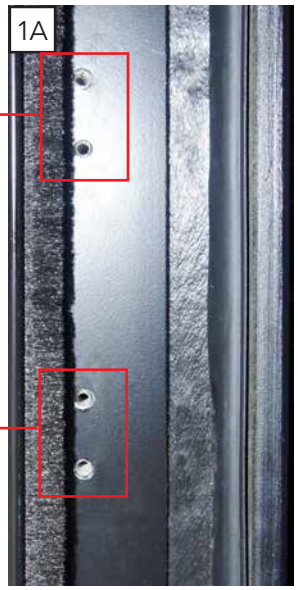


B. Position the strike over the pilot with the 3-position slots towards the sill.

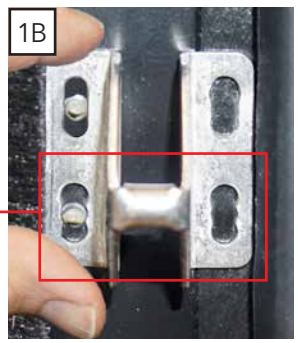

C. Drive 2 screws, making sure the screw is centered on the slot.





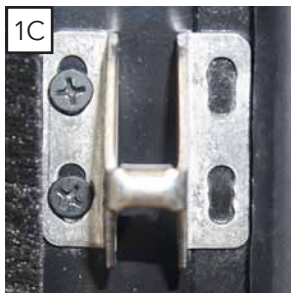

© 2022 Pella Corporation

GIF-000002829- Part Number: 82MA0000


1 Lock Strike Installation (continued):

D. Drive the other 2 screws, making sure to center the screws on the slots in the strike. (There is no need to pilot drill for these holes.)





E. Confirm the strike is in the centered position, then tighten down all 4 screws.

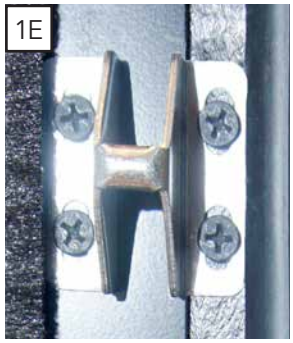

F. Repeat Steps 1A – 1E for the lower strike.



G. Install the strike covers with the round edge of each cover positioned towards the exterior of the door.



© 2022 Pella Corporation