VINYL WINDOWS AND DOORS
Manufactured by Pella Corporation

SLIDING DOOR HANDLE INSTALLATION AND ROLLER ADJUSTMENT INSTRUCTIONS


1 ASSEMBLE HANDLES

A. **Remove the top screw from the exterior plate**, insert the lock cylinder into the exterior plate. Install the Z-clip using the top screw.

B. **Assemble the interior and exterior handles** using the #10 - 32 x 7/16" screws and Allen wrench (provided).

Note: Orient handle curve toward the glass.

C. **Seat the gasket** onto the tail shaft and exterior assembly.

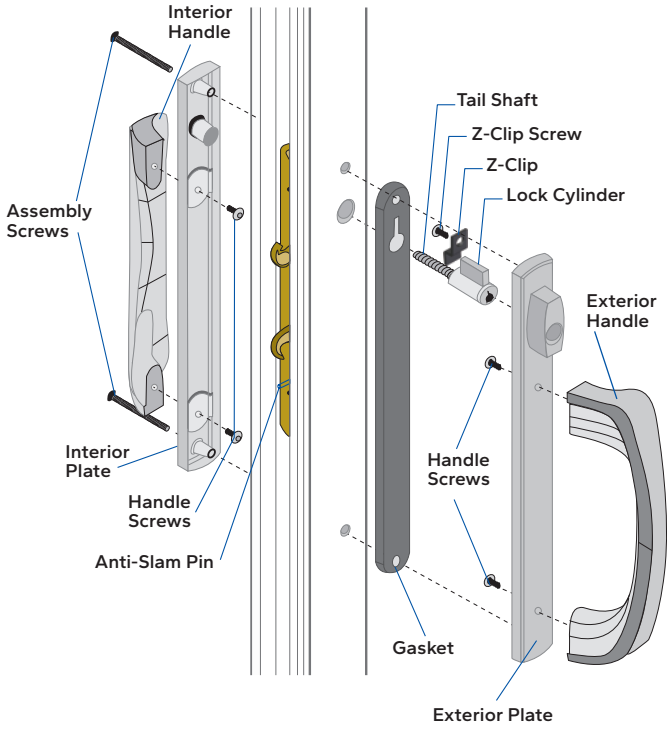

2 INSTALL THE HANDLES

A. **Remove the existing handles,** if necessary. Remove the two screws from the interior handle, then remove both the interior and exterior handle.

B. **Insert the exterior handle into the door.**

C. **Insert the interior handle into the door while holding the exterior handle in place.** Make sure the lock cylinder tail shaft engages the slot in the thumbturn.

D. **Insert and tighten the assembly screws** while holding both handles in place. (For 1-1/2" thick panel: Use #8-32 x 1-3/4" oval head screw. For 1-7/8" thick panel: Use #8-32 x 2-1/8" oval head screw.)


E. **Test the operation of the lock by holding in the anti-slam pin and turning the thumbturn.** If operation is tight, loosen the assembly screws 1/4 turn until operation is smooth.

3 TEST AND ADJUST DOOR OPERATION

A. **Test the operation of the door by opening and closing it a few times**. Make sure the door slides easily. If there are any problems with the door travel recheck and adjust for plumb and square.

B. **Check the reveal**. Slide the vent panel to within 3" of the door frame lock jamb. Check for equal reveal at the top and bottom of the door. If the reveal is equal, proceed to Step 4.

C. **Adjust the reveal**. Use a #2 Phillips screw driver to turn the adjustment screw. Turn the screw clockwise to raise, or counter-clockwise to lower each edge of the panel.

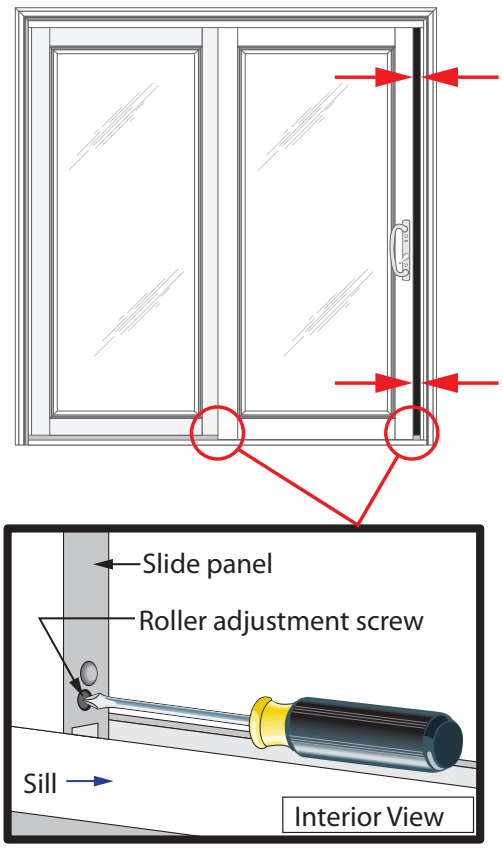

4 LOCK STRIKE INSTALLATION

A. **See Sliding Door Installation Instructions for lock strike installation details.**

© 2010 Pella Corporation