Sliding Patio Door Joining Panel Stop Installation

INSTALLATION INSTRUCTION


Note: Installation of stop should only proceed after the joining panel adjustment is complete. This part is only used on Type 3 OXO units.

Tools Required:

- Drill (non-impact) with Phillips's bit & 1/8" drill bit
- Sealant gun with sealant

1 Joining Panel Stop Installation:

A. **Apply foam gasket to bottom of stop.** Peel adhesive backing from the foam and center the stop on the bottom of the foam.

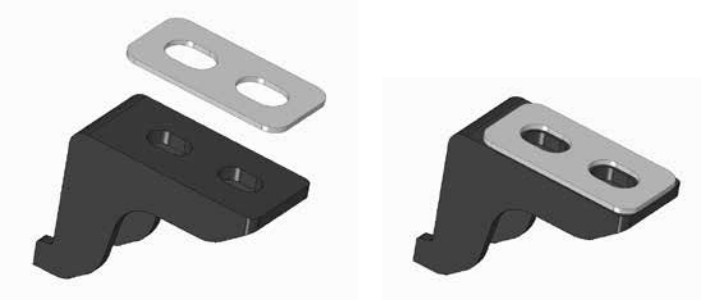


B. **Open the vent panel and position the stop against the edge of the roller track** and slide it against the end of the joiner.





C. **While holding the stop in place,** drill a 1/8" pilot hole in the center of each slot.

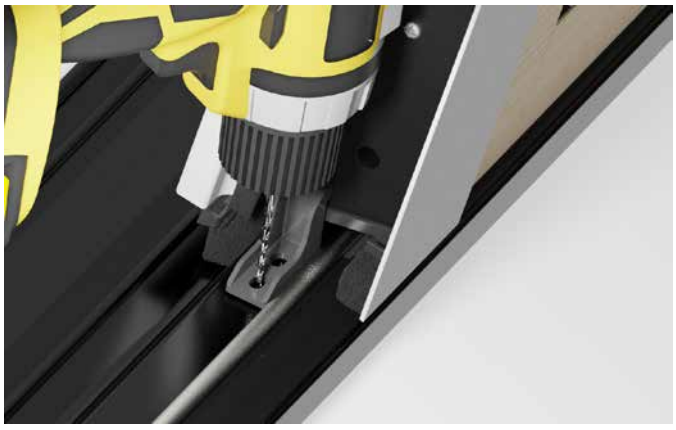

© 2026

1 Joining Panel Stop Installation (continued):

D. **Place a small amount of sealant on each pilot hole.**

E. **Drive two #8 x 5/8" pan head screws** while holding part in place. Tighten firmly, but don't overdrive to avoid damage to the stop.

DO NOT use an impact driver!



