



PanoLock™ Strike Plate Assembly & Adjustment

INSTALLATION INSTRUCTION

These instructions apply to:

Pella® Front Doors Fiberglass and Steel 06/2026 - Current

Tools Required:


- Phillips head screwdriver
- Drill

1 Strike Plate Assembly:

- A. Ensure strike plate mortise is clear of dust and debris.



- B. Place reinforcing roller plate into frame mortise. Orient tabs toward edge of frame. Align end of tabs with edge of frame.

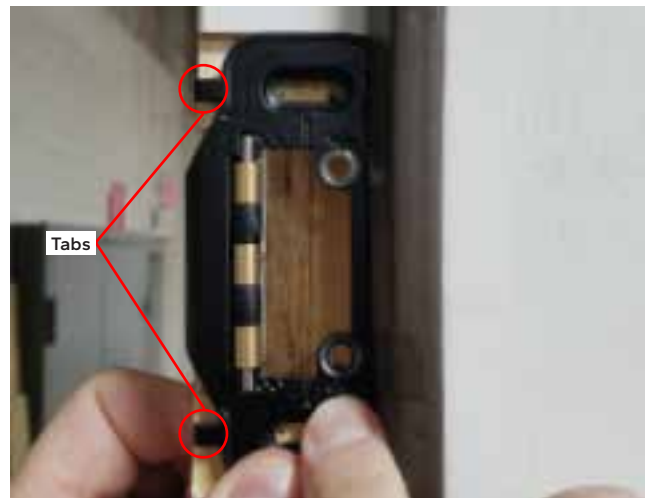

- C. Place strike plate on top of reinforcing roller plate. Orient curved lip towards frame edge.



- D. Secure assembly with two short screws (provided) through strike plate.



2 Strike Plate Adjustment:

- A. If adjustment of the strike is required to either loosen or tighten fit with weatherstrip, first partially loosen short screws.



- B. While holding top strike plate in position, move lower reinforcing plate assembly to the left or right – as needed to loosen or tighten door panel fit.



- C. Retighten short screws to secure strike plate assembly at its adjusted position.



- D. Place two long screws (provided) through holes in reinforcing roller plate.

