Vinyl Windows and Doors
Manufactured by Pella Corporation

Part Number: V785100
©Pella Corporation 2007


INSTALLATION INSTRUCTION - INSTRUCCIONES DE INSTALACIÓN
VINYL SLIDING DOOR HEAVY DUTY FLAT SCREEN STRIKE

Lea las instrucciones en español en el reverso.

WARNING! Pella window and door screens are intended only to exclude insects. They are not designed to restrain children.

PARTS INCLUDED:

- SCREEN DOOR
- SCREEN STRIKE PACKAGE



TOOLS REQUIRED:


- Phillips screwdriver - #2 bit
- Drill with a 3/32" bit



REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.

1 INSTALLING THE SCREEN STRIKE

Note: Depending on how the screen was installed, the latch in the handle will slide either up or down to clear the strike. The latch slide direction will determine the installation orientation of the strike on the jamb. If the latch slides up (OX Door), proceed to step 3A. If the latch slides down (XO Door) go to step 3G.

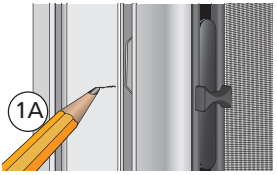

6'8" OX Doors and All Other (OX & XO) Height Doors:

A. Slide the screen to the closed position and place a mark on the jamb where the bottom angled portion of the latch meets the jamb.


B. Slide the screen open and place the strike into position on the jamb with the hook pointed up. Align the angle portion of the strike with the mark placed on the jamb.


C. Drill 3/32" diameter holes into the jamb centered in the top and bottom strike slots.

D. Install the provided screws through the strike slots into the pre-drilled holes. Do Not tighten completely.

E. Adjust the strike up or down as necessary so the latch automatically engages the strike. (If automatic latching can not be achieved, ensure positive latching manually.


F. Tighten the screws after achieving positive latch engagement (automatically or manually). The screws may be loosened and the strike adjusted up or down as needed.

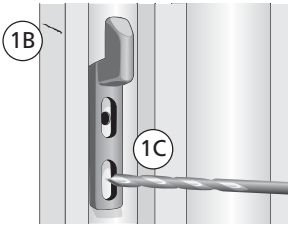

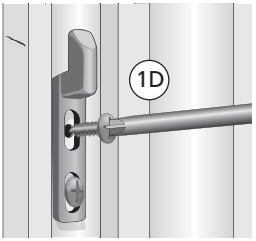


6'8" XO Door:

G. Slide the screen to the closed position and place a mark on the jamb where the top angled portion of the latch meets the jamb.

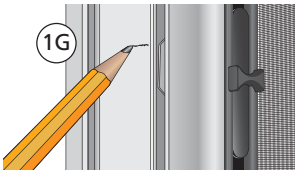


H. Slide the screen open and place the strike into position on the jamb with the hook pointed down. Align the angled portion of the strike with the mark placed on the jamb.

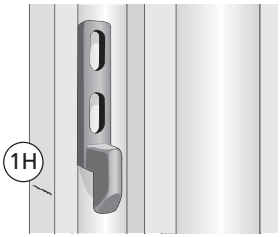

I. Follow Steps 3C-3F.

2 INSTALLING SCREEN GUIDES (Optional)

A. Remove the screen from the frame and identify the top of the screen. Install the two guides into the top channel of the screen approximately 6 inches from each end.

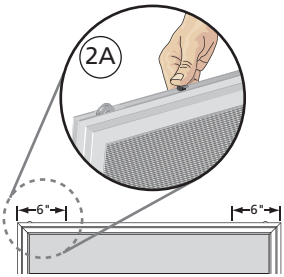

B. Re-install screen, adjust rollers as necessary.