VINYL WINDOWS AND DOORS

Manufactured by Pella Corporation

Questions? Call 1 (800) 374-4758

INSTALLATION INSTRUCTION


Filler Cap – Patio Door and Transom

These instructions apply to:

Centera by Pella™ 2/2007-Current
ThermaStar by Pella® 2003-Current
Encompass by Pella™ 2/2008-Current

Parts Needed:


- Patio Door Filler Track

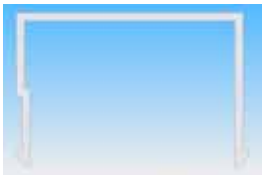



Note: The filler cap is provided in the correct length for the application.


1 Filler Cap Installation:

A. Install the filler cap in the pocket on the interior of the sill; starting at one end and continuing along the entire length. Be sure to place the cap in the correct orientation as shown. Push the filler cap down into the sill channel until it snaps in place.

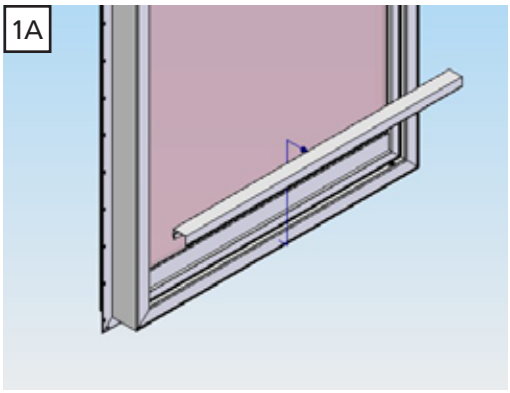

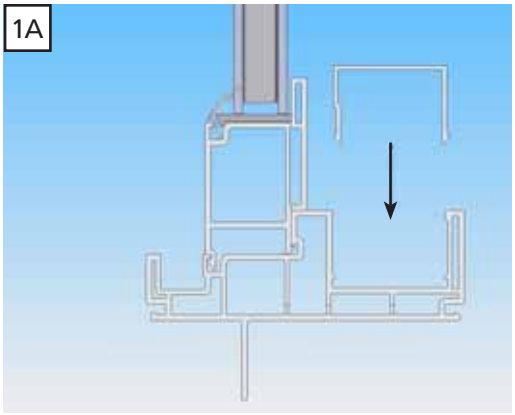

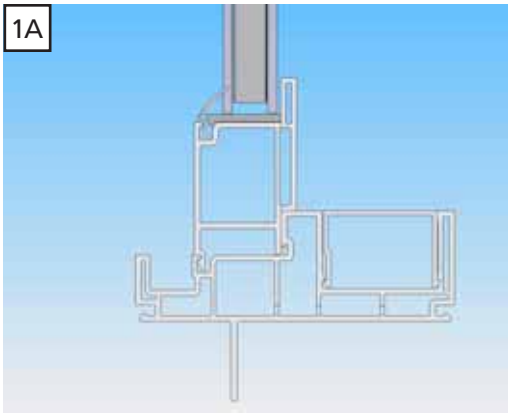

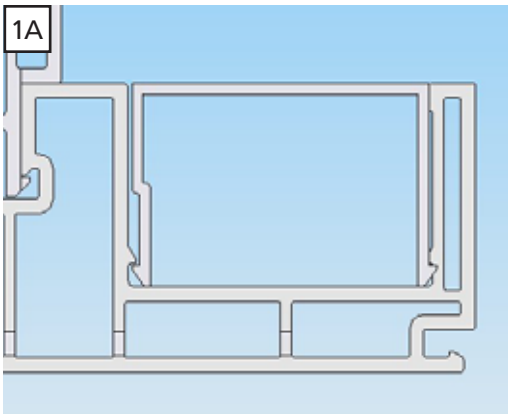

B. If the cap needs to be removed or replaced; start on one end, use a stiff putty knife or straight blade screw driver to pry up and pop the end loose, then lift the cap out of the sill.