Part Number: 802F0000

INSTALLATION INSTRUCTIONS

Flexible Fin Corners

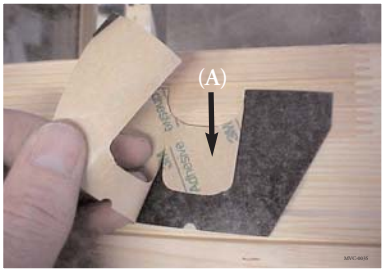


Photo 1

1. Remove the backing by pulling on tab at corners (see Photo 1).
   NOTE: *Take care not to remove the center portion. This section of backing should remain on the fin corner permanently (see Photo 1-A).*

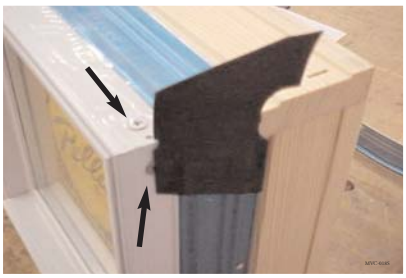


Photo 2

2. Line up the front edge of the fin corner with the center of the corner lock screws and the front locating notch with the corner of the window frame (see Photo 2).



Photo 3

3. Fold around the corner of the unit and rub firmly over entire surface to activate adhesive and insure a good seal (see Photo 3).



Photo 4

4. Lift the fin enough to fold and adhere the tab over the back of the fin (see Photo 4).

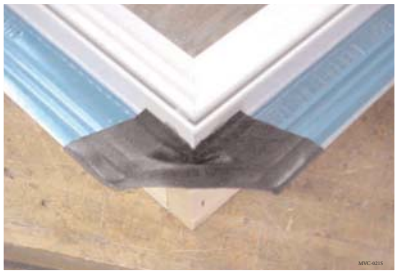


Photo 5

5. The fins can then be folded out, stretching the fin corner (see Photo 5).

© Pella Corporation 2003