INSTALLATION INSTRUCTIONS

Double-Hung Sash Lift

Part Number: 806R0100
Architect Series®
01/2005-Current

Pella® Material Required:


- Double-Hung Sash Lift Package
  1-Sash Lift
  2-Screws



Tools Needed:

- #2 Phillips screwdriver
- Pencil
- Drill
- 3/32" drill bit


NOTE: When Printing the template; make sure the printer page scaling is set to "None" or page sizing is set to "Actual."

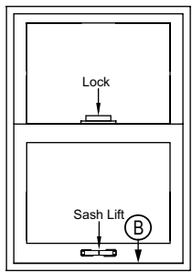

1. Determine where to place the sash lift:
   - **Architect Series, 850 Series, Architect Series Precision Fit and Renovation:** Align the dashed line (B) of template with the bottom of the lower wood section of the window sash (B) centering it below the window lock(s). (See diagram.)

2. Drill a 3/32" (2.4mm) diameter pilot holes to a maximum depth of 3/4" (19mm) through the two holes marked (A) on the template.

3. Attach the sash lift with the screws provided. DO NOT overtighten the screws.

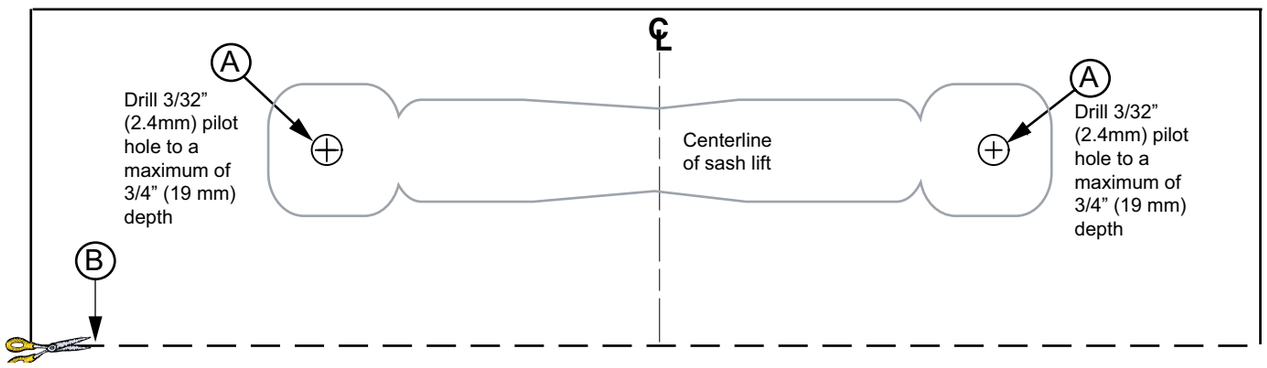

© Pella Corporation 2014

INSTALLATION INSTRUCTIONS

Double-Hung Sash Lift

Part Number: 806R0100
Architect Series®
01/2005-Current

Pella® Material Required:


- Double-Hung Sash Lift Package
  1-Sash Lift
  2-Screws



Tools Needed:

- #2 Phillips screwdriver
- Pencil
- Drill
- 3/32" drill bit


NOTE: When Printing the template; make sure the printer page scaling is set to "None" or page sizing is set to "Actual."

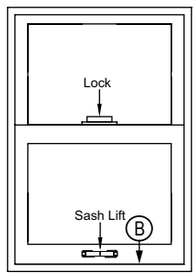

1. Determine where to place the sash lift:
   - **Architect Series, 850 Series, Architect Series Precision Fit and Renovation:** Align the dashed line (B) of template with the bottom of the lower wood section of the window sash (B) centering it below the window lock(s). (See diagram.)

2. Drill a 3/32" (2.4mm) diameter pilot holes to a maximum depth of 3/4" (19mm) through the two holes marked (A) on the template.

3. Attach the sash lift with the screws provided. DO NOT overtighten the screws.

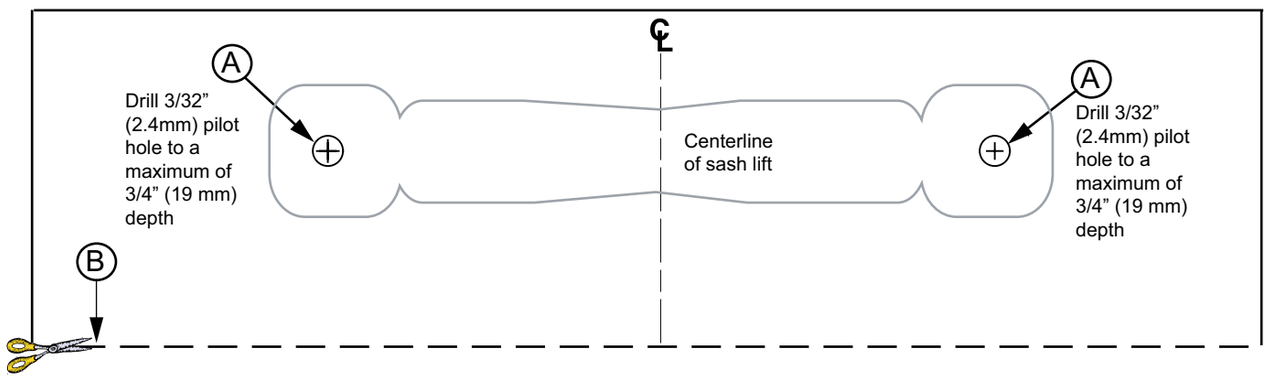

© Pella Corporation 2014