
Monumental Single-Hung and Double-Hung High Windload Brace Clips

Installation Instruction

Package assembly numbers: 06FX0000 Champagne
06FY0000 White

Note: Install the high windload brace clips before adding interior trim. Make certain that the unit is square, plumb and level before installing the brace clips. Also, be sure that the jambs are straight. Effectiveness of the brace clips is reduced if the jambs are not held straight by shims between the window frame and framing or if jambs are not secured to the framing at the check rail.

1. Position the Sash Clip "A" flush with the top of the lower sash and mark the screw holes on the sash.
2. Drill three 5/64" diameter x 3/4" deep pilot holes in the sash.
3. Install the Sash Clip "A" on the sash using three #8 x 1-3/4" screws (provided).
4. Make certain that the sashes are closed and locked. Hold the Brace Clip Strike "B" in place on the frame jamb so that it is flush with the edge of the jamb and slides into place with the Sash Clip "A". Mark the top and bottom edges on the jamb. Shave the jamb between the two marks to a depth that places Brace Clip Strike "B" flush with the jamb. (Figure 1) Make sure the Brace Strike Clip "B" is not higher and lower than the jamb. Mark the screw locations and drill the pilot holes.

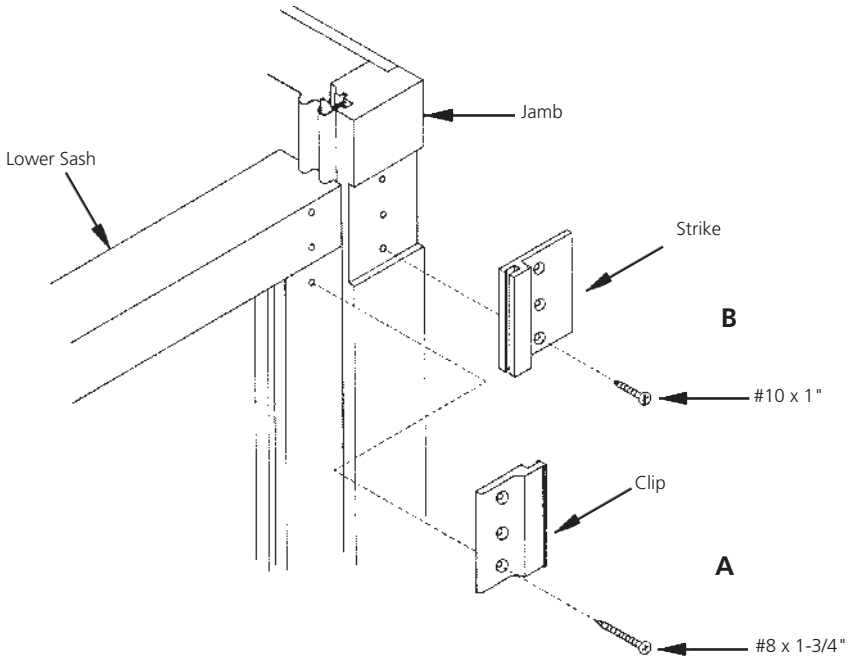

5. Drill three (3) 3/32" diameter x 1/2" deep pilot holes in the jamb.
6. Install the Brace Clip Strike "B" using three (3) #10 x 1" screws (provided).
7. Install a Sash Clip and Brace Clip Strike on the opposite jamb by repeating Steps 1-6.
8. Check the window for proper operation.
9. Install the interior trim as needed. The trim may be installed around the Brace Clip Strike in any manner that is aesthetically appealing as long as it doesn't interfere with the Sash Clip or Sash operation.

© 2008 Pella Corporation

Rev. 03/31/08 **Part Number: 80QR0000**