INSTALLATION INSTRUCTION

Casement Egress Labels

1. Adhere the jamb exit label to the lock jamb frame stop below the lock lever (see Photo 1).



Photo 1

2. Adhere the sill exit label to the sill frame stop between the roto operator and the lock side jamb (see Photo 2).



Photo 2

3. Adhere the wash label on the top of the lip of the egress operator slide (see Photo 3 and Illustration 1). Position the label as shown in Illustration 1.



Photo 3

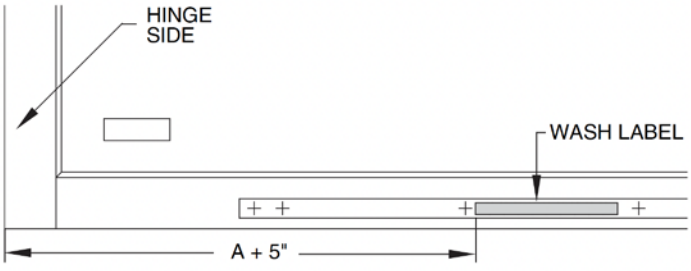


Illustration 1

© 2004

GIF-000000595- Part Number: 809U0001