VINYL WINDOWS AND DOORS
Manufactured by Pella Corporation

INSTALLATION INSTRUCTION
Limited Opening Hardware

These instructions apply to:
Double-Hung and Single-Hung Windows

Tools Required:
- Phillips screwdriver
- Tape measure
- Wood block
- Utility knife or hacksaw
- Mallet
- Drill with 1/4" bit

1 Limited Opening Stop Installation:

Pella® 250 Series Only:

A. Remove the lower sash stop.
Near the head (top) of the window, pry up on the end of the lower sash stop with a putty knife. More than likely the stop will pop completely out of the balance channel.

B. If needed, tilt the top of lower sash stop back. Push bottom of sash stop up and remove stop from balance channel.

Double-Hung shown; Single-Hung procedure similar.

C. Remove the balance cover.
Unlock and Tilt out lower sash.
Hook lower portion of balance pocket cover with finger. Pull balance pocket cover out.

Endorsed & Pella® 250 Series:

D. Remove the sash stop. Open the venting sash so there is a 3-3/4" clear opening between the venting sash and the window frame.

Tip: Place a 3-3/4" wood block between the sash and frame with the sash closed against the block.
















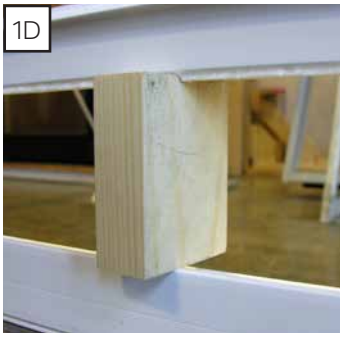

© 2015 Pella Corporation

1 Limited Opening Stop Installation (continued):


E. Measure the distance between the bottom sash check rail and the top of the window frame. This will be the length used to cut the limited opening stop in step 1G.





F. Remove the wood block and close the sash.

G. Cut each limited opening stop to the length determined in step 1E. Measure from the end with the screw hole.

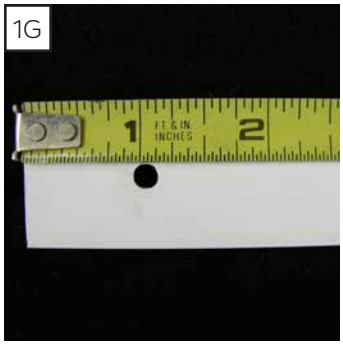

NOTICE If stop does not have a pre-drilled hole; installer must drill a 1/4" diameter hole, centered in the stop, 1" up from bottom of stop.

H. Insert the end of the limited opening stop without the screw hole into the balance channel on one frame jamb near the top of the window. Place the screw hole end nearest to the check rail. Press the stop to snap fit it into place. A mallet can be helpful.

Open the bottom sash against the stop to securely seat the stop up to the frame.









I. Being sure to avoid the balance cord, insert the provided screw into the hole to secure the stop to the frame.

⚠ CAUTION To avoid screw spin out, do not use a powered driver.

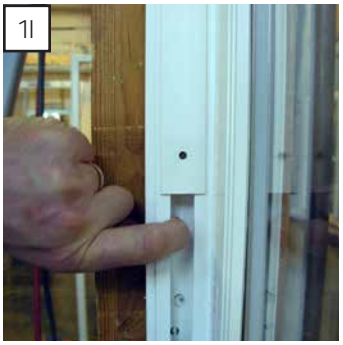

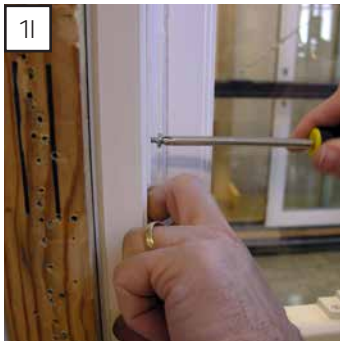

J. Repeat H & I on the other side of the window.