VINYL WINDOWS AND DOORS

Manufactured by Pella Corporation

Questions? Call 1 (800) 374-4758

INSTALLATION INSTRUCTION

Limited Opening Hardware – Vinyl East Double-Hung

These instructions apply to:

ThermaStar by Pella® 2016-Current

Encompass By Pella® 2016-Current


Tools Required:

- Phillips screwdriver
- Tape measure
- Wood Block
- Utility Knife or Hacksaw
- Mallet

1 Limited Opening Stop Installation:

A. Open the venting sash so there is a 3-3/4" clear opening between the venting sash and the window frame.

Tip: Place a 3-3/4" wood block between the sash and frame with the sash closed against the block.

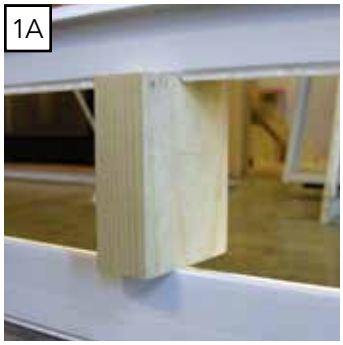

B. Measure the distance between the bottom sash check rail and sash stop. This will be the length used to cut the limited opening stop in step 1D.


C. Remove the wood block and close the sash.





D. Cut each limited opening stop to the length determined in step 1B. Measure from the end with the screw hole.

Note: Do not cut off the end with the hole.

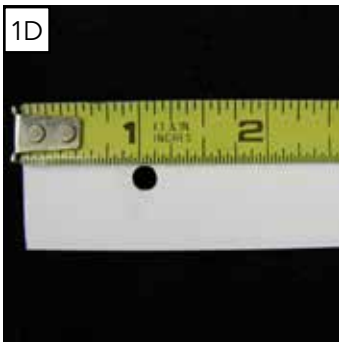

© 2015 Pella Corporation

Part Number: V986355


1 Limited Opening Stop Installation (Continued):

E. Insert the end of the limited opening stop without the screw hole into the balance channel on one frame jamb against the bottom of the sash stop. Place the screw hole end nearest to the check rail. Press the stop to snap fit it into place. A mallet can be helpful.

   Open the bottom sash against the stop to securely seat the stop up to the frame.





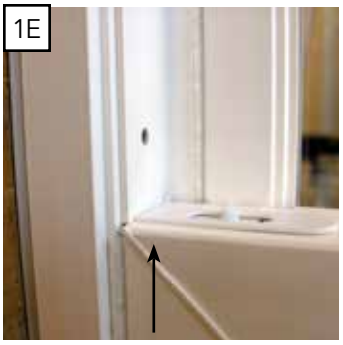

F. Being sure to avoid the balance cord, insert the provided screw into the hole to secure the stop to the frame.

Caution: To avoid screw spin out, Do not use a powered driver.

G. Repeat E & F on the other side of the window.

