Wood Sliding Patio Door Extension Mould

INSTALLATION INSTRUCTION

Kit Contents:

- Jamb extension boards (2)
- Head extension boards (1 or 2 depending on frame width)
- Attachment clips (32)

Tools Required:

- Pliers
- Staple gun
- 1/2" x 1/2" or 1/4" x 1/4" staples
- 1/4" x 1" staples
- Tape measure
- Rubber mallet
- Utility knife

REMEMBER TO USE APPROPRIATE PERSONAL PROTECTIVE EQUIPMENT.


1 Installing Head/Jamb Extensions:

NOTE: 3 extensions are provided (2 jamb extensions, 1 head extension). If the frame width is greater than 144" then 4 extensions are provided (2 jamb extensions., 2 head extensions.). Extensions come pre-cut to appropriate dimensions.

A. **Measure each extension mould** to ensure the parts are cut to the appropriate dimensions.

NOTE: The head extension length is the frame width minus 3/32". If frame width is greater than 144" then each head extensions is the frame width minus 3/32" divided by 2.

NOTE: The jamb extension length is the distance between the head extension mould and the bottom of the jamb, just above the sill.

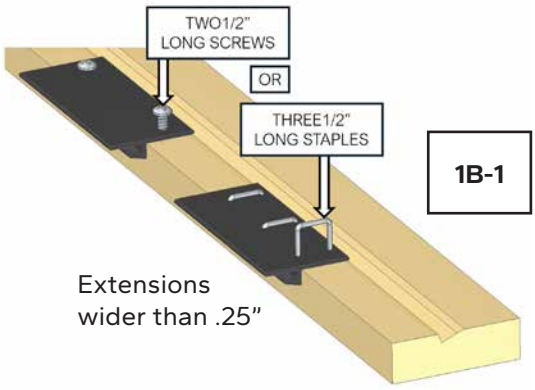


1B-1

B. **Install the attachment clips on each extension mould using three 1/2" staples or two 1/2" screws**. See figure (1B-1). Each extension receives 7 attachment clips.

NOTE: If installing extensions .25" or less in width, it is necessary to install the clips on the door frame prior to attaching the extension. See step G for aligning attachment clips to the accessory groove. Use 2 staples aligned with the accessory groove and through the clip as shown in figure (1B-2).

NOTE: When using screws, pre-drill the screw holes in the attachment clip. Only use screws on extensions wider than .50".

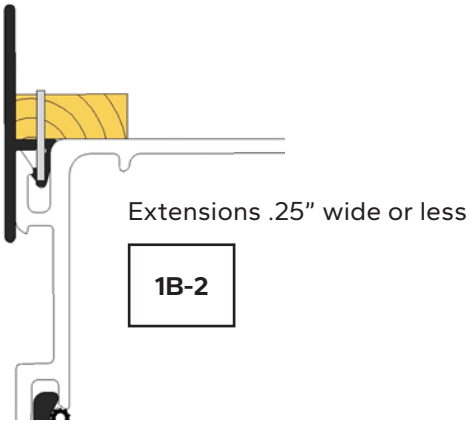

1B-2

© 2026

GIF-000003037-1 Part Number: 82PF0000


1 Installing Head/Jamb Extensions (continued):

C. **Install the first two attachment clips on each extension.** Place one attachment clip 3" from each end of the head/jamb extension.

D. **Install 5 more clips evenly spaced between the two end clips on each extension**.


E. **Cut excess part of clips extending past the extension mould** if jamb extensions are less than .75" wide.

F. **Locate and install the head extension(s)** on the head of the door frame.

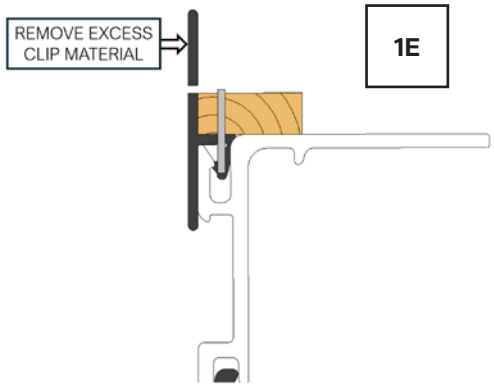

G. **Align the attachment clips with the accessory groove of the door frame.** Using a rubber mallet and a small wood block, tap the attachment clips into the accessory groove.

H. **Repeat steps F-G for the door jamb extensions.** Make sure each jamb extension fits tight against the head extension.

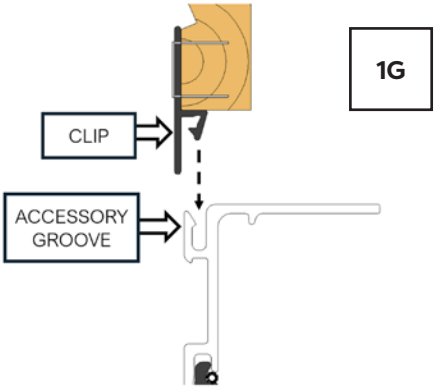

I. **Staple the corners of the jamb extensions together using 1" or 1-1/4" long staples**.

