INSTALLATION INSTRUCTION

Window Opening Control Device (WOCD) for Single-Hung

These instructions apply to:

Pella® 150 Series 2020 - Current
ThermaStar by Pella® 2015 - 01/2022
Encompass by Pella® 2015 - Current

Tool Required:

- Tape measure
- Wood block
- Phillips screwdriver

The window opening control device (WOCD) is designed to assist in protection against accidental falls by children five (5) years old and younger. When properly installed and engaged, there shall be no space at the maximum open position of a window sash which would permit a rigid 4" (102mm) diameter sphere to pass through the opening. Failure to correctly install and engage the WOCD may result in falls or injury. Window must be unlocked and the WOCD disengaged to allow for emergency exit. This window control device is not a substitute for attentive supervision of young children. Tested to ASTM F2090


⚠ WARNING!


Young Children may fall though an open window if all instructions are not followed:

- Leave the window opening control device safety information sheet with the building occupant or an appropriate person on the project to provide to the building occupant.
- Use recommended material and techniques.
- Make sure the window opening control device is securely attached to the window frame.
- Make sure the window is in good condition.
- Keep window opening control device engaged unless needed for use in an emergency.
- Teach household members six years and older how to operate the release mechanism in case of an emergency.

1 Window Opening Control Device Assembly:


A. Align two WOCD's and two jamb inserts in mirror image orientation.

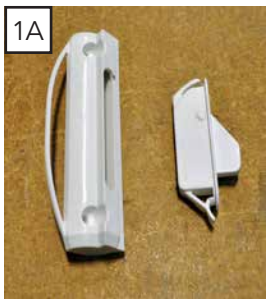


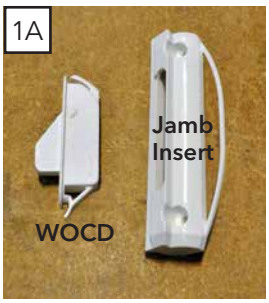



1 Window Opening Control Device Assembly (Continued):

B. Insert the WOCD into each jamb insert and press into place.

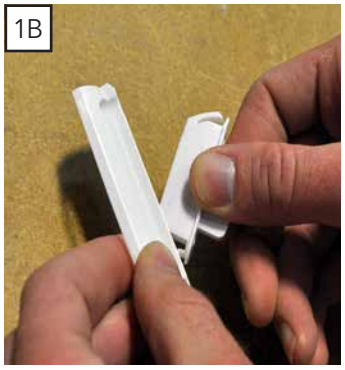

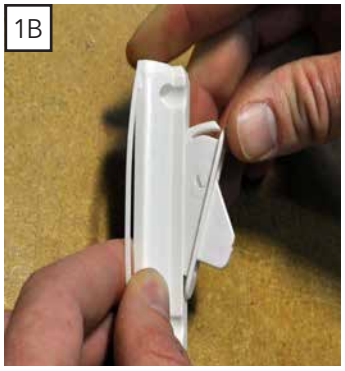

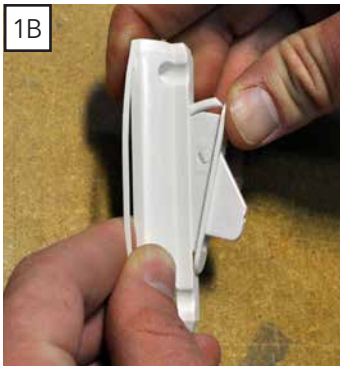

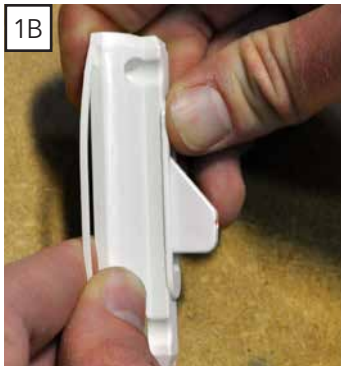






2 Window Opening Control Device Installation:

A. With the bow of the assembly toward the interior, insert the assembly into the balance pocket and snap it into place.





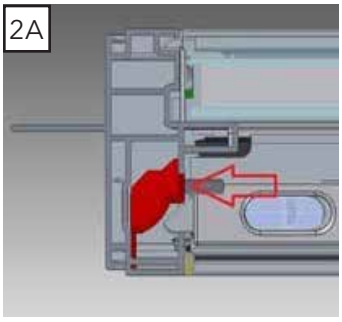

B. If needed, press the restrictor arm so it is in the fully extended position.





2 Window Opening Control Device Installation (continued):


C. Unlock the sash and raise the sash up against the WOCD restrictor arm. Measure the opening at the sill to make sure it is 3-3/4".

Tip: To make sure the opening is correct; cut a block of wood to 3-3/4" and place it on the sill, then close the lower sash on it.






D. Insert and tighten a provided #6 x 1" self-drilling screw in the top hole of the assembly.

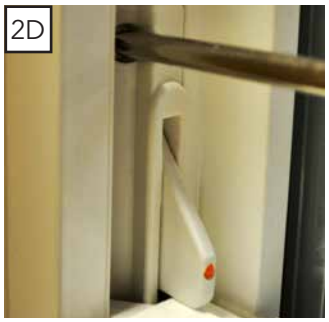

E. Lower the sash to expose the assembly bottom screw hole, insert and tighten the 2nd screw.



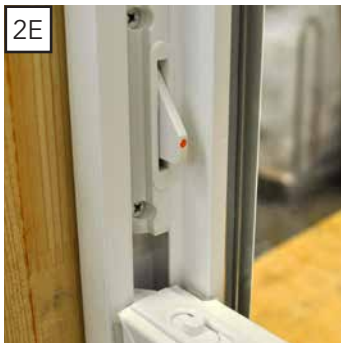


F. Repeat 2A – 2E on the opposite side of the frame.

3 Confirm Operation:

⚠ WARNING!

- Window opening control device should automatically re-engage when closing bottom sash.
- After activation of the window opening control device check for window openability.

A. Disengage the opening control device on each side of the window frame. Unlock and raise the lower sash.

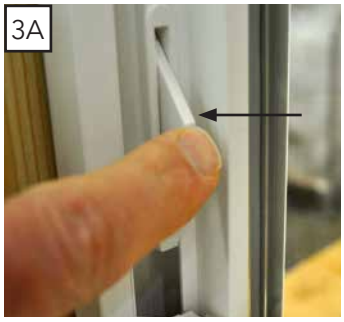





© 2015 Pella Corporation

3 Confirm Operation (continued):

B. When the lower sash moves past the opening control device, it will reset the restrictor arm.





C. With the restrictor arm reset, as the sash is lowered, the arm will extend and once again control the opening.





D. With the window control opening device engaged, the clear opening cannot exceed 3-3/4".

