Alternate for Kerfed Double Bulb Door Bottom-Composite

SERVICE INSTRUCTION

These instructions apply to:

Pella® Entry Door Model 2 01/2001 - 12/2011

Supplies needed:

- High quality silicone sealant

1 Install Sweep:


A. **Apply 2 beads of silicone caulking** to the top of the new sweep, one near each edge.

1A



B. **Press the new sweep onto the door bottom.** The alignment lip should rest flush against the interior door face. The sweep lays over the two kerfs. It does not insert into them. Wipe free any excess caulking. Attach the new sweep with ~3-5 staples or tacks to secure it in place.

1B

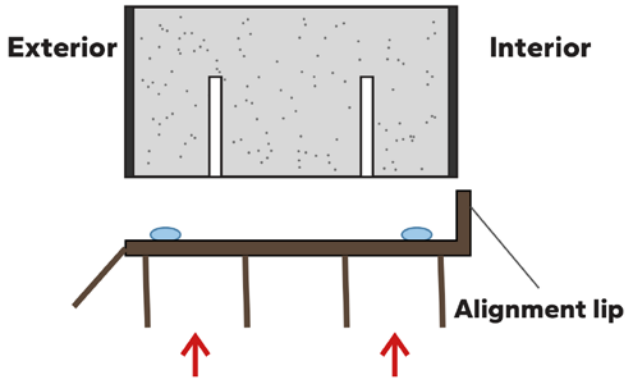

Note: The sweep lays over the two kerfs in the bottom rail. Nothing on the sweep inserts into the kerfs. The raised alignment lip goes on the interior side of the door.

