SERVICE INSTRUCTION

Door Lock Strike Replacement — Sliding Patio Door

Tools Required:

- #2 Phillips screwdriver

1 Lock Strike Replacement:

A. Unlock and open vent panel 6" - 10".





B. Remove the attachment screws and remove the strike.





1 Lock Strike Replacement (continued):


C. Insert strike and install the two screws in the slotted holes, but do not fully tighten.





D. Confirm the strike and lock align. If needed, adjust the lock strike up or down to align with vent panel lock.

Tighten the two screws when alignment is complete.

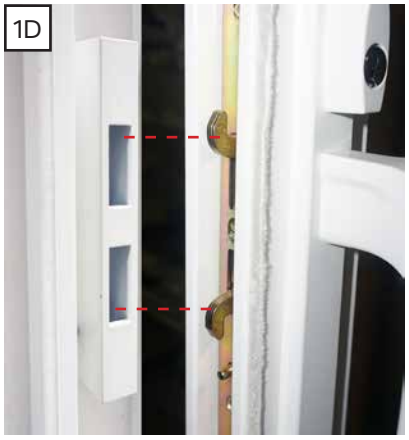

E. Install and tighten the remaining screws.



