




INSTALLATION INSTRUCTIONS FOR CIRCLEHEAD REMOVABLE GRILLES

CAUTION!

Grilles need to be handled with care. Excessive force may break them.

PACKAGE CONTENTS:

- Grille bars
- Grille tacks
- Tack insertion tool (wood block with groove)

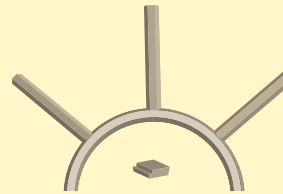


TOOLS REQUIRED:



- Pencil

1 REMOVABLE GRILLE INSTALLATION:

A. To determine where to insert the tacks, set the muntin bar into the window as shown.


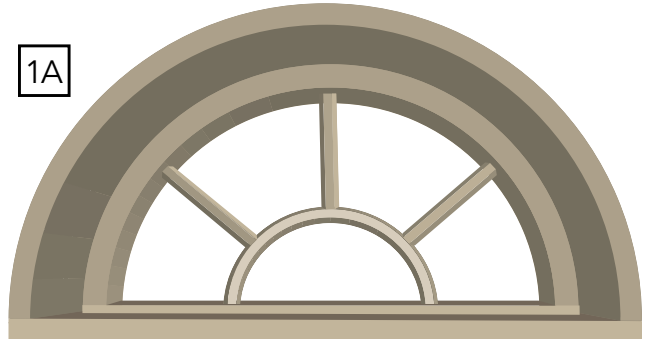


B. Center a light pencil mark off each grille bar which has an end clip - onto the wood glass stop.

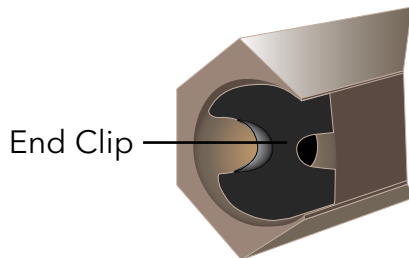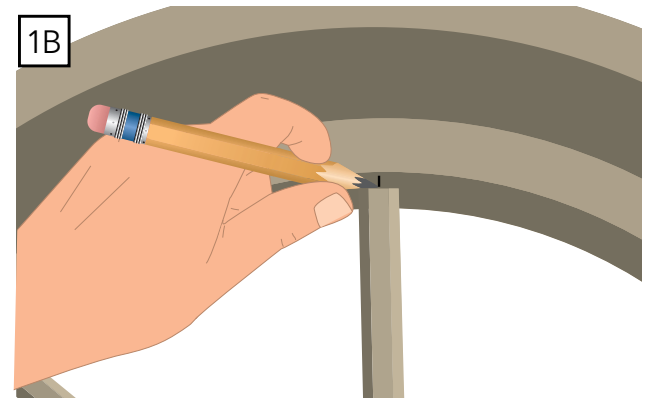


End Clip

C. Place a tack in the groove of the tool (wood block with groove) and hold it in place.

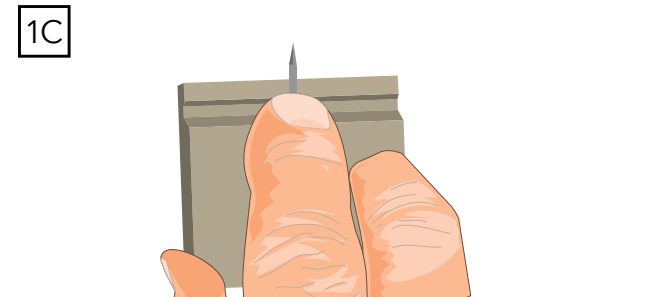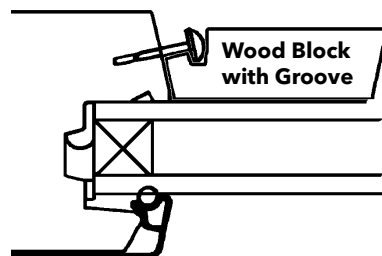

D. Using the tack insertion tool, locate the tack in-line with the pencil mark. Push the tack into the wood until it stops.


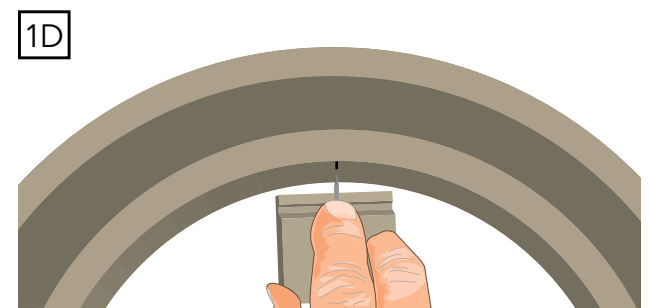


1 REMOVABLE GRILLE INSTALLATION (CONTINUED):

E. Slide the tack insertion tool (wood block with groove) sideways until clear of tack. Rotate tool to the opposite side (180°), and finish pressing the tack into glass stop until the head tack head is firmly against the wood.


Repeat steps 1C-1E for each pencil mark.

1E

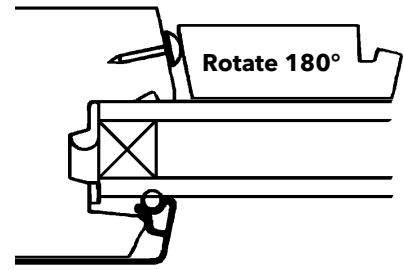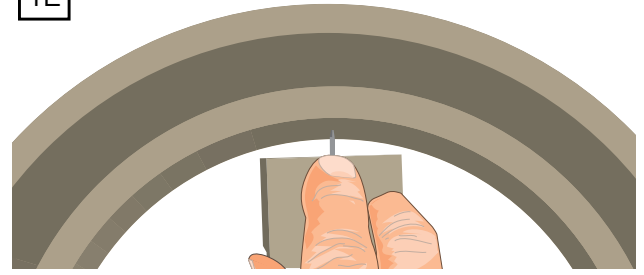


F. Install the grille into the window, bottom first.

1F

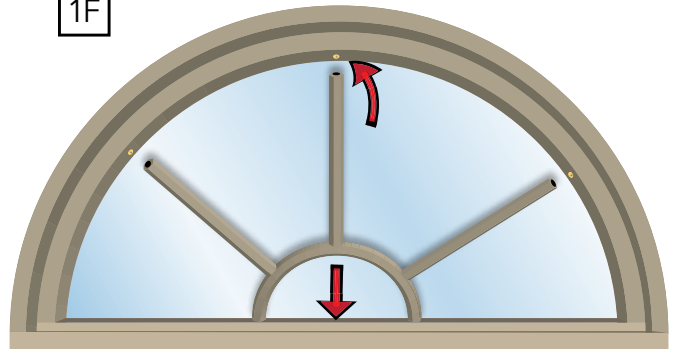

G. Secure grille bars by applying direct pressure to each end bar over the tack.

1G

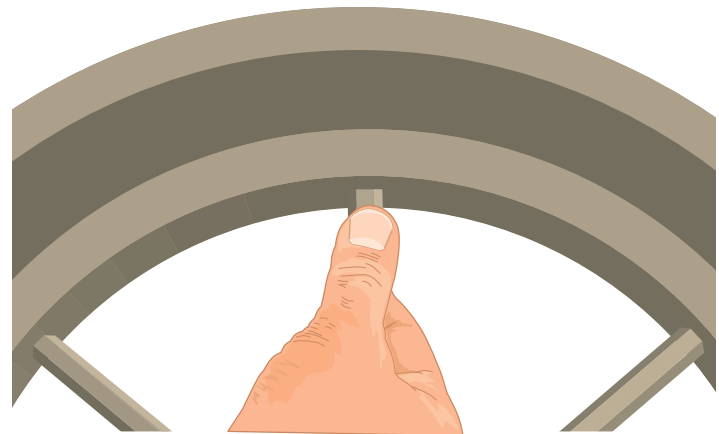

CAUTION!

Failure to put pressure on the grille bar directly over the tack could result in damage to the grille.