Pella® Lifestyle Series Dual-Pane - Sliding Door Screen
Malla de Puerta Corrediza Panel Doble de la Serie Lifestyle de Pella®

Installation Instruction – Instrucciones de Instalación

Parts Included:

- Screen Door
- Screen mounting screws (2)

Tools Required:



- #2 Phillips head screwdriver

IMPORTANT:
Read thoroughly before beginning. Failure to install as recommended will void any warranty, express or implied.

NOTE: Pella recommends finishing the interior of the screen prior to installation. For finishing instructions, refer to the Pella Owners Manual or maintenance tips on ***www.pella.com***

NOTE: Determine if Model 3 or Model 4 using chart.

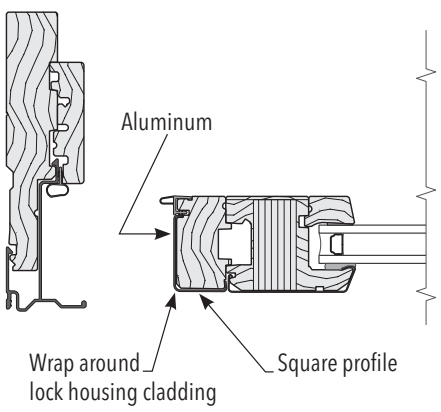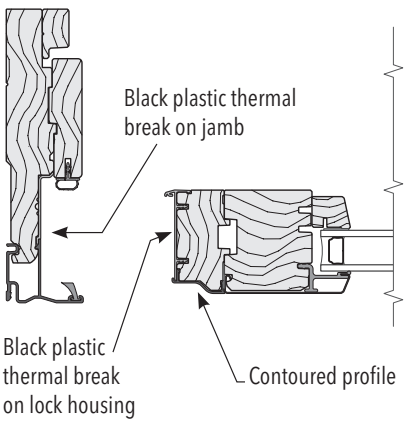

Pella® Lifestyle Series Dual-Pane Sliding Door	Model 3 (Carroll)	Model 4 (Pella)
Vent Panel Thickness	1-7/8" Thick	2-1/8" Thick
Vintage Date	1997 - Current	May 2016 - Current
Configurations	**2 Panel ONLY IF:** - Not 8' Height - No 83.25" Width - No SDL - No SDL/Spacer - No Rolscreen - No Insynctive Sensors - No STC Glass - No Frosted Glass	**1 Panel** **3 Panel** **4 Panel** **2 Panel ONLY IF:** - 8' Height - 83.25" Frame Width (84" Call Width) - SDL - SDL with Spacer - Rolscreen - Insynctive Sensors - STC Glass - Frosted Glass
Panel Edge Profile	Square With No Black Plastic	Contoured With Black Plastic
Frame	Standard Frame 	Thermally Broken 
Cross Section		
Lock Type Included	1 Point Lock	2 Point Condensed Lock

1 Removing and Installing the Screen:

A. Set the screen door into the door frame by first inserting the bottom leaf into the groove in the sill. Rotate the screen flat against the door panel.


B. Align the mounting screws with the holes in the screen carrier and start each mounting screw approximately two turns.

C. Adjust the two mounting screws (by tightening or loosening) so that the screen meets the door frame squarely (even gap from top to bottom between the screen and frame). Turn clockwise to tighten and counter-clockwise to loosen.


Note: Do not over tighten or the screen will not slide properly.

D. When viewed from the exterior, the insect strip pile at the top of the screen door should make contact with the screen track. If not, adjust the mounting screws up equally until the insect strip pile touches the screen track.

1A

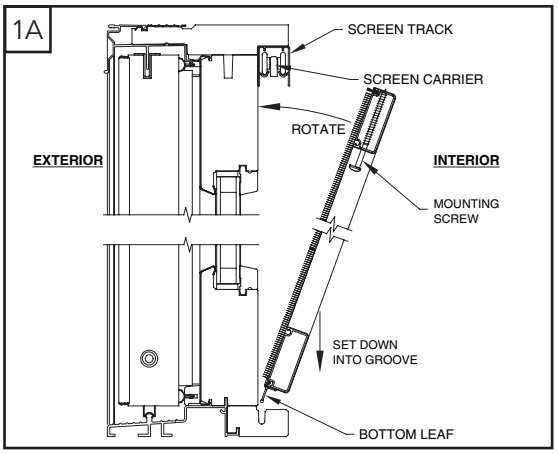

1D

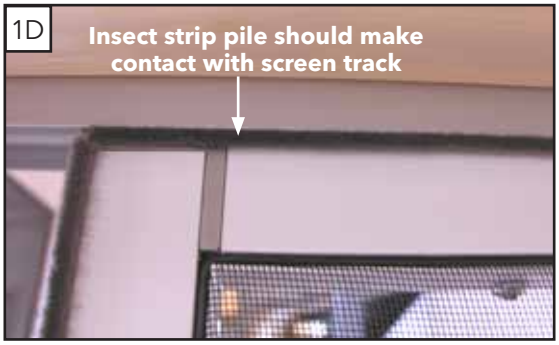

2 Screen Strike Replacement (if required):

A. Check the screen strike design. If the strike on the door is a 09/2003 - 11/2005 design, replace with the 12/2005 - Current design.

2A **Model 4 - Vintage: Pella® Lifestyle Series Dual-Pane 04/2019 - Current 05/2016 - 03/2019**



2A **Model 3 - Vintage: Pella® Lifestyle Series Dual-Pane 04/2019 - Current 12/2005 - 03/2019**



2A **Vintage: 09/2003 - 11/2005**



B. If the strike needs to be replaced, use a #2 Phillips head screwdriver to remove the two strike screws and remove the strike.

C. Hold the strike against the door frame. Align the strike screw holes with the existing holes in the door frame. Ensure that the open portion of the hook is toward the exterior of the door.

D. Insert the two strike screws to attach the strike to the door frame.

2D



© 2019 Pella Corporation