Pella® Scenescape™ Multi-Slide Door Flush Handle Assembly & Installation Instruction

Parts List:

- Interior handle
- Exterior Handle
- Plastic gasket
- Key cylinder
- Cylinder housing
- Cylinder clip
- Retaining washer
- Cylinder Housing attachment screws
- Handle attachment screws



Tools List:

- Flat blade screwdriver
- Phillips screwdriver



1 HARDWARE ASSEMBLY:

A. Insert the key cylinder into the cylinder housing, aligning with the grooves in the housing. Secure into the housing with cylinder clip.







B. Position the exterior hardware handle plate so the cylinder hole is up. Insert the assembly, correctly orienting the "UP" arrow. Install the 4 attachment screws.







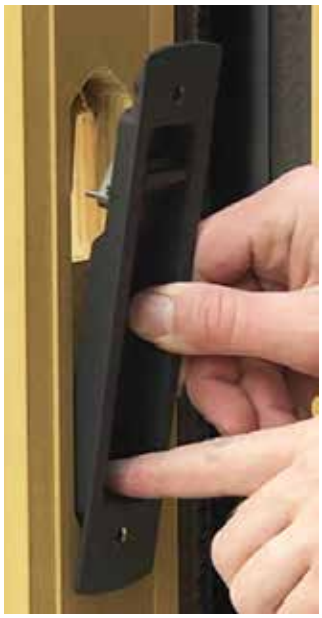
© 2019 Pella Corporation

GIF-000002177 Part Number: 828M0000

1 HARDWARE ASSEMBLY (CONTIUED):

C. Keep the thumb turn horizontal with the "V" on the back side of the handle plate upside down (^). Place interior Handle onto interior side of panel.





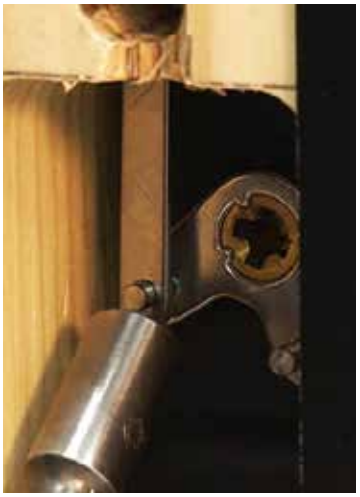

D. From the exterior side of the panel, align the lock handle pin closest to the lock strike with the hole in the lock link already installed in the panel and position the hole on the pin.




1 HARDWARE ASSEMBLY (CONTIUED):

E. Place the retaining washer on a magnetic 1/4" drive socket and install the retaining washer onto the lock handle pin to hold the lock link into place.







F. Install the plastic housing into the exterior handle cavity. With the tail shaft of the exterior handle assembly horizontal, insert exterior handle assembly into the panel and align the key cylinder tail shaft with the interior handle key way.







G. With both the interior and exterior flush handle plates snug against the panel, install the two handle screws. Check for operation. If thumbturn does not engage easily, remove exterior handle and rotate the cylinder tail shaft 180 degrees and re-install.





© 2019 Pella Corporation